

Pivot Motor Clipper Instruction Manual

• For Commercial Use Only •

For Model Numbers:

76023

76830

76956

78033

78733

Oster
Professional Products

IMPORTANT SAFEGUARDS

Commercial Clipper

When using an electrical appliance, basic precautions should always be followed, including the following: Read all Instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Always unplug this appliance from the electrical outlet immediately after using.
6. Unplug this appliance before cleaning, putting on or taking off parts.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when it is plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep cord away from heated surfaces.
6. Never operate the appliance when air openings are blocked or while on a soft surface (such as a bed or couch).
7. Never drop or insert any object into opening.
8. Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.
9. Do not use this appliance with a damaged or broken comb or blade, as cut or scratched skin may occur.
10. To disconnect, move all controls to "OFF", then remove plug from outlet.
11. Do not wrap cord around unit when storing. Continuous stress on the cord can damage cord insulation and result in a shock hazard.
12. Avoid contact with moving blades.
13. Avoid tangling or kinking the cord while clipping. Should the cord become tangled or kinked, stop clipping and straighten the cord.
14. This appliance is for trimming purpose use only.
15. Keep the appliance dry.
16. The intended continuous operating time is 20 minutes.
17. During use, do not place or leave the appliance where it is expected to:
 - 1) subject to damage by animal, or
 - 2) exposed to weather.

SAVE THESE INSTRUCTIONS

DO NOT USE THIS CLIPPER UNTIL YOU HAVE READ THESE OPERATING INSTRUCTIONS

OPERATING INSTRUCTIONS SAVE THESE INSTRUCTIONS

OPERATE ON VOLTAGE SPECIFIED ON CLIPPER

THE FOLLOWING PARAGRAPH IS FOR 120-VOLT MARKETS ONLY

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits a polarized outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature and change it in any way.

For service, please contact:

Oster Direct® Services
150 Cadillac Lane, McMinnville, TN 37110
(800) 830-3678
or an Authorized Service Center

WWW.OSTERSTYLE.COM
WWW.OSTERPRO.COM

Oster
Professional Products

©2007 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions Boca Raton, FL 33431. Printed in China

ABOUT THIS CLIPPER


Clipper Operation

1. Remove the blade guard from the unit which is covering the teeth of the blades.
2. Disperse a few drops of Oster® Premium Lubricating Oil across the blades. Wipe off excess with a clean, dry cloth.
3. Clean clippings from the blades using the cleaning brush. Wipe the housing with a clean, dry cloth.
4. Before replacing the blade guard for storage, spread one or two drops of Oster® Premium Lubricating Oil over the blades to prevent rusting.


Adjustable Clippers

Not all clippers have an adjustable blade. If you have a deluxe adjustable clipper, the following instructions apply to your clipper. The adjustable clippers have a blade that enables you to cut hair at various lengths.

To adjust: Move thumb blade adjustment lever down for coarse (B) cutting and up for fine (A) cutting.

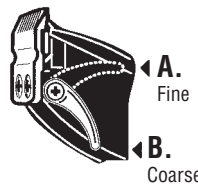


After continued use, the top and bottom blades may wear out. Replacement blades are available through your nearest Authorized Service Station. To remove the blades, unplug the clipper from the electric outlet. Lay the unit upside down on a flat, dry surface. Remove the two screws located in the bottom of the blade. To replace blades, put the new top blade into position on the clipper head. Make sure the adjustment lever is pushed downward. Line up the new bottom blade so that the screw holes in the bottom blade are directly over the two center screw holes in the mounting plate. Replace the screws. Before tightening the screws adjust the position of the blades so that the top blade is 1/32" back from and is parallel to the front edge of the bottom blade. The blades should also be even on each side. Tighten screws firmly.

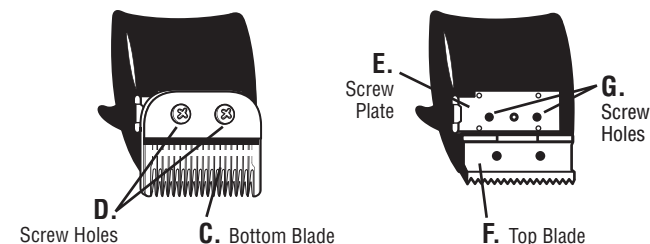

Detachable Blade Clippers Removing or Replacing Blades

TO REMOVE:
IMPORTANT! STOP MOTOR; lift blade away from clipper and slide off tongue.

TO REPLACE:
Turn motor on; insert blade on tongue fully then snap blade into place.

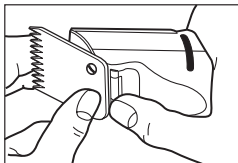

Blade Sharpening

Oster® cutting blades are of individual hollow-ground design, hardened to extend cutting life. As with any cutting instrument, the cutting edges will become dull with usage. Increasing blade tension to force dull blades to cut can cause the clipper to heat and reduce motor life, and further shorten blade life. When the cutting blades no longer cut smooth and clean, sharpening is necessary.

When sharpening blades becomes necessary, send blades to an Authorized Service Center where approved methods, equipment and proper knowledge are used to restore the original hollow-ground design and best cutting ability. Sharpening blades by flat grinding or any method contrary to the design and construction of Oster® cutting blades is not recommended.

Lubricating the Blades

A light film of oil should be maintained on the surface of the cutting blades. Oiling the blades frequently while in use will help keep the blades cleaner. Clean blades cut better. To clean blades, dip the teeth into Oster® Blade Wash® cleaner with the clipper running. DO NOT IMMERSER THE CLIPPER. Remove from the mixture and, while holding the clipper with the blade end down, wipe the blades dry with a clean, dry cloth. Re-oil blades.

Maintenance and Storage

NOTE: Any other maintenance not explained in this manual should be performed by an Authorized Service Center. To store unit, coil and secure cord and place in original carton.

Using The Attachments:

Plastic combs for attachment to clippers and trimmer blades are included with some kits. This plastic comb serves as a clipping guide so that the hair is not clipped short. The comb attachment is grooved to fit snugly over the blades. When attaching the comb to the clipper, slide the comb down firmly as far as it will go. Make sure the comb is seated securely against the lower blade. To disengage the comb, pull and slide the comb upward until it is off the clipper. Replacement combs are not covered under warranty.



When using or cleaning this clipper, do not use any aerosol sprays or blade washes, especially those containing methylene chloride, dimethyl benzyl ammonium chloride, or 1-1-1 trichloroethylene. Damage caused by these chemicals will void your warranty. You may use Oster® Blade Wash®, Oster® Blade Lube™ and Oster® 5 in 1™ Clipper Blade Care which do not harm the product.

How to Obtain Warranty Service



Or an Authorized Service Center

Send this product to our Oster Direct® service center located at 150 Cadillac Lane, McMinnville, TN 37110-8653 U.S.A. or to an authorized service center for Oster® Professional Products as indicated below:

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

When sending the product to the service center:

- Fill out and attach the Service Information Form (found at the end of this manual) to the Product.
- If returning a clipper, include blades.
- When ordering parts, please specify the model number and series letter indicated on your product.
- Include a copy of the original sales receipt.
- Carefully package the product and send either mail or courier with shipping and insurance prepaid to the service center.

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. DO NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, doing business as Jarden Consumer Solutions located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

©2007 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All Rights Reserved. Distributed by: Sunbeam Products, Inc. doing business as Jarden Consumer Solutions Boca Raton, FL 33431. 1-800-557-4825. Printed in China