

HUBL1 Quick Open Hunting Tent

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

This manual provides important information on proper operation and maintenance. Every effort has been made to ensure the accuracy of this manual. We reserve the right to change this product at any time without prior notice.

STOP! CONTACT CUSTOMER SERVICE WITH QUESTIONS OR PROBLEMS.

DO NOT RETURN THIS PRODUCT TO THE RETAILER.

If you experience a problem or need parts for this product, visit our website <http://www.buffalotools.com> or call our customer help line at **1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time**. A copy of the sales receipt is required.

WARNING

SHELTER: KEEP SHELTER FABRIC AWAY FROM ALL FLAMES AND HEAT SOURCES.

This shelter fabric meets CPAI-84 (SOR/90-245 in Canada) fire resistance specifications. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective. This fabric is not fire proof. Fabric will burn if left in contact with a continuous source of flame. The application of any foreign substance may cause ineffectiveness of the flame resistant properties.

The tent fabric is not fireproof. The fabric will burn if left in continuous contact with a flame source. The following precautions should be taken when using this blind:

- DO NOT use candles, matches or open flames of any kind in or near a blind.
- DO NOT cook inside a tent or use any device that omits carbon monoxide.
- Exercise extreme caution when using fuel powered lanterns or heaters inside a tent. Use battery-operated lanterns when possible. Some lanterns & heaters emit carbon monoxide, which can be fatal.
- DO NOT refuel lamps, heaters or stoves inside a tent.
- Extinguish or turn off all lanterns before going to sleep.
- DO NOT smoke in a tent.
- DO NOT store flammable liquids inside a tent.
- While fires anywhere near a tent are discouraged, if you do build a fire, make sure the fire is downwind and 25 feet or more away from the tent. Be sure to fully extinguish all fires before retiring for the night or leaving the immediate area.
- DO NOT use a firearm of any type with "shoot through" mesh, as the mesh fabric can burn due to firearm discharge.

FIBER CONTENT: 100% Polyester

ASSEMBLY

- Remove the Hunting Tent from the Storage bag and grab one of the support rings.
- The Tent will naturally unfold itself.
- Position the Hunting Tent away from fire source and secure with stakes.
- You may choose to secure with stakes, but you do not always have to secure all sides of the Hunting Tent, depending on the amount of wind and preferred rigidity.
- Excessive tension may damage the frame.

Take Down & Storage

- Do not store the Hunting Tent while wet.
- Close all windows and the door before storing.
- Remove all ground stakes and brush off all dirt and debris.
- Lay the tent FLAT on the ground and grab the BOTTOM of the tent.
- ROLL the BOTTOM of the Tent towards the TOP to create a “U” shape.
- Gently rotate the TOP and fold the Tent until it forms a circle.
- Store the Tent inside the storage case, along with the stakes and tie downs.
- Do not leave tent outdoors for an extended period of time.