




User Guide

ECA806N-800 (800W,18L)

SKU No.:1056780



PARTS DIAGRAM

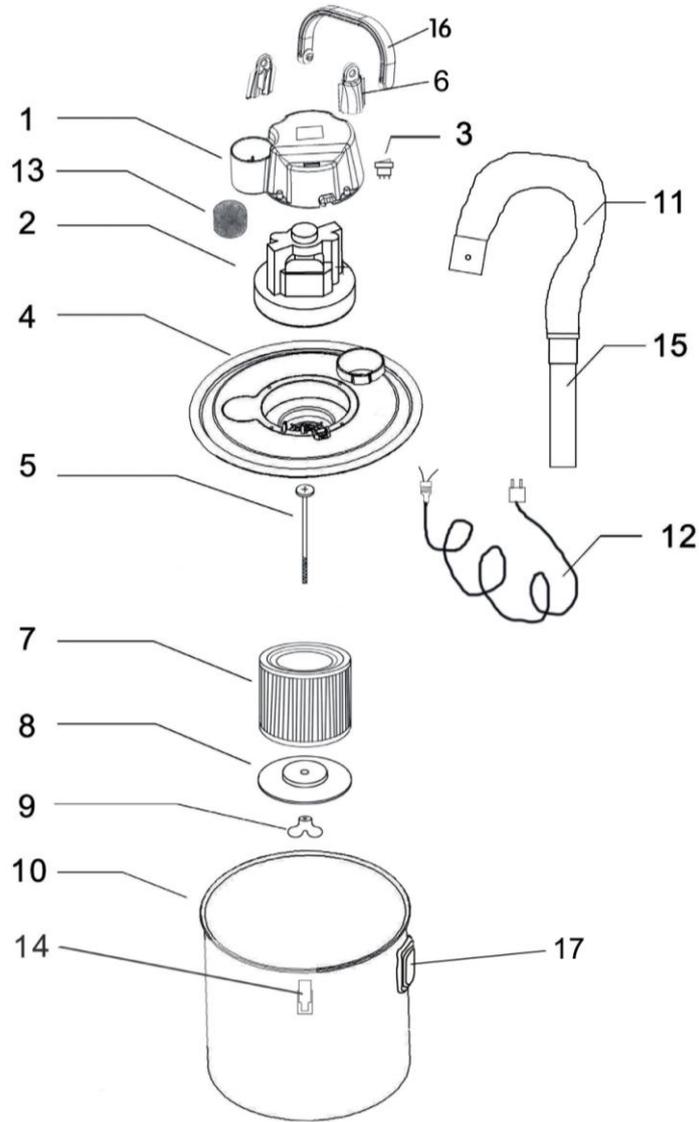


- 1. Motor cover
- 2. Motor
- 3. Switch
- 4. Motor base cover
- 5. Long screw
- 6. Handle base
- 7. Cartridge filter
- 8. Filter lid

- 9. Wing nut
- 10. Tank
- 11. Metal hose
- 12. Power cord
- 13. Outlet spong filter
- 14. Clips
- 15. Aluminium tube
- 16. Wing nut
- 17. Suction mouth


ASSEMBLY INSTRUCTIONS

- A. Always remove the plug from the power socket before fitting or removing accessories.
- B. Remove all accessories from the tank of the vacuum.
- C. Fit the nozzle on the pickup end of hose.
- D. Insert hose into the air intake on the tank of vacuum.

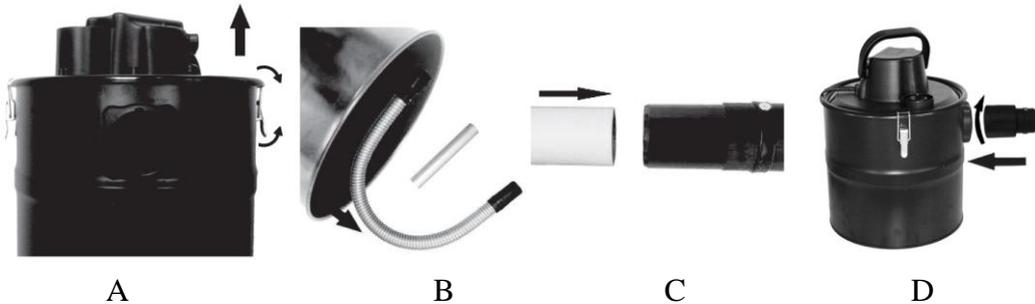

INSTRUCTIONS FOR USE

- E. Insert the plug into the outlet.
- F. Press the on/off button to switch the appliance on.
- G. Place the end of aluminium tube directly on the surface to be vacuumed and move in a circular motion to collect ash.

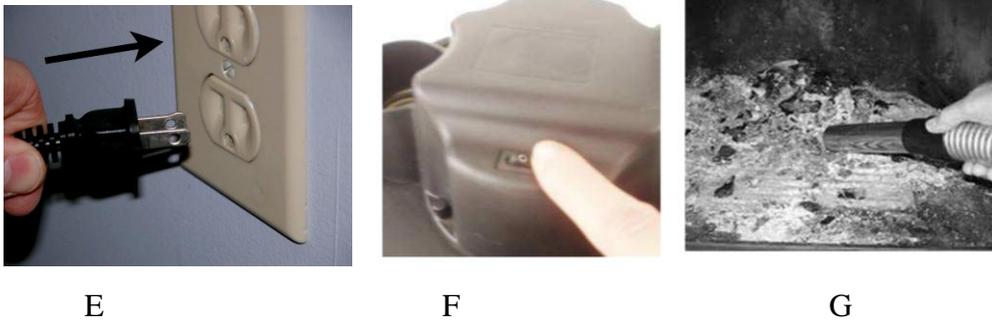


- H. When finished cleaning, turn switch to off position.
- I. Remove the plug from the wall outlet.
- J. To empty the container, pull the metal hose out of the hose connector.
- K. Properly dispose of ash and dirt from the vacuum container in a trash can.



MAINTENANCE INSTRUCTIONS

1. Remove the lid from the vacuum and unscrew the filter wing nut on the top of the filter housing.
2. Remove the wing nut and remove filter lid.
3. Remove filter and clean by running water through the filter from the inside out.
4. Reinstall the filter securely onto the vacuum lid.
5. Replace filter lid.
6. Put the wing nut back on to secure the filter.
7. Place the lid on the vacuum can and secure the latch in locking mode.

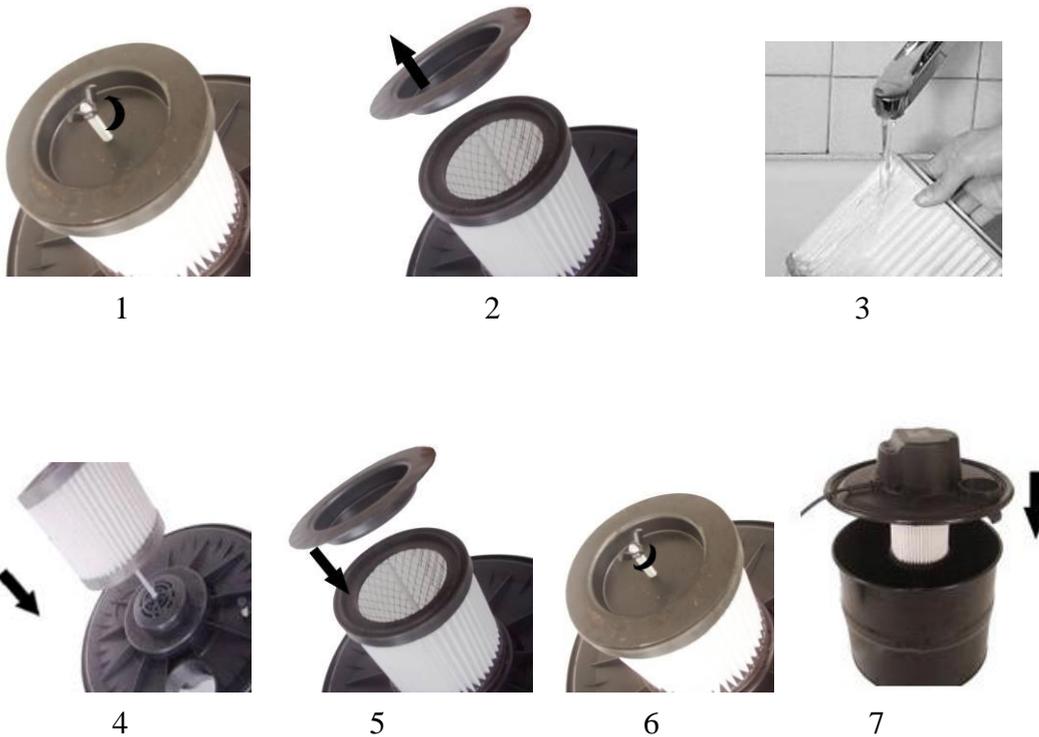

NOTE:

- Filter should be cleaned at least twice a month or when it becomes visible soiled.
- Always operate the cleaner with filter installed. Otherwise, you may experience reduced suction and the motor may be damaged.
- Disconnect from electrical outlet before cleaning filter.
- When cleaning the filter, never place the filter into a washing machine.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

WARNING - To reduce the risk of fire, electric shock, or injury:

1. Do not leave vacuum cleaner when plugged in. Unplug from outlet when not in use and before servicing.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
3. This is not a toy. Keep out of reach of children.
4. Use only as described in this manual. Use only manufacturer recommended.
5. Do not use with damaged cord or plug. If vacuum cleaner is not working as it should inspect to see if it, has been dropped, damaged, left outdoors, or dropped into water. If so, take it to a service center for repair.
6. Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or vacuum cleaner with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair or anything that may reduce airflow.
10. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging.
12. Use extra care when cleaning on stairs.
13. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
14. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
15. Unplug before connecting the hose.
16. Do not pick up anything that is burning or smoking, such as cigarettes or matches.
17. Do not use without dust bag and / or filter in place.
18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
19. Do not operate the vacuum cleaner too close to heater. Before you insert the plug into the receptacle, ensure your hand is dry.

WARNING - To reduce the risk of electric shock, this vacuum cleaner has a polarized plug. This plug will fit in a polarized outlet only one way. If the plug does not fit securely in the outlet, reverse the plug. **If it still does not fit, contract a qualified electrician to install the proper outlet. Do not alter the plug in any way.**

PRECAUTIONARY MEASURES

If the suction pipe is blocked, switch off the vacuum cleaner and clear the blocked substance before attempting to start the vacuum cleaner again.

SAVE THESE INSTRUCTIONS

Technical data

Model:	ECA806N-800
Voltage (V)	120
Frequency (Hz)	60
Motor power (W)	800
Vacuum cleaner (Kpa)	17
Noise (dB)	<84

Distributed by:
TRACTOR SUPPLY COMPANY
200 POWELL PLACE
BRENTWOOD, TN 37027
For customer support,
Call: 1-888-376-9601
www.TractorSupply.com
MADE IN CHINA