



POWER BANK MAX

Instruction Manual - Item #: 80052

Keep your devices charged while on the go with this 5200mAh capacity portable power bank battery. With this power bank device you will enjoy instant charging capabilities and instant power for any USB powered device. It has LED indicator lights so you know when your power bank is charged, normal, or in need of a recharge. The compact design easily fits in your pocket so you won't have to worry about preserving battery power when you're out and about.



Product Accessory

Micro USB Connector

Features

- **5200 mah capacity**
- **Comes with a micro-USB cable**
- **Compact size, durable**
- **1 USB charging port**
- **Output: 5V / 2.1A**
- **Includes integrated Flashlight**
- **LED charge indicator**
- **Light weight and compact**

Maintenance

To keep your Power Bank MAX operating to its fullest potential, make sure to do the following:

- Re-charge your Power Bank MAX when not in use.
- Keep your Power Bank Mini dry and away from moisture and corrosive materials.
- Do not wash the Power bank MAX with harsh chemicals, soaps, or detergents.

Warranty

We are dedicated to making the best quality products. The Power Bank MAX is warranted for 1 year from the date of purchase.

Warning

Read all instructions and warnings prior to using this product. Improper use of this product may result in damage, excess heat, toxic fumes, fire or explosion, for which you (purchaser) and not manufacturer are responsible.

- Do not store battery in high temperature environment, including intense sunlight heat. Do not place battery in fire or excessively hot environments.
- Be cautious of excessive drops, bumps, abrasions or other impurities. If there is any damage to the battery such as punctures, dents, tears, deformities or corrosion, due to any cause, discontinue use and contact manufacture or dispose of it in an appropriate manner.
- Do not disassemble this battery or attempt to repair or modify it.
- Do not expose this battery to moisture or submerge it in liquid at all times.
- Do not attempt to replace any part of this battery.
- If this battery is intended by purchase to be used by a minor, an adult should agree to provide detailed instructions and warnings to any minor prior to use. Failure to do so is sole responsibility of purchaser, who agrees to indemnify manufacturer for any unintended use of misuse of minor.
- All batteries have gone through a thorough quality assurance. If you find that our battery is excessively hot, is emitting odor, is deformed, abraded, cut or is experiencing or demarcating an abnormal phenomenon, immediately stop all battery use.
- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under the state and environmental laws and regulations. Always take used batteries to your local battery recycling center.

The Powerbank MAX is meant for use only in conjunction with appropriate mobile entertainment device.

Manufacture shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this battery in conjunction with any device or accessory other than the appropriate mobile entertainment device for which battery is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of this battery as outlined above. If you are responsible for battery use with an unintended mobile entertainment device and damages result from such use, you agree to indemnify manufacturer for any resulting injuries to any third part(ies).

COMPETITION POWER

**For more information:
Please contact Manufacturer:
1-800-588-0590**