



EasySport Harness


Fitting instructions

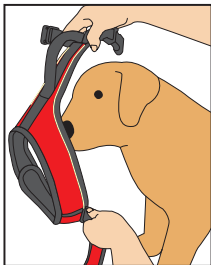


Open quick-release buckles on the girth strap and slide harness over dog's head.

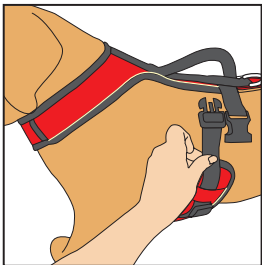

Adjust girth strap for proper fit. No more than two fingers should fit between the dog and the harness.

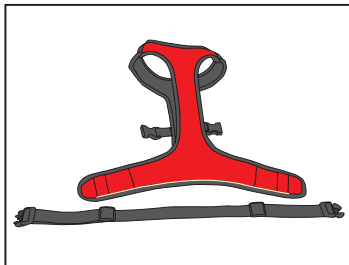

Girth strap can be removed from harness for even adjustment. Once adjusted, slide girth strap back into the harness.

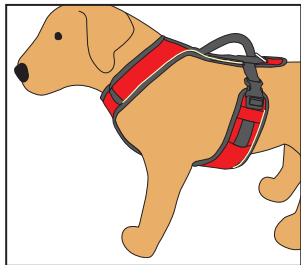

Snap quick-release buckles, attach leash and go for a walk!