



INSTRUCTIONS

OUTFITTER SERIES ULTRA HIGH OUTPUT PROPANE STOVE

ITEM #212



WARNING:

Propane gas is highly flammable and under pressure in the cylinder. Do Not store or use gasoline or other flammable liquids or vapors in the vicinity of this stove. If you detect the odor of gas, immediately evacuate the enclosed area and contact the appropriate authorities/professionals.

SET UP/ OPERATING/ STORAGE INSTRUCTIONS

PREPARING THE STOVE

1. Place the stove on a flat, level, sturdy surface.
2. Open the lid and align the holes in the windshield with tabs on inside of lid, snap into place.
3. Make sure burners are in the off position.
4. Push regulator assembly firmly into stove. Tighten nut securely.
5. Screw propane cylinder into the regulator.

OPERATING THE STOVE

1. Turn the burner valve on and press the red igniter button until the burner lights.
2. Adjust the flame to the desired height. Flame should be compact and blue in color.
3. Avoid getting dirt into valves, regulator, and burners.
4. To shut burner off, turn the valve to off. (clockwise).

CLEANING YOUR STOVE

1. Allow the grate and burner to cool.
2. Remove grate from the stove.
3. Wash drip pan and grate with soapy cloth. Do not use abrasive materials.

STORING YOUR STOVE

1. **DO NOT** leave propane cylinder attached to stove while not in use.
2. Remove the cylinder, allow the stove to cool, and store regulator under the grate.
3. Unlock the windshield and fold down.
4. Close the lid and latch.



INSTRUCTIONS

OUTFITTER SERIES ULTRA HIGH OUTPUT PROPANE STOVE

PLEASE READ CAREFULLY TO ENSURE YOUR SAFETY:

FOR OUTDOOR USE ONLY

- 1) Read and follow all instructions.
- 2) When used in an enclosed area, allow for ample ventilation.
- 3) Do not expose the propane cylinder to excessive heat.
- 4) Always inspect the stove, propane cylinder and connectors for damage, debris or dirt before attaching the cylinder to the stove.
- 5) Always attach/detach the propane cylinder away from any open flame or pilot light and only after the stove has cooled.
- 6) Always inspect the burner holes for obstructions prior to operation. Do not operate if any blockage is found.
- 7) Do not use or operate if either the stove or propane cylinder is found to be damaged.
- 8) Always disconnect the propane cylinder when not in use and/or transporting. Store in and upright position and in a cool, well ventilated area.
- 9) Be sure to tightly secure all connections to the propane cylinder prior to usage.
- 10) Absolutely never operate the stove near any flammable liquids or vapors and keep all flammable or combustible materials beyond the clearance zone as indicated on the back panel.
- 11) Discontinue operation and close valve if:
 - Ambient temperature drops below-10°F.
 - There is no fuel remaining in the propane cylinder.
 - Lighting cannot be performed quickly and easily.
 - Combustion becomes unstable or there are repeated flame-outs.
- 12) Absolutely do not use as a space heater, for illumination or in a tent.
- 13) Keep out of the reach of children.

CONNECTING TO DISPOSABLE PROPANE CYLINDERS

- Use only 16.4 oz propane cylinders approved by the U.S. Department of Transportation.
- Make sure the stove burner valves are closed.
- Connect the brass supply tube and regulator assembly to the stove.
- Connect the disposable propane cylinder to the brass supply tube and regulator assembly.
- Apply soapy water to check for leakage (leaking gas bubbles will form bubbles).
- Open stove burner valve and press the red Piezo igniter button.
- Adjust flame to desired level.

CONNECTING TO BULK PROPANE TANKS

- Use with currently approved propane bulk tanks only.
- Connect brass fuel supply tube and regulator assembly directly to the stove.
- Connect brass fuel supply tube and regulator assembly to the bulk tank using Stansport #190 propane hose.
- If using a propane distribution post, you will need Stansport propane hose # 193-5.
- Apply soapy water to the connections to check for leakage. (leaking gas bubbles will form bubbles).
- Adjust flame to desired level.

WARNING

- **FOR OUTDOOR USE ONLY.**
- Supply plenty of fresh air when using the campstove. Do not obstruct the flow of combustion air or ventilation air.
- Do not use as a space heater.
- Stove produce heat. Keep stove away from burnable materials. Do not place the stove any closer than 24" to combustibles.
- Use a flat, level support surface where the stove is safe from accidental tipping.
- Use only 14.7 or 16.4 oz. propane cylinders marked per USDOT-39 or TC CAN/CSA B339 standards.
- Use only with propane fuel
- Use only the 16 psi regulator included with your stove. Do not attempt to alter.

CAUTION

PROPANE FUEL IS HIGHLY FLAMMABLE AND UNDER PRESSURE.

Do not store in temperatures over 120°F.

Never use a flame to check for leaks. Use soapy water.

Keep out of the reach of children at all times.


FOR YOUR SAFETY: IF YOU SMELL GAS:

1. Do Not attempt to light appliance
2. Extinguish any open flame
3. Disconnect from fuel supply

FOR YOUR SAFETY:

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

⚠ DANGER

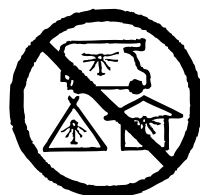

CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.