




## Handheld Metal Detector

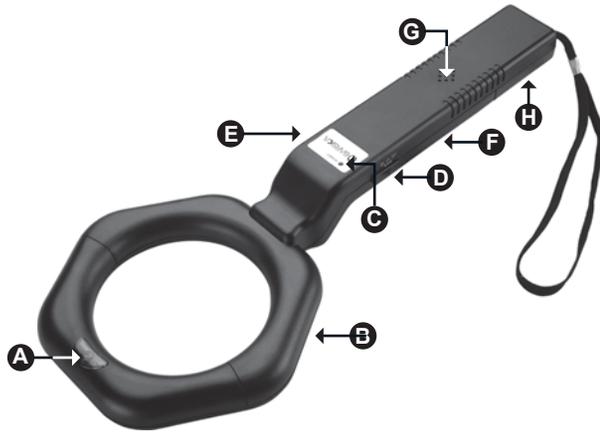

- |                               |   |
|-------------------------------|---|
| A. Red LED Visual Alert       | H. Battery Compartment and Cover (located under the handle) |
| B. Search Coil                |   |
| C. Green LED On/Off Indicator |   |
| D. Control Slide Switch       |   |
| E. Sensitivity Adjuster       |   |
| F. Handle                     |   |
| G. Speaker Audio Alert        |   |

### Inserting the Battery

Loosen the screw on the battery cover and remove the battery cover. Insert a new 9V battery into the battery compartment and pay attention to the polarity symbols. Replace the battery cover and retighten the screw on the battery compartment.

### Operating Instruction

Hold the detector by the handle in a comfortable position. Set the control slide switch from the OFF mode to either of the other modes to turn the metal detector on. The power indicator light will be on and a momentary beep is heard.

### Control slide switch functions

-  Visual and Audio Alert
-  Visual Alert

To test the detector, pass it over a known area with metal objects and check for the visual and/or audio alarms. It should be tested at regular intervals to ensure correct operation.

### Adjusting the Sensitivity

To adjust the sensitivity, locate the sensitivity adjuster and use a small flat bladed screwdriver to rotate the potentiometer located in the hole, rotate screwdriver:

- Clockwise to increase sensitivity
- Counter-clock to decrease sensitivity

Increase sensitivity until both audio and visual alarms are continuously on, and then slightly decrease the sensitivity. Preset sensitivity is at 1.96 inches / 5 cm for a US .25¢ coin. (Note: Do not adjust the sensitivity higher than necessary as this may cause false alarms)

### Low Battery Warning

Replace the battery when either of these situations occur with the metal detector

- If the metal detector is not detecting metal objects over a know area with metal objects
- If audio tone alarms continuously

### Trouble Shooting

Move to a different search area if

- Alarms when in motion, but is stable in open air, there could be too much metal in the area.
- Alarms when motionless or motion, it could be the result of interference from electronic equipment (as broadcast antennas, power lines etc).

If neither of the above is successful, the sensitivity may be too high and requires adjustment.

### Care and Maintenance

- Keep your detector clean and dry.
- Clean detector with damp cloth to maintain its appearance.
- Do not use chemical cleaners.

## 1 YEAR LIMITED WARRANTY

### Metal Detector

WINBEST® by BARSKA®, as manufacturer, warrants this new product to be free of original defects in materials and/or workmanship for the length of time specified by this warranty. This warranty does not include damage caused by abuse, improper handling, installation, maintenance, normal wear-and-tear, unauthorized repairs or modifications and tampering in anyway.

This warranty is limited to the original purchaser and is not transferable. This warranty applies only to products purchased in the United States of America and Canada.

In the event of a defect within 30 days, the consumer must return the defective unit to the WINBEST® by BARSKA® dealer (the place of purchase) at his/her own expense.

Beyond 30 days, WINBEST® by BARSKA® products should be sent to the following address for warranty repairs. Products must be packed carefully and sturdily to prevent damage in transit, and returned freight prepaid to:

WINBEST® by BARSKA®  
855 Towne Center Drive  
Pomona, CA 91767

For additional and updated information  
please visit [www.barska.com](http://www.barska.com)

Please email [info@barska.com](mailto:info@barska.com) or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns.

NOTE: All merchandise received without a valid RMA# will be returned to shipper at his/her own expense.

Please include all of the following when returning WINBEST® by BARSKA® products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
  2. Purchase receipt or Proof of Purchase. (Original/Copy)
  3. A brief explanation of the defect
  4. A Check/Money Order of \$15.00 to cover inspection, shipping and handling
- \*Please allow 6-8 weeks for delivery

This product will either be replaced or repaired at the discretion of the warrantor. If it's a discontinued item, we will replace the product with an equivalent product. Should the repair not be covered by this warranty, an estimate will be sent for your approval. Non-warranty repairs or refurbishing are always provided at a reasonable cost.

WINBEST® by BARSKA® shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous Winbest® by BARSKA warranties.