



## Picture Frame Lock Box with Combination Lock

Each lock box is preset with unique combination codes, please refer to document included with lock box for codes.


### Combination Lock

1. Turn the combination lock to the index mark counter clockwise to the first preset code, turn the combination lock to the index mark counter clockwise to the first preset code again.
2. Turn the combination lock to the index mark clockwise to the second preset code.
3. Gently turn the handle to open the lock box.

### Note

- DO NOT use chemicals or cleaning agents to clean the lock box, if necessary use a dry duster or micro fiber cloth to remove any dust or smudges
- DO NOT force open the lock box it may be damaged
- DO NOT over stuff the contents of the lock box or you can damage the handle or the contents
- DO NOT disassemble the product. For all repairs and maintenance, contact authorized service centers or distributor
- Keep liquid and moisture away from the lock box
- Keep away from children

First Preset Code, Twice

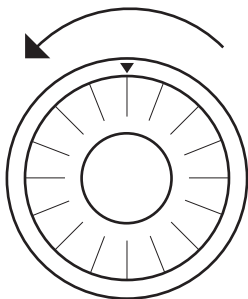

Second Preset Code

