

### Locking and Unlocking the Book Lock Box

Open book cover, insert key and turn to lock or unlock lock box door. Lift door of lock box to add or remove items from the lock box

*Caution:* Door of lock box will only open about 90 degrees, do not force open the lock box door it may damage the lock box

Place keys in a secure location, DO NOT place keys inside of lock box

### Care and Maintenance

- DO NOT use chemicals or cleaning agents this will damage the safe. If necessary use a dry duster or micro fiber cloth to clean
- Keep liquids and moisture away from the lock box
- DO NOT force open or it will damage the lock box, lock box door will only open about 90 degrees
- DO NOT over stuff the contents of the lock box or you can damage the motor mechanism or the contents
- DO NOT disassemble the product. For all repairs and maintenance, contact authorized service centers or distributor
- DO NOT place keys inside of lock box