




SOLAR LIGHT PARTS LIST

1. Farm Vehicle Metal Figure (1 Unit)
2. Ground Stake Unit (1 Unit)

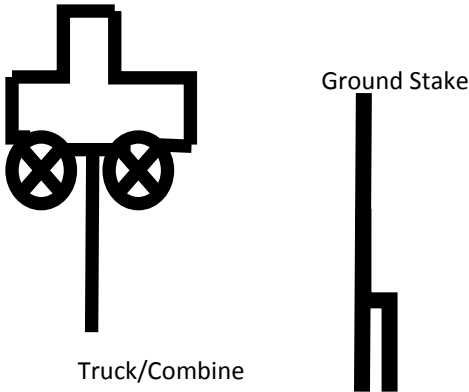

Charge unit for a minimum of 8 hours in direct sunlight before first use. Solar panel on stake must be placed in an area that receives sufficient sunlight. Failure to do so will impact time the light will function properly. Solar panel must be facing the sunlight for best results. Do not use any batteries except rechargeable batteries specifically made for solar lights.

Be sure to check out our other solar products:

Solar Stake Lights:

American Flag, Angel, Cross, Butterfly, Crackleball (3), Dragonfly, Hummingbird, Lily, Orbital Balls (3), Resin Birds (4), Starburst, Whimsical Bugs (3), Trucks (2), Tractor, Wind Spinners (2)

Solar Wind Chimes:

Bubbletube, Crackleball, Lantern, Moon, Sun, Spiral Spinner

Solar Fluttering Products:

4 topper new style

ASSEMBLY INSTRUCTIONS

1. Place stake in ground (Part 2).
2. Connect Farm Vehicle Metal Figure Unit (Part 1) and Stake Unit (Part 2) together
3. Fold down solar panel on LED Base Unit (Part 2).
4. Remove plastic film from solar panel
4. Turn unit on using the on/off Switch on the underside of the solar panel.

HOW TO CHANGE THE BATTERIES

1. TURN UNIT OFF USING ON/OFF SWITCH.
2. Unscrew the two screws on the underside of the solar panel using a Phillips screwdriver.
3. Gently pull the two pieces apart.
4. Remove old battery.
5. Insert new (Solar Rechargeable Battery only) battery.
6. Put two pieces back together.
7. Replace two screws.
8. Turn unit on using the on/off switch.



Headwind Consumer Products

Syracuse, NE 68446, USA

www.headwindproducts.com

Made in China