

FABRIC REMOVAL INSTRUCTIONS



Fabric can become soiled over time with use. For stubborn stains or extreme soiling, removal of fabric can make clean up easier.



CARE

Use a damp cloth to clean. Do not use chemicals. Do not machine wash
WARNING! Not to be used as a children's ride wagon.


TO REMOVE THE FABRIC

Step 1



The fabric of the wagon is secured at the front and back of the frame with hook and loop fasteners. Release all to begin the fabric removal process.

Step 2

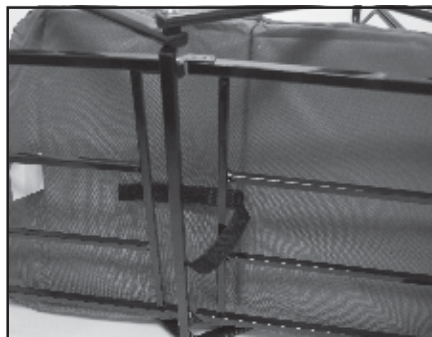

Release the hook and loop fastener loop securing the fabric to the frame under the wagon.

Step 3



The wagon fabric can now be removed from the frame by sliding it down the wagon handle.

TO PUT THE FABRIC BACK ON

Step 1



Slide the fabric back into the frame from the front. Be sure the wagon handle is inserted inside the front handle of the fabric.

Step 2



Resecure the hook and loop fastener loop securing the fabric to the frame under the wagon.

Step 3



Secure the wagon fabric to the frame with the hook and loop fasteners.