

Thermo-Poultry Waterer

Care & Instructions

INSTRUCTIONS

- 1** Fill water reservoir with water.
- 2** Seat the plastic plug into the hole in cap.
- 3** Screw cap snugly onto filled water tank. Be careful not to cross thread.
- 4** Locate a dry, flat area to place base of waterer.
- 5** Set water tank onto base.
- 6** The spike in the center of the base will dislodge the plug in the cap of the tank and automatically the fill water base.

CLEANING & CARE

- For everyday debris free water, remove the filter ring and gently tap or rinse it clean.
- For re-filling, quickly turn over the water reservoir. Minimal water discharge will occur if done quickly.
- Empty contents from tank, rinse and refill as necessary.
- Hand wash base with mild detergent. Rinse thoroughly.
- Refer to step 1 in the instructions for use.



Thermo-Poultry Waterer

Important Safeguards

WARNING: This is an electrical product. Read all directions and precautions carefully before operating. Failure to properly follow all directions and instructions may lead to electrical shock or fire which could cause serious bodily injury.

When using electrical appliances, basic safety precautions should always be followed including the following:

- Have a qualified electrician install a properly grounded receptacle outlet, acceptable for outdoor use and protected from rain and snow, immediately adjacent to the location where the heater will be used.
- Route the supply cord and heated device so as to be protected from damage by people or livestock.
- Inspect cord for damage before using.
- Unplug from electrical receptacle when not in use.
- Store indoors after winter season.

CAUTION

To provide continued protection against risk of electric shock, connect to properly grounded outlets only.

The product should be properly connected to a branch circuit rated at 20 A or less.

Do not immerse in water



K&H Limited Two Year Warranty

Our warranty is as follows: K&H Manufacturing warrants to the original consumer, that this product will be free of defects and workmanship for a period of two years from the date of purchase. The manufacturer's liability hereunder is limited to replacement of the product. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering, or other causes not arising from defects in material or workmanship.

To exercise your warranty: If, during the warranty period, your product malfunctions, return it to the place of purchase with your **original purchase receipt**. If this cannot be done, return the product, postage prepaid, to K&H Manufacturing, with **dated proof of purchase or original date receipt**. A return authorization number, obtained by calling (719) 591-6950 must accompany all returns to manufacturer. Please include a note explaining the problem when returning the product.