

BUSHTEC ADVENTURE

ONLY THE RUGGED SURVIVE

GOLD RANGE CHALET TENT 2 WINDOW INSTRUCTION MANUAL



Canvas and Tent +27(0)36 634 1902
www.canvasandtent.co.za

⚠ WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made with flame resistant fabric which meets CPAI-84 Specifications. **IT IS NOT FIREPROOF.** The fabric will burn if it is left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

DO NOT OPERATE ANY DEVICE WHICH BURNS FUEL INSIDE THIS TENT

Combustion consumes oxygen and can produce dangerous levels of carbon monoxide which could lead to serious injury or death.



DO NOT place a stove, campfire, or other flame source in or near your tent. **DO NOT** cook, light, or refuel a stove or any other heat source inside your tent. Death by suffocation and/or serious burns are possible.

VENTILATION



Maintain adequate ventilation inside your tent at all times. Death by suffocation is possible.

LOCATION



Carefully consider the possibility of falling rocks or tree limbs, lightning strikes, flash floods, avalanches, strong winds and other objective hazards to reduce the risk of loss or injury to the tent or occupants.

ANCHOR



Anchor your tent properly at all times to reduce the risk of loss or injury to the tent or occupants

If you do not understand any part of this warning contact Canvas and Tent at +27(0)36 634 1902 or www.canvasandtent.co.za before using this tent

SPECIFICATIONS:

- ◆ Open size 9 X 6 X 7ft
- ◆ 3 Sleeper
- ◆ 2 oz/sq.ft. PVC floor
- ◆ Two windows with outer and inner zip flaps
- ◆ FR Ripstop Canvas Body
- ◆ Stakes and carry bag included
- ◆ Gazebo sold separately

CONTENTS:

Hardware :




Softs :



ERECTING INSTRUCTIONS:

Step 1: Open the Canvas chalet tent underneath the roof structure of the gazebo, with one side's legs inserted.

Step 2: Hook clips located on the roof ridge of the chalet tent onto the gazebo frame roof ridge

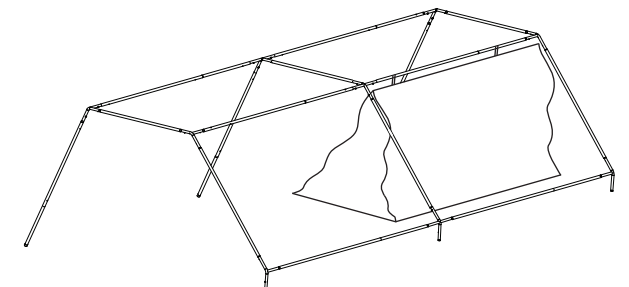

WARNING




NO FIRE


This tent is flammable. Keep all flame and heat sources away from tent fabric. Never place a stove, campfire, or any other flame source in or near your tent. Death and serious burns are possible.

Step 3: Hook clips located on the side of the chalet tent onto the frame edge


Step 4: Insert the legs on the other side of the gazebo frame

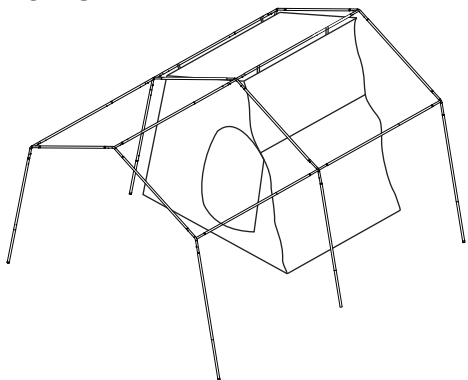

Step 5: Hook the other side of the chalet tent onto the gazebo frame structure

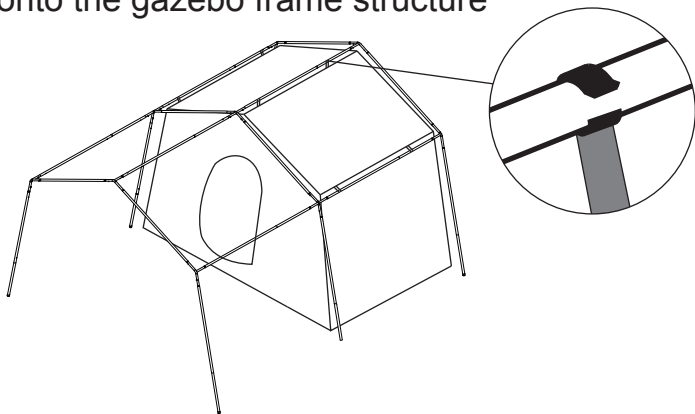

Step 6: To secure the tent insert the stakes through the D-ring into the ground

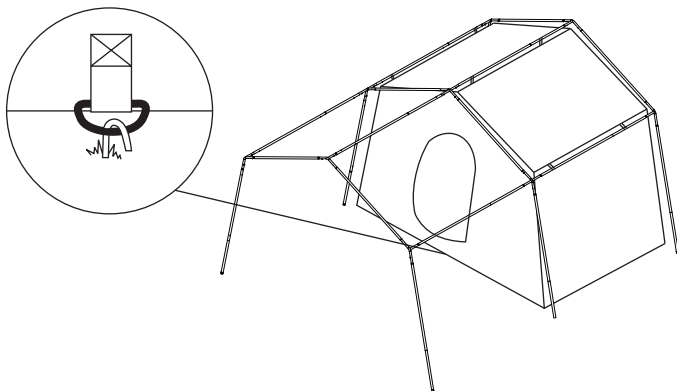


FOLDING INSTRUCTIONS:

Step 1: Ensure the cover is clean and dry before starting the folding process

PLEASE NOTE: When cleaning your tent use water and light detergent to remove any dirt from the canvas

Step 2: When the tent is collapsed ensure the roof of the tent is laying on top


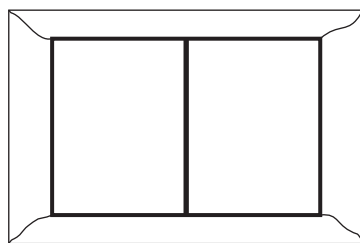


Step 3: Lift the eave of the wall and tuck the walls underneath the roof

Step 4: Repeat the step above all around the tent

Step 5: The tent should now be laying completely flat.

Step 6: Divide the tent into three and fold it as follows:

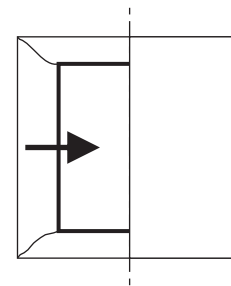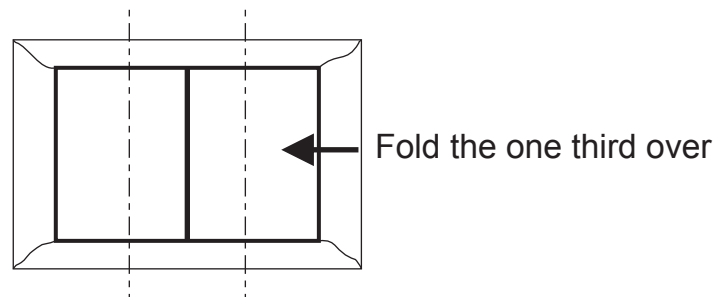

Then fold over the last third



Step 7: Roll the tent as tight as possible brushing the tent as you're rolling ensuring no dirt is rolled up with the roof