

Fold away Instructions

WARNING: For safety, remove leash and collar before allowing pet to enter the playpen

1. Starting Position



2. Fold the panel to the right of the elastic band inward. Be sure to keep the elastic band exposed. Panels should fold easily. Do not force as this can damage the frame.



3. Push inward from the center of the panel. Please note the flaps at the top and bottom need to be extended for panels to fold properly.



4. Begin to "accordion" fold each panel.



5. Once folded flat, wrap the elastic band around the folded playpen and then put in into carrying bag.

