

**READ CAREFULLY** – Use the heater only as described in this manual. Any other use is not recommended and could result in fire, electric shock, and personal injury. Following these instructions will prevent difficulties that might occur during the installation and use of the heater. Please study the instructions first, as they may save considerable time and trouble during use addition to providing important safety information. Make sure to save these instructions for future use.

**NEVER LEAVE HEATER UNATTENDED WHILE CONNECTED TO A POWER SOURCE**



**WARNING**

This heater is NOT suitable for use in hazardous locations as described by the National Fire Protection Association (NFPA). This heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint or other flammable liquids are used or stored.



**WARNING**

**RISK OF FIRE.** To prevent possible fire, don't block intakes or exhaust in any manner. Don't use on soft surfaces, like a bed where openings may become blocked. Heater must be kept clear of all obstructions. Maintain a 3 foot min. clearance from front and 12 inches from sides and rear. Heaters must be kept clean of lint, dirt, and debris (See maintenance instructions on page 2.)



**WARNING**

**RISK OF FIRE.** Do not use heater with extension cord. Plug the heater directly into a 120VAC receptacle.



**WARNING**

**RISK OF FIRE.** Do not use as a residential or household heater.



**WARNING** BURN HAZARD. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving the heater.



**WARNING** RISK OF ELECTRIC SHOCK OR INJURY. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from the traffic area where it will not cause a tripping hazard. Do not operate any heater with a damaged cord or plug, or after heater malfunctions, or has been dropped or damaged in any manner. Discard heater, or call King Electrical Mfg. 206-762-0400 for examination and/or repair.



**WARNING** RISK OF ELECTRICAL SHOCK. Connect to properly grounded outlets only. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater. Unplug heater before performing any maintenance or when not in use. To disconnect heater, turn control to low, then remove plug from outlet.