



## Instructions

Thank you for purchasing our battery operated sprayer. We think you will be delighted with your purchase. The battery operated sprayer has a tank capacity of 5 litres or 1.32 gallons of liquid. **IMPORTANT: PLEASE REMEMBER NEVER TO PUT ANY FLAMMABLE LIQUIDS INTO ANY BATTERY OR HAND PUMP SPRAYER.** By following these simple instructions you will be using your sprayer quickly and you will have many years of use. The battery sprayer does not require any assembly. All needed component parts are attached to the sprayer for your convenience.

In order to operate the sprayer, remove the battery door by sliding it upward from the opening that is located just above the black fill cap. Remove the slide out battery tray. Place 6 fresh “D” cell batteries into the slide out battery tray carefully following the polarity indicators on the inside of the battery tray compartment. Failure to place the batteries into the battery tray properly with the correct “+” and “-“ will result in no power being generated by the motor. With the batteries placed correctly into the battery tray, slide the tray back into the battery cavity and place the slide down battery cover door back into place securely sealing the batteries in their housing.

### Important Water Test Before Using to Prime the Sprayer

**Fill the reservoir tank with about one gallon of water. Replace the black fill cap on the reservoir tank and depress the on/off rocker switch to start the motor. Be sure to adjust the nozzle tip of the spray wand so that the water can spray out. If you do not get an immediate spray, with the motor still running tilt the unit backward so that the reservoir cap is elevated. Allow the water to fill the pickup tube inside the sprayer. You should see a spray develop in about 10-15 seconds. Once completed, empty the water and refill with the liquid of your choice.**

Next, remove the black fill cap that covers the opening into the liquid tank by unscrewing the cover. Pour the liquid to be sprayed into the tank reservoir and replace the cap tightly on the fill opening. Adjust the hose and wand assembly so that it is extended as desired. The nozzle on the end of the wand assembly from which the liquid will spray is adjustable from a stream to a misting fan spray pattern. Twisting the nozzle in the counterclockwise direction will shut the nozzle flow off completely. Adjust the nozzle spray as desired.

The rubberized on/off rocker switch is located at the rear of the carry handle. Depress the switch to start the motor. To shut off the motor, depress the switch in the opposite direction. For convenience, the battery sprayer also comes with an adjustable carry strap and a wand holder which is molded to the rear of the sprayer. When you are finished using your Bare Ground battery sprayer, it is always best to pour out the contents of the reservoir unless you are planning to use the sprayer again within a short period of time. For long term storage, it is always recommended to store the sprayer empty.

In the unlikely event that you encounter issues with your sprayer, please contact the company that you had originally purchased the sprayer from. It is important that you keep your receipt.

[www.bareground.com](http://www.bareground.com)

Email: [Bareground@bareground.com](mailto:Bareground@bareground.com)