


# Assembly Instructions

Item#: L-GZ120PST-9D

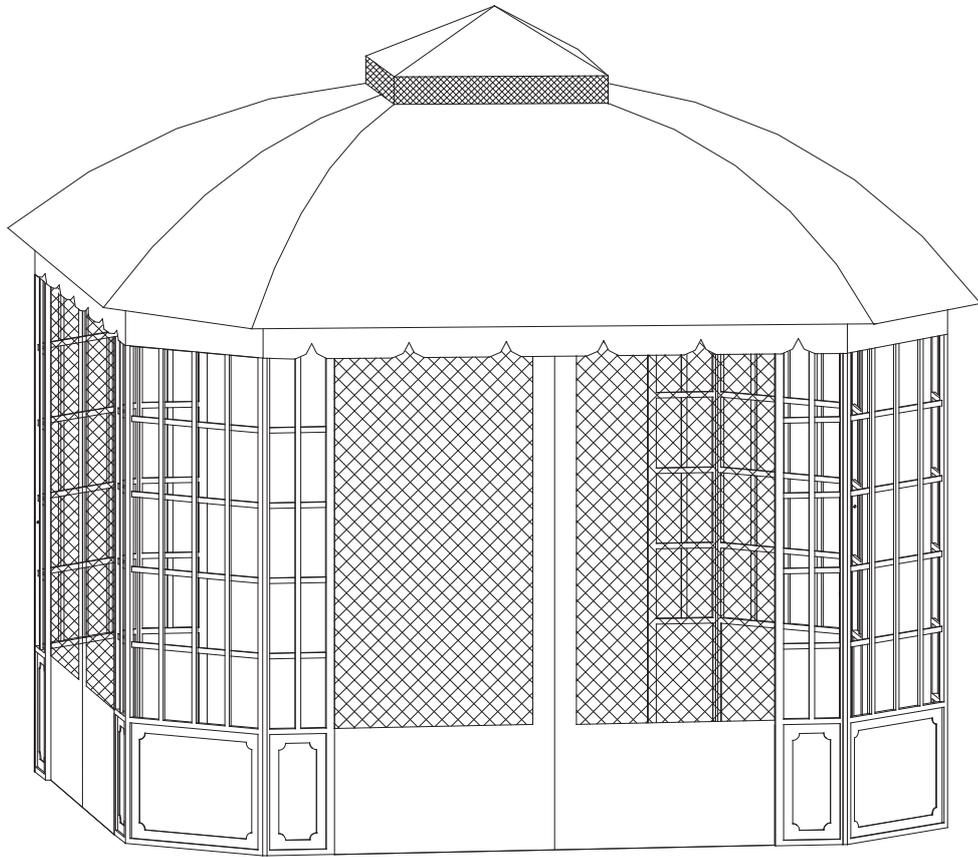

前四位销季2018，  
后四位填工厂代码



Production Number: xxxxxxxx

**Thank you for your purchase!** We are pleased that you have chosen Sunjoy for your outdoor furniture purchase.

Our clear, easy to follow, step by step instructions will guide you through the project from start to finish.

### **Safety information**

- Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the production construction.
- This package contains small items and plastic bags that should be kept away from children.
- Keep assembly area at least 6 ft. from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Proper placement of your product is essential. Do not place the product underneath electrical lines.
- Keep fingers away from places where they can be pinched or trapped.
- Some parts may contain sharp edges, wear protective gloves if necessary during assembly.
- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
- Check all screws for tightness before and during usage. Ensure that all connectors and poles are firmly and fully secured into position. It is important to do so before use so as to avoid a possible collapse or damage to the item, which could also result in injury.
- This product is intended for outdoor use only. Install on flat, level ground.
- Stakes are provided to secure the gazebo in grass ground. If you wish to secure the gazebo to a wood deck or concrete surface, you will need to purchase fasteners appropriate (such as expansion bolt) for these surfaces. These are readily available at your local hardware store or home center.
- The gazebo's roof and structure are not guaranteed against extreme weather conditions (storms, high winds, etc.). If the gazebo is not dismantled for the winter, snow must be cleaned off regularly. Any damage caused by snow accumulation is not covered by the warranty.
- Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
- Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the structure. Remove fabric roof and secure screen & privacy panels.
- Warranty does not cover damage due to extreme weather conditions.
- Please check your state and local regulations prior to purchasing. Some jurisdictions may require permits for, or otherwise regulate, installation and use.

### **Warning**


**Keep all flame and heat sources away from this tent fabric.** This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

### **Assembly Preparation**





- Please read and understand this entire manual before attempting to assemble or install the product.

Keep this manual for future reference.


- Keep the original packaging to store the product.
- Before beginning assembly of product, make sure all parts are present. Do not attempt to assemble the product if any parts are missing.
- For technical assistance on assembly or replacement parts please call our customer service department at 1-866-578-6569 for help.
- This unit is heavy. Do not assemble this item alone. At least two or more people are recommended for safe assembly.
- Tools Required for assembly (NOT included): Screwdriver, a hammer, and a ladder not lower than 2m (about 6.6 feet).

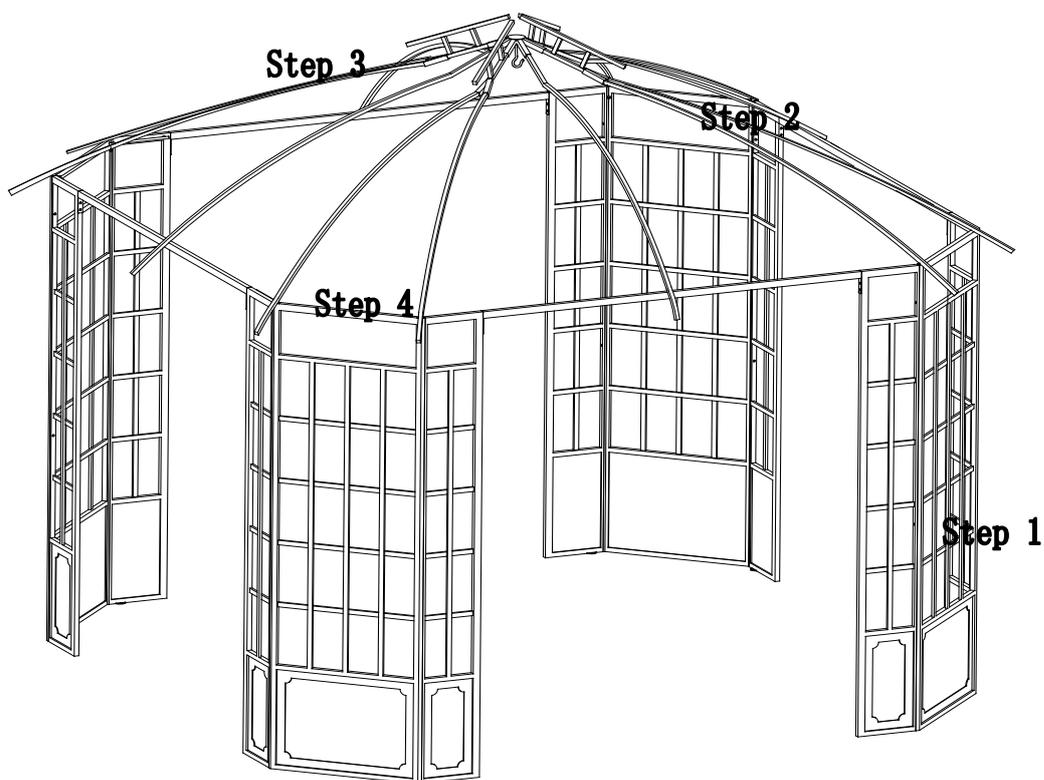


## Parts List

    Description	Part#	Label	Qty	Image
Big screen	GZ0120X9D01	A1	4	
Left screen	GZ0120X9D02	B1	4	
Right screen	GZ0120X9D03	C1	4	
Long Bar	GZ0120X9D04	A2	2	
Short Bar	GZ0120X9D05	A5	2	
Larger Roof Connector	GZ0120X9D06	A3	1	
Top Roof Supporter	GZ0120X9D07	B3	4	
Arch bar 1	GZ0120X9D08	C3	4	
Arch bar 2	GZ0120X9D09	C4	4	
Arch bar connector	GZ0120X9D10	C5	8	
Side Supporting Bar-Short	GZ0120X9D11	D2	2	
Side Supporting Bar-Long	GZ0120X9D12	D3	2	
Center Hook	GZ0120X9D13	F3	1	
Larger Canopy	GZ0120X9D14	G3	1	
Top Canopy	GZ0120X9D15	H3	1	
Mosquito Netting	GZ0120X9D16	I3	1	

### Hardware Pack 1


 
Description	Part#	Label	Qty	Image
M6x20 Bolt	BM06020C	AA	16	
M6 Flat washer	UD06C	CC	16	
M6 Wrench	W10D	W2	1	

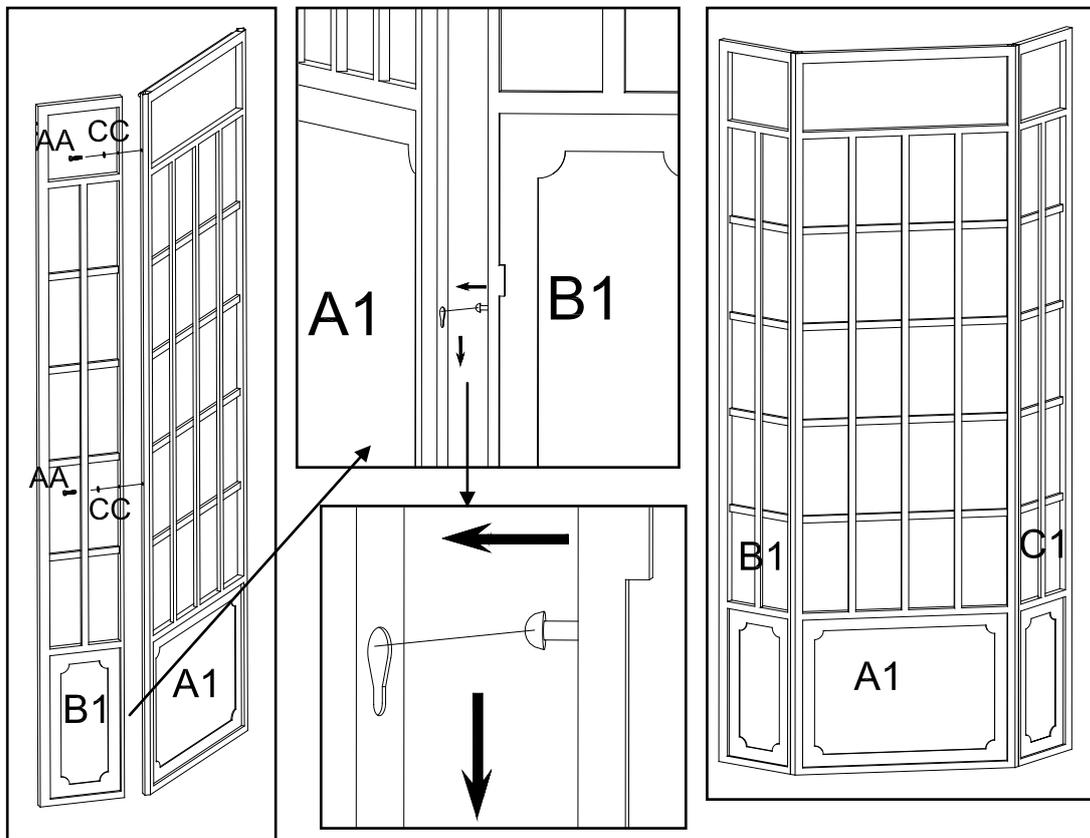

Step1: Insert the left screen (B1) into the big screen (A1), pull it down to attach them, then use screw (AA), washer (CC) to secure left screen (B1) and big screen (A1). Do the same for right screen (C1) and big screen (A1).




### Hardware Pack 2


Description	Part#	Label	Qty	Image
M6x15 Bolt	BM06015C	BB	16	
M6 Flat washer	UD06C	CC	16	

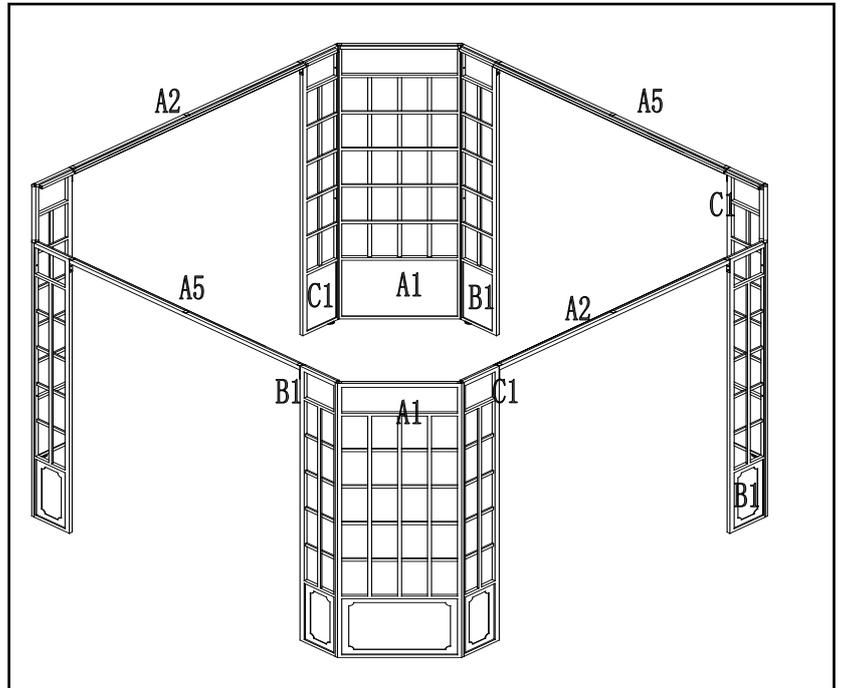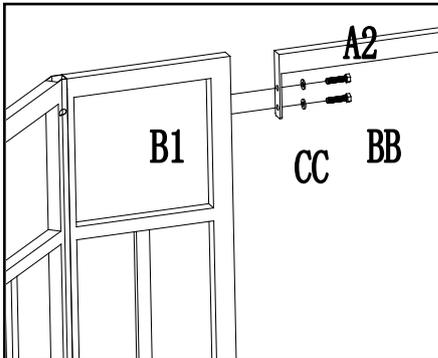


Step2: Connect long bar (A2) and left screen (B1), long bar (A2) and right screen (C1) with bolt (BB) and washer (CC). Connect short bar (A5) and left screen (B1), short bar (A5) and right screen (C1) in the same way.

### Hardware Pack 3

  
 
Description	Part#	Label	Qty	Image
M6 Flat washer	UD06C	CC	24	
M6x30 Bolt	SM06030C	FF	4	
M6x15 Bolt	BM06015C	HH	16	
M6 Nut	LM06C	GG	4	

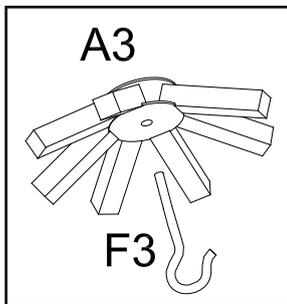


Step3: Attach center hook (F3) to larger roof connector (A3).

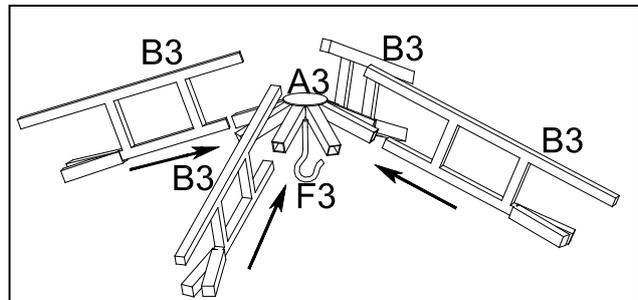



Step4: Insert top roof supporter (B3) into larger roof connector (A3).

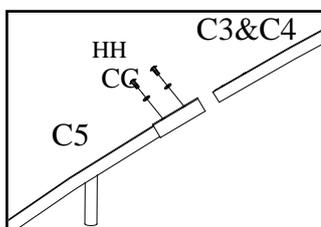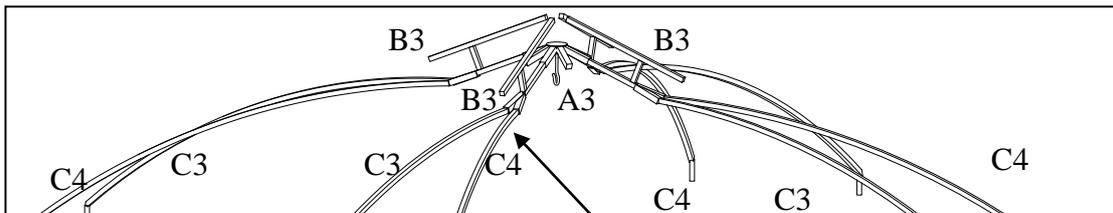



Step5: Insert arch bar 1(C3) and arch bar 2 (C4) into Arch bar connector (C5), fully tighten with bolt (HH) and flat washer (CC).

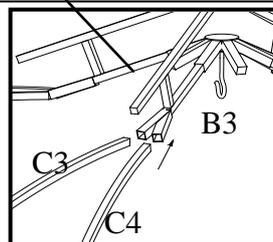


Step6: Insert arch bar 1(C3) and arch bar 2 (C4) into top roof supporter (B3).

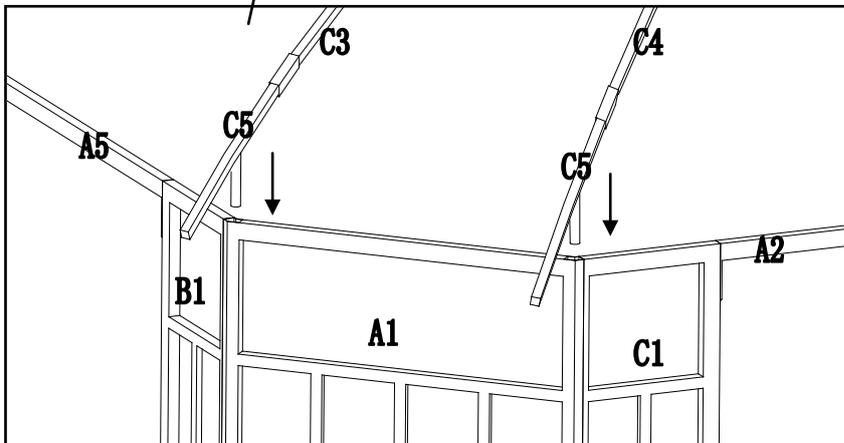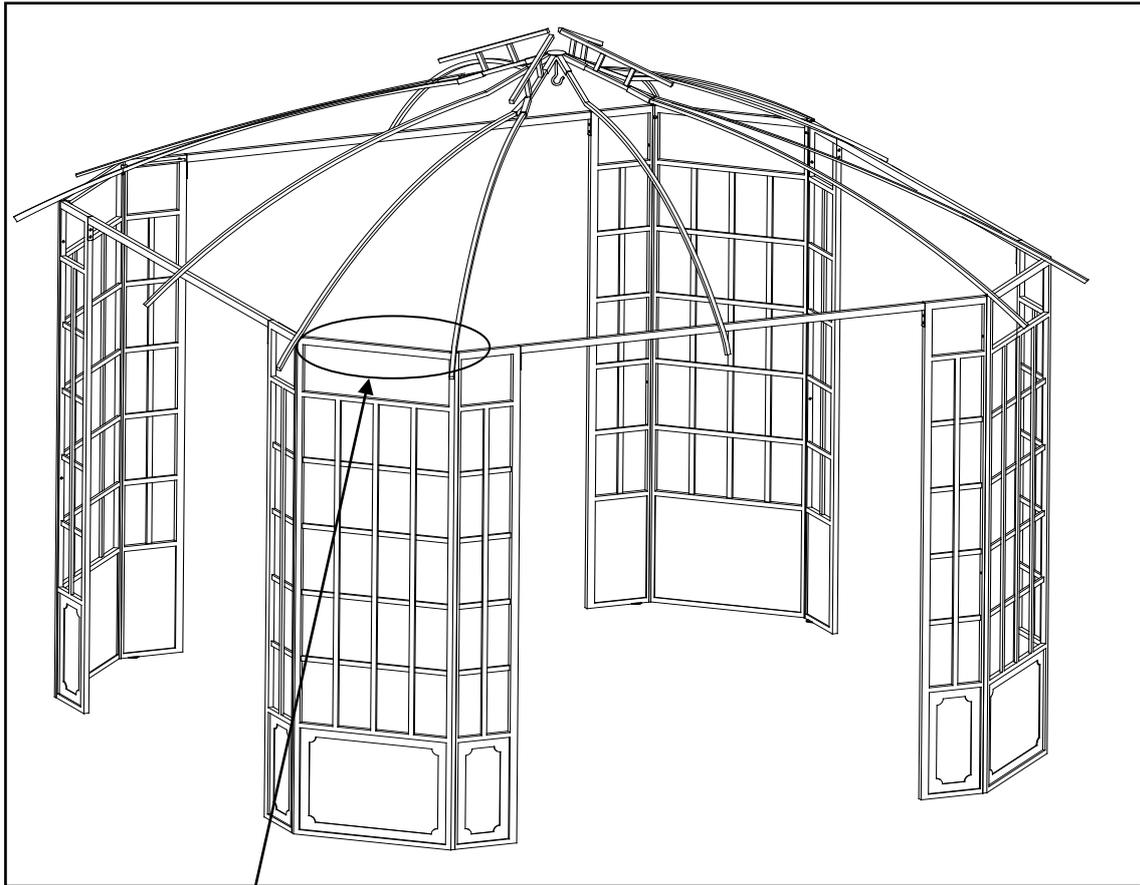


Step7: Insert arch bar connector (C5) into big screen (A1).

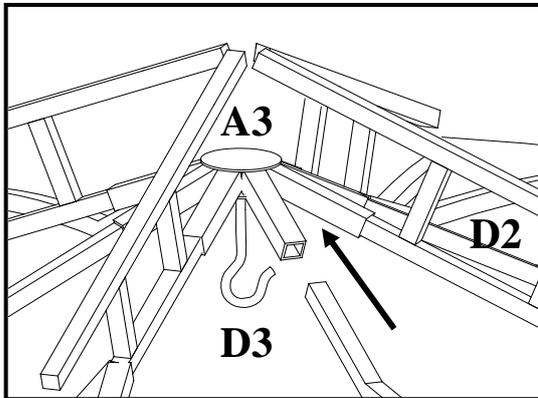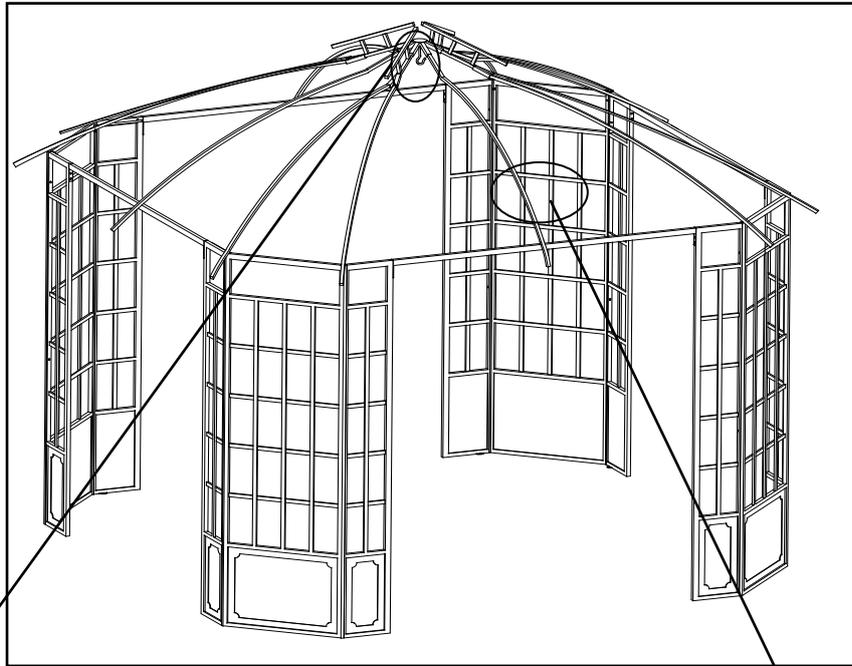



Step8: Insert side supporting bar-Short (D2) and side supporting bar-Long (D3) into larger roof connector (A3).

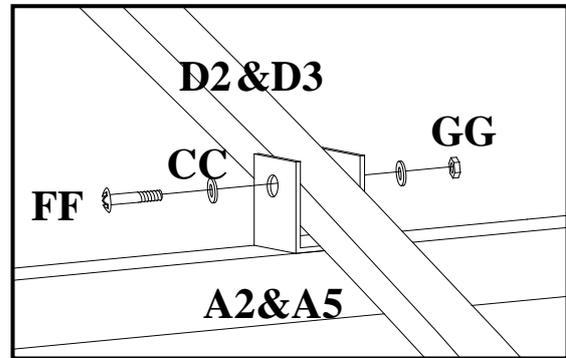


Step9: Connect Side Supporting Bar (D3&D2) and bar (A2&A5) with bolt (FF), washer (CC) and nut (GG).

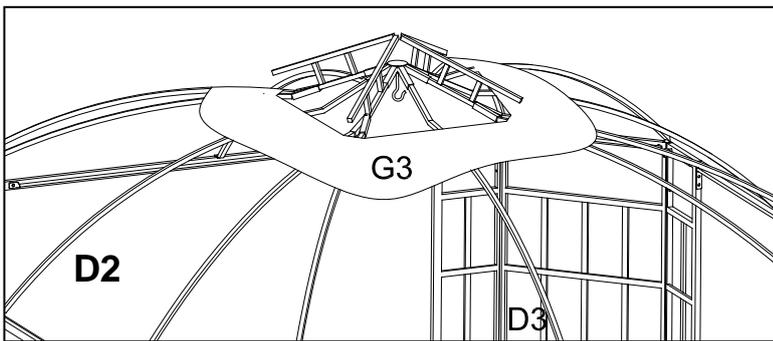



Step10: Put Larger Canopy (G3) on to the top frame. Do not unfold it completely at this time.

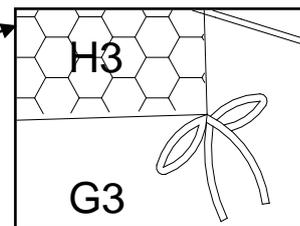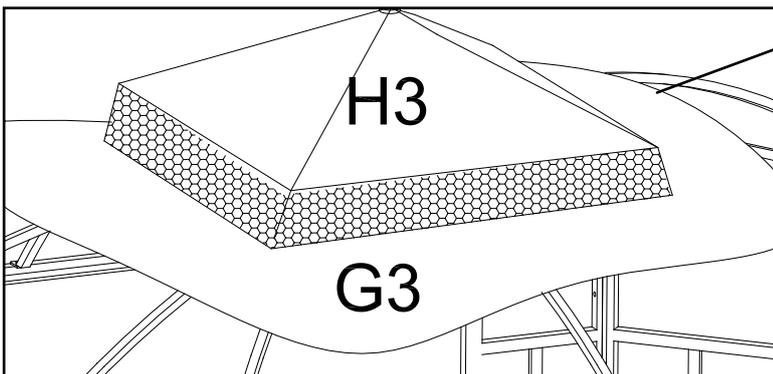

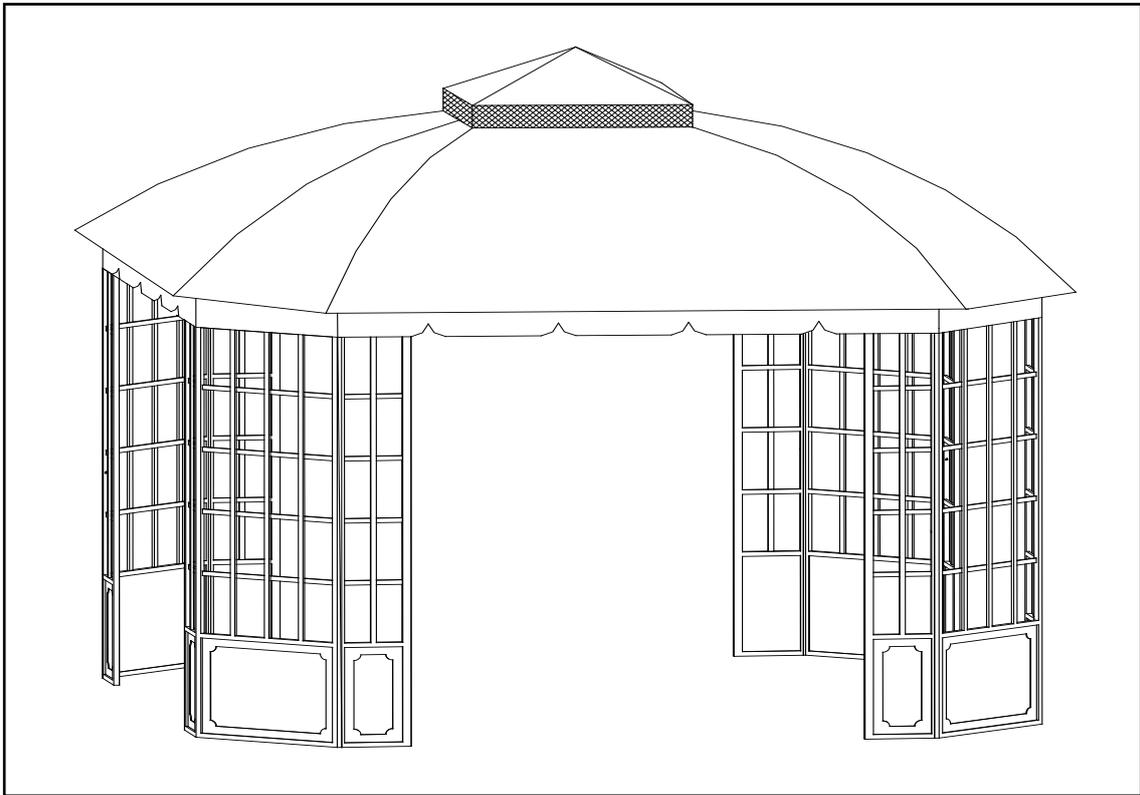


**Hardware Pack 4**

Description	Part#	Label	Qty	Image
Dia.6x180 stake	DD06180C	DD	8	
plastic ring	R40U	EE	56	

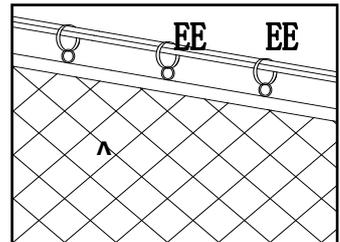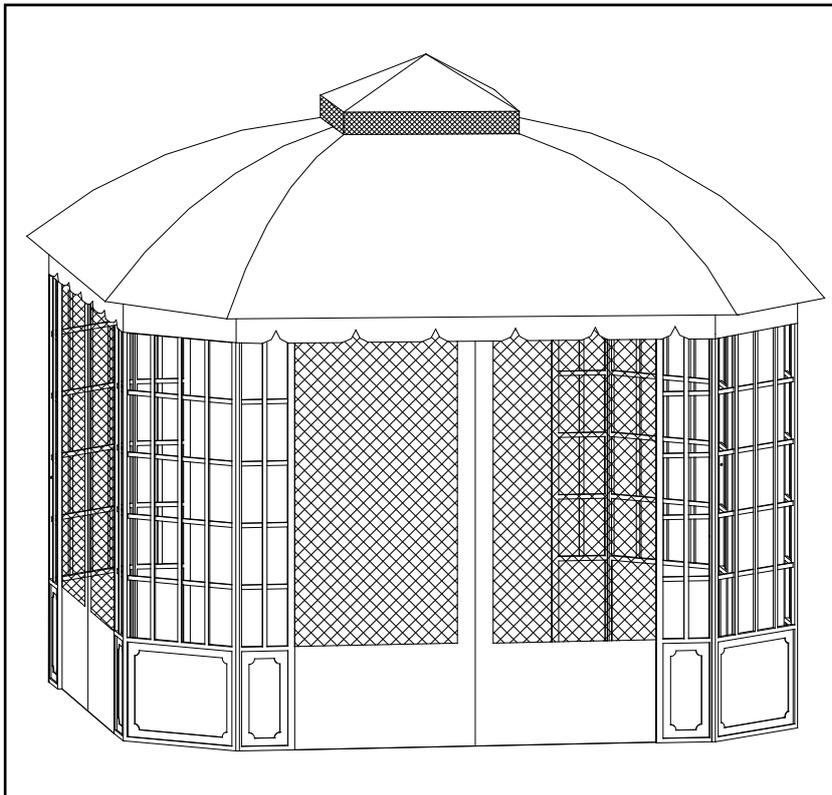

Step11: Attach Mosquito netting (A4) onto bar (A2, A5) with Plastic ring (EE).

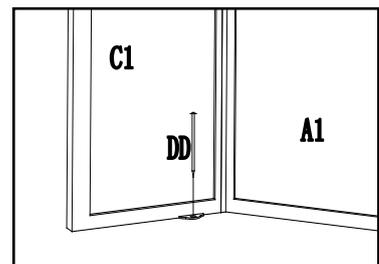

Step12: Secure the completely assembled gazebo by stake (DD).

### **Important**

Please do not return this product to the store. For technical assistance or replacement parts, please call Sunjoy Group at 1 (866) 578-6569 between 8:00 AM EST and 8:00 PM PST. You may fax your replacement parts form (which is included in the packaging) to 1 (740) 283-3549 or email to [customer.care@sunjoygroup.com](mailto:customer.care@sunjoygroup.com)

### **Care & Maintenance**

- Before using, clean the product completely with a soft, dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely.
- Do not use strong detergent or abrasive cleaners.
- Do not machine wash.
- Bolts can loosen over time. Be sure to check bolts occasionally, tightening as needed.
- Protecting furniture from the elements, when not in use is highly recommended.
- Our iron/steel components for garden accessories and patio items are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

### **Limited Warranty**

- This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.
- The item is warranted to be free from defects in material or workmanship for a period of one (1) year. If any defect is found, please call our customer service department at 1-866-578-6569 for help. The manufacturer will not cover transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### **Exclusions**

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

**Made in China**  
**2017-08**