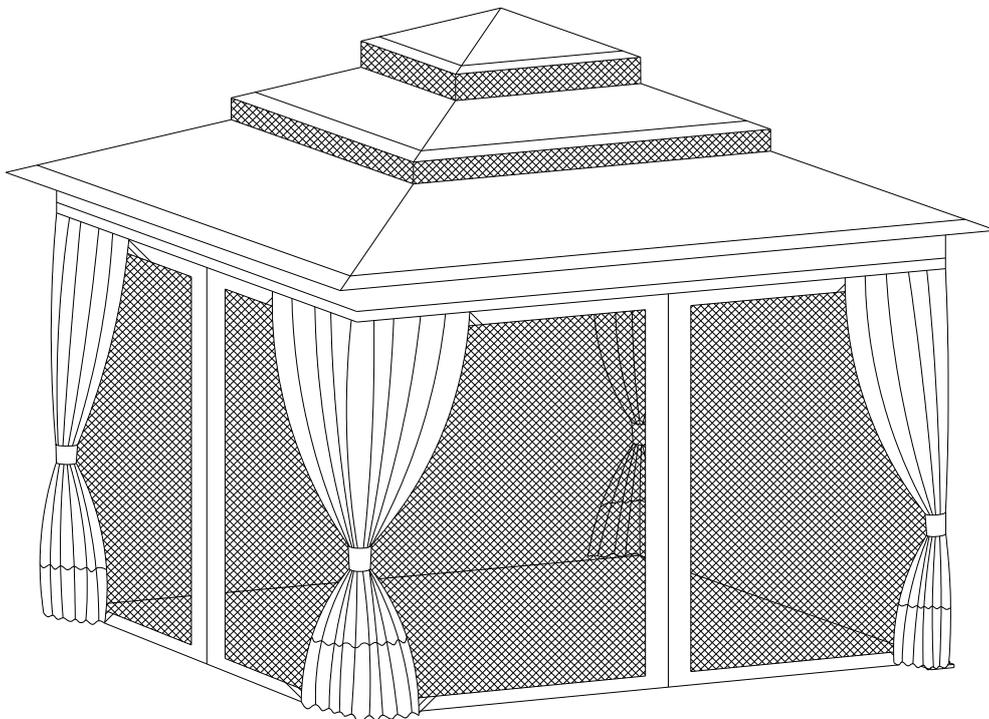


Assembly Instructions

Item#: 110101054

Vendor code: D-GZ916PST-B



Thank you for your purchase! We are pleased that you have chosen Sunjoy for your outdoor furniture purchase.

Our clear, easy to follow, step by step instructions will guide you through the project from start to finish.

Safety information

- Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the production construction.
- This package contains small items and plastic bags that should be kept away from children.
- Keep assembly area at least 6 ft. from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Proper placement of your product is essential. Do not place the product underneath electrical lines.
- Keep fingers away from places where they can be pinched or trapped.
- Some parts may contain sharp edges, wear protective gloves if necessary during assembly.
- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
- Check all screws for tightness before and during usage. Ensure that all connectors and poles are firmly and fully secured into position. It is important to do so before use so as to avoid a possible collapse or damage to the item, which could also result in injury.
- This product is intended for outdoor use only. Install on flat, level ground.
- Stakes are provided to secure the gazebo in grass ground. If you wish to secure the gazebo to a wood deck or concrete surface, you will need to purchase fasteners appropriate (such as expansion bolt) for these surfaces. These are readily available at your local hardware store or home center.
- The gazebo's roof and structure are not guaranteed against extreme weather conditions (storms, high winds, etc.). If the gazebo is not dismantled for the winter, snow must be cleaned off regularly. Any damage caused by snow accumulation is not covered by the warranty.
- Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
- Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the structure. Remove fabric roof and secure screen & privacy panels.
- Warranty does not cover damage due to extreme weather conditions.
- Please check your state and local regulations prior to purchasing. Some jurisdictions may require permits for, or otherwise regulate, installation and use.

Warning

- Keep all flame and heat sources away from this tent fabric.** This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

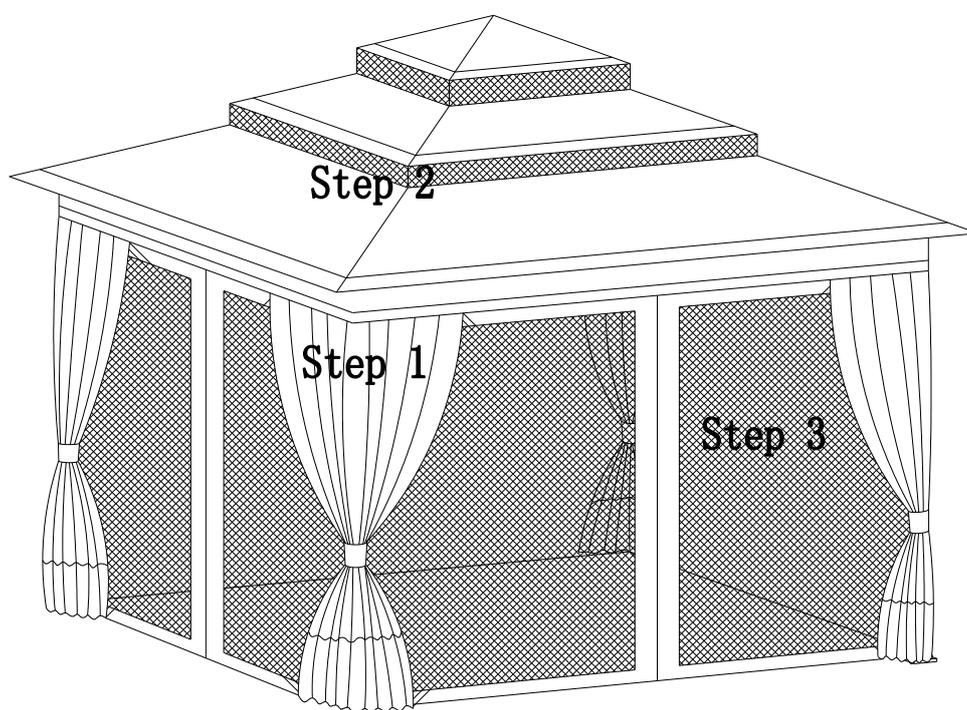
Assembly Preparation

- Please read and understand this entire manual before attempting to assemble or install the product. Keep this manual for future reference.
- Keep the original packaging to store the product.
- Before beginning assembly of product, make sure all parts are present. Do not attempt to assemble the product if any parts are missing.

 
 
 
 
 
- For technical assistance on assembly or replacement parts please call our customer service department at 1-866-578-6569 for help.
- This unit is heavy. Do not assemble this item alone. At least two or more people are recommended for safe assembly.
- Tools Required for assembly (NOT included): **Screwdriver, a hammer, and a ladder not lower than 2m (about 6.6 feet).**

Important

 
 
Please do not return this product to the store. For technical assistance or replacement parts, please call Sunjoy Group at 1 (866) 578-6569 between 8:00 AM EST and 8:00 PM PST. You may fax your replacement parts form (which is included in the packaging) to 1 (740) 283-3549 or email to customer.care@sunjoygroup.com

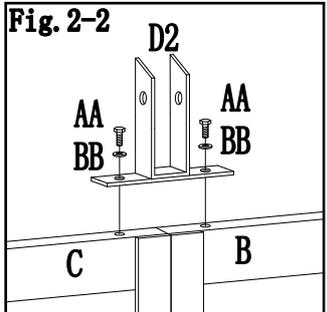
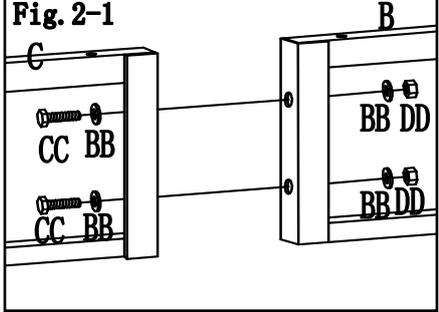
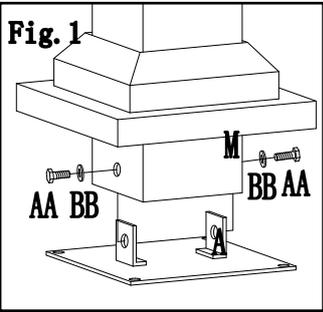
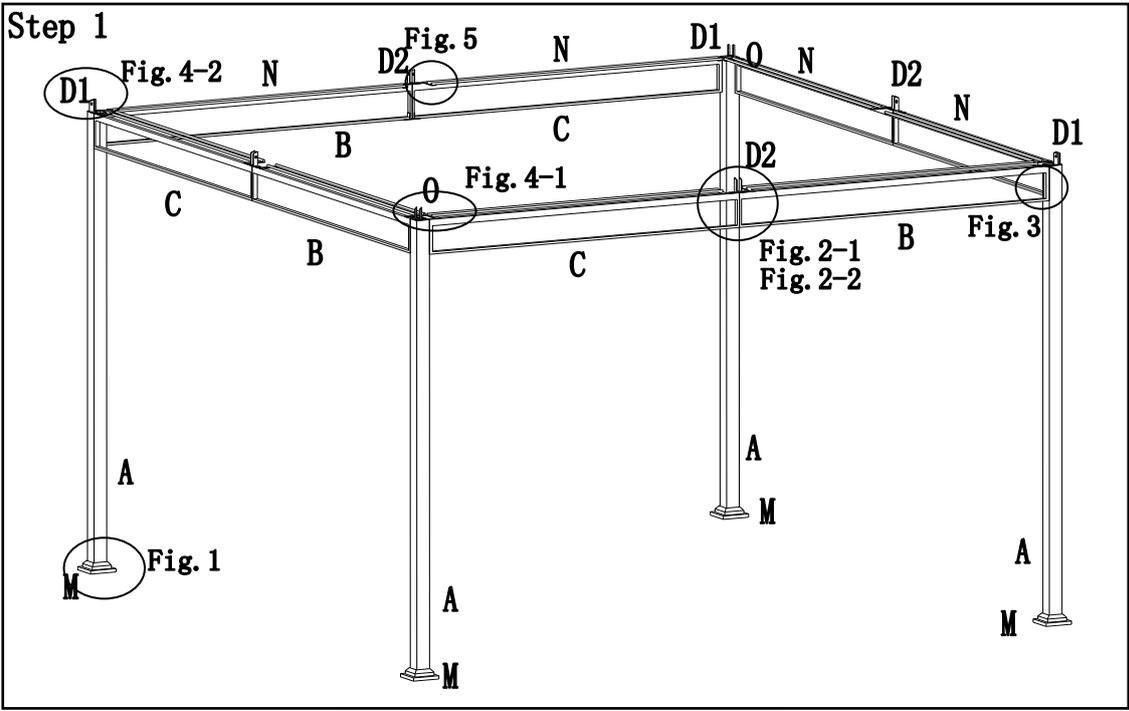


Parts List

Description	Part#	Label	Qty	Image
Post	GZ0916XXB01	A	4	
Long horizontal screen	GZ0916XXB02	B	4	
Short horizontal screen	GZ0916XXB03	C	4	
Slanting bar connector	GZ0916XXB04	D1	4	
Middle beam connector	GZ0916XXB05	D2	4	
Hook	GZ0916XXB06	E	1	
Slanting bar	GZ0916XXB07	F	4	
Middle beam	GZ0916XXB08	G	4	
Long side of the large top	GZ0916XXB09	H	4	
Large top connector	GZ0916XXB10	I	4	
Slanting bar of the small top	GZ0916XXB11	J	4	
Small top connector	GZ0916XXB12	K	1	
Stake plate	GZ0916XXB13	L	4	
Stake cover	GZ0916XXB14	M	4	
Mosquito netting bar	GZ0916XXB15	N	8	
Slanting support plate	GZ0916XXB16	O	4	
Small canopy	GZ0916XXB17	P	1	
Middle canopy	GZ0916XXB18	Q	1	
Large canopy	GZ0916XXB19	R	1	
Curtain	GZ0916XXB20	S	1	
Mosquito netting	GZ0916XXB21	T	1	

Hardware Pack 1

Description	Part#	Label	Qty	Image
M6X20 Bolt	BM06020C	AA	40	
M6 Washer	UD06C	BB	80	
M6X25 Bolt	YM06025CE	CC	32	
M6 Nut	LM06C	DD	8	
M6 Wrench 1	A04D	Z	1	
M6 Wrench 2	W10D	W1	2 PC	



- Fig.1: Put the stake cover(M) on the Post(A) and lift the stake cover, then assemble the Stake slate(L) to the end of the Post(A) by using Bolt (AA)、Washer(BB).
- Fig.2-1: Assemble the Long horizontal screen (B) and the Short horizontal screen (C) by using Bolt (CC)、Washer(BB) and Nut(DD).
- Fig.2-2: Attach the middle beam connector (D2) to the Long horizontal screen (B) and short horizontal screen (C) by using Bolt (AA)、Washer(BB).

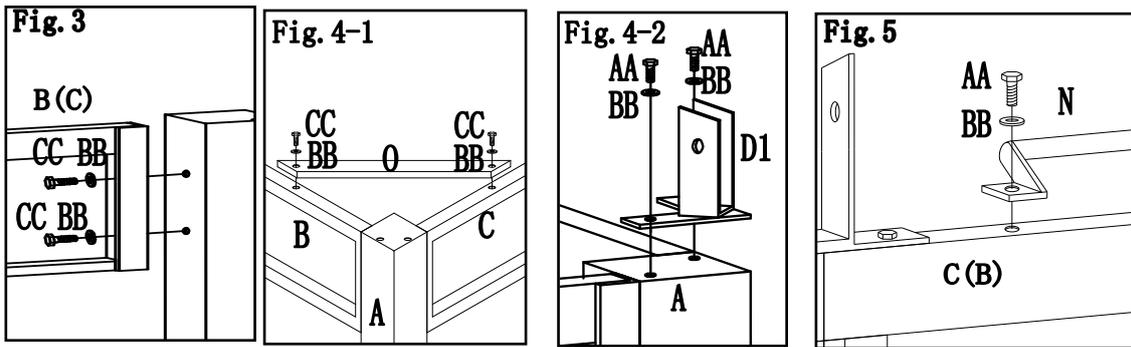


 
 
Fig.3: Attach the Long horizontal screen (B) and Short horizontal screen (C) to the Post (A) by using Bolt (CC) and Washer (BB).

Fig.4-1: Attach the slanting support slate (O) to the screen(B、 C) by using Bolt(CC) and Washer(BB).

Fig.4-2: Attach the Slanting bar connector (D1) to the Post(A) by using Bolt(AA)and Washer(BB).

Fig.5: Attach the Mosquito netting bar (N) to the Long horizontal screen (B) and Short horizontal screen (C) by using Bolt (AA) and Washer (BB).

Hardware Pack 2

Description	Part#	Label	Qty	Image
M6X20 Bolt	BM06020C	AA	16	
M6 Washer	UD06C	BB	32	
M6X35 Bolt	BM06035C	EE	8	
M6 Nut	LM06C	DD	8	

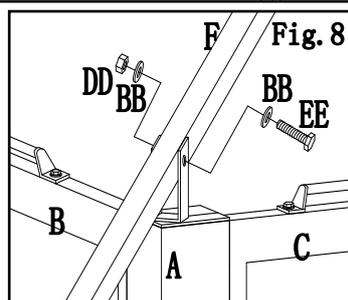
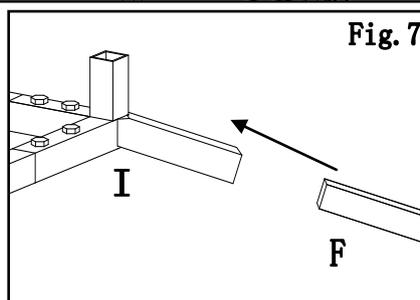
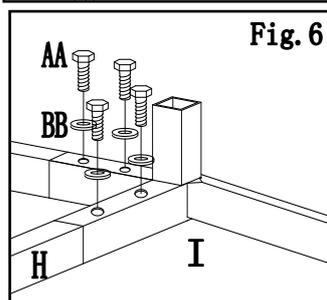
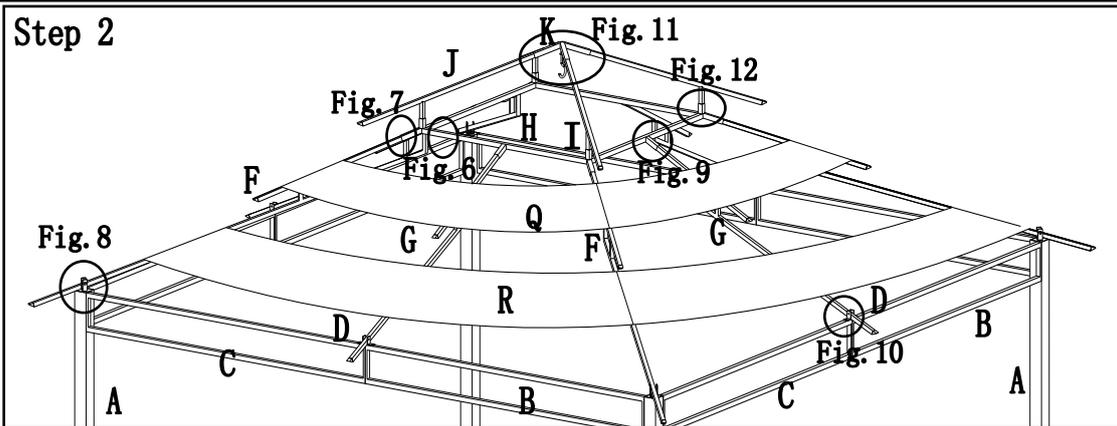


Fig.6: Assemble the Long side of the large top (H) and Large top connector (I) by using Bolt (AA) and Washer (BB).

Fig.7: Insert the upper end of the Slanting bar (F) into the tube of Large top connector (I)

Fig.8: Attach the lower end of the Slanting bar (F) in to the Post (A) by using Bolt (EE), Washer (BB) and Nut (DD).

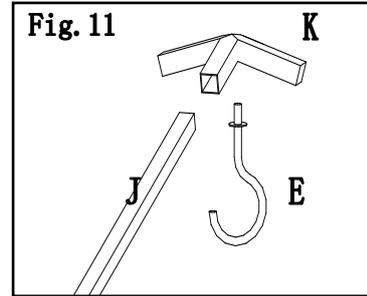
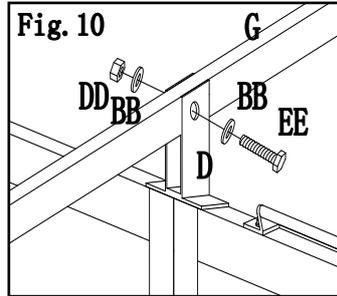
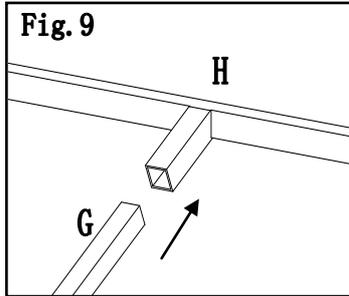


Fig.9: Insert the upper end of the Middle beam (G) into the tube of Long side of the large top (H).

Fig.10: Attach the lower end of the Middle beam (G) into the Middle beam connector (D) by using Bolt (EE), Washer (BB) and Nut (DD).

Fig.11: Insert the Slanting bar of the small top (J) into the Small top connector (K), then screw the Hook(E) to the Small top connector (K),

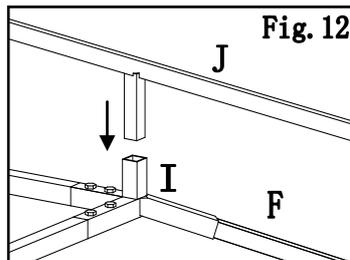


Fig.12: Lay the Big canopy (R) and then Middle canopy(Q) on the top, and do not spread them at this time ,then attach the assembled small top to the big top connector (I) by putting the tube of the slanting bar(J) into the tube of the big top connector (I).

Hardware Pack 3

Description	Part#	Label	Qty	Image
Stakeφ 8*180	DD08180C	FF	16	
Plastic ring	R40U	GG	112	

Step 3

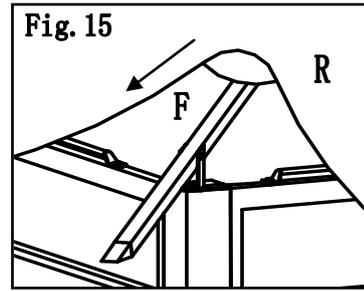
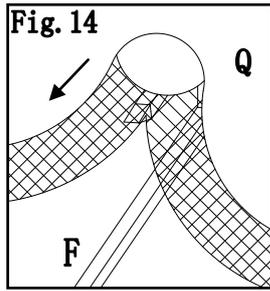
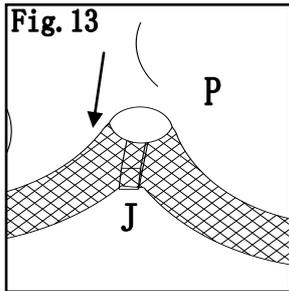
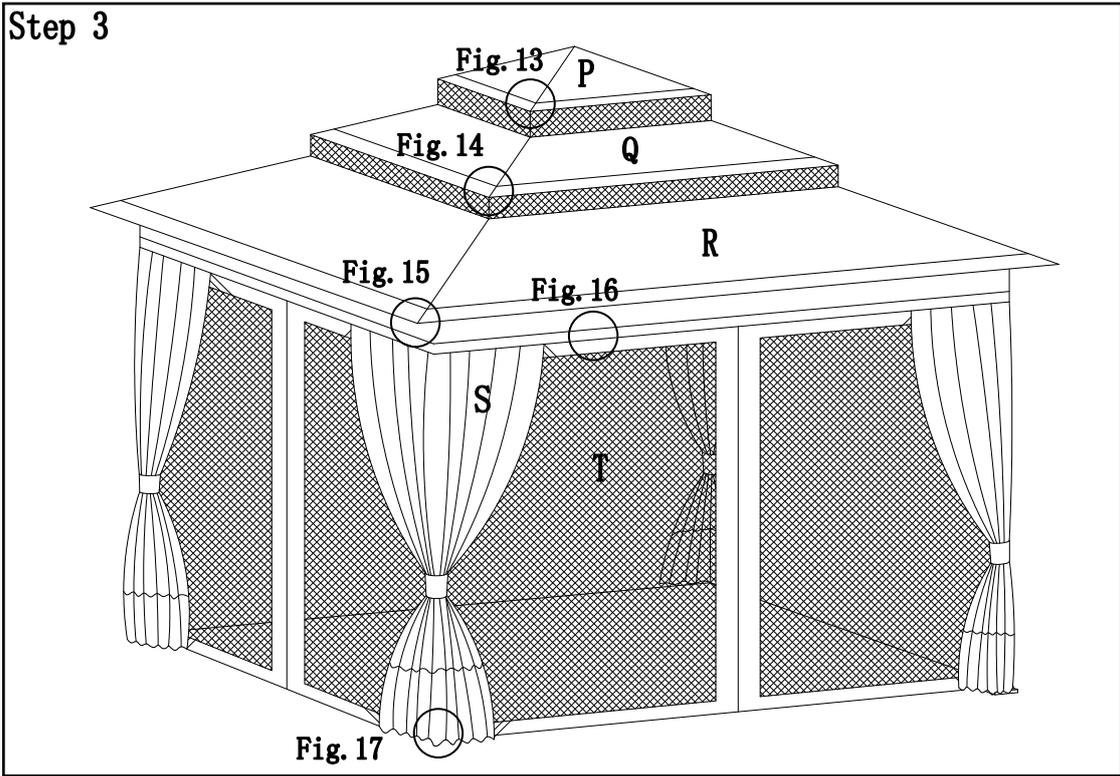


Fig.13: Put Small Top Canopy (p) on the top, and secure it on four corners.

Fig.14: Put the Middle canopy (Q) on the top, and secure it on four corners.

Fig.15: Fig.14: Put the Large canopy (R) on the top, and secure it on four corners.

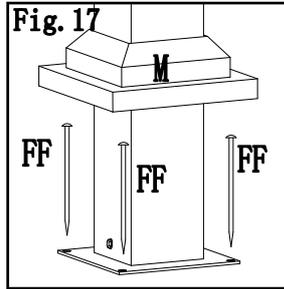
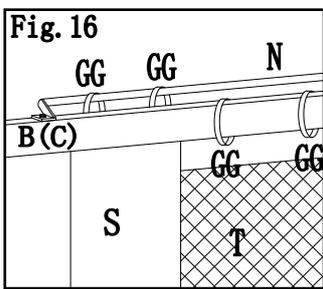


Fig.16: Hang the Mosquito netting (T) on the screen (B、C) by using Plastic ring (GG), then hang the Curtain (S) on the Mosquito netting bar (N) by using Plastic ring (GG), make sure to keep the curtain outside of the mosquito netting.

Fig.17: **Secure** the gazebo on the ground by using Stake (FF).

Care & Maintenance

- Before using, clean the product completely with a soft, dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely.
- Do not use strong detergent or abrasive cleaners.
- Do not machine wash.
- Bolts can loosen over time. Be sure to check bolts occasionally, tightening as needed.
- Protecting furniture from the elements, when not in use is highly recommended.
- Our iron/steel components for garden accessories and patio items are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

Limited Warranty

- This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.
- The item is warranted to be free from defects in material or workmanship for a period of one (1) year. If any defect is found, please call our customer service department at 1-866-578-6569 for help. The manufacturer will not cover transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Exclusions

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Made in China
2017-1