


Sunjoy L-GZ288PST-4H Parlay Gazebo

Owner's Manual

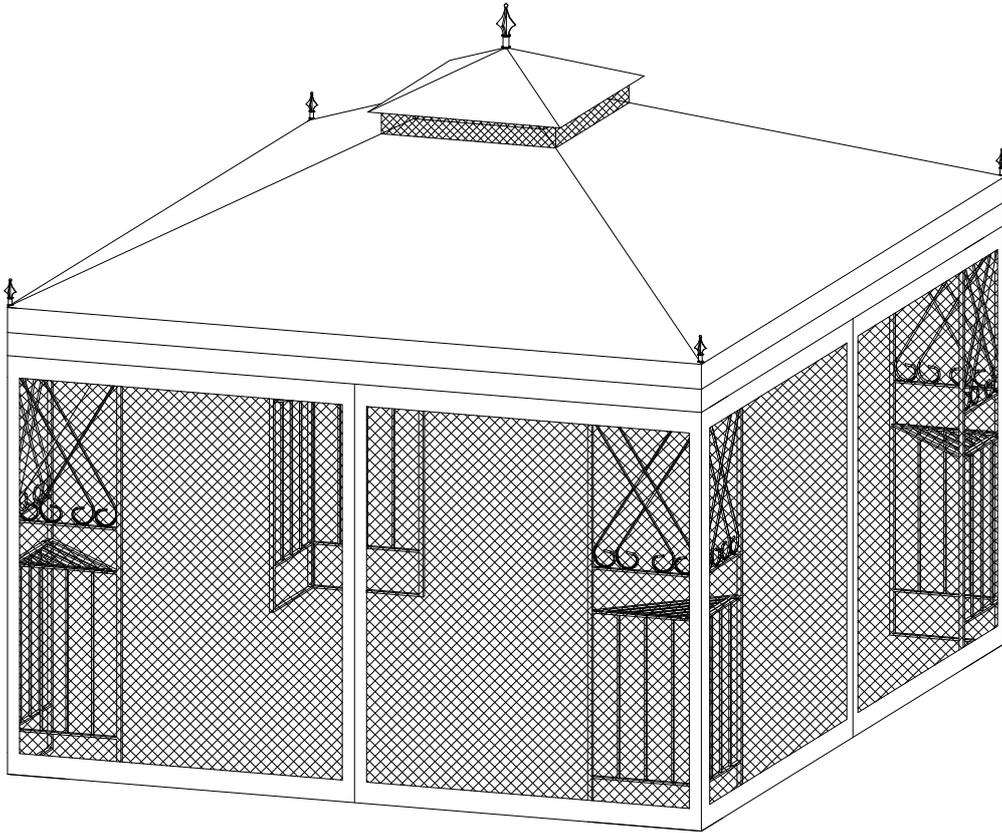

IMPORTANT

Thank you very much for choosing Sunjoy Group.

Please take time to read these instructions thoroughly and follow each step carefully for safe and easy operation. Keep this manual for future reference.

We would like to hear from you with any comments or suggestions. You can call us toll-free at 1-866-578-6569 from 8:00 a.m. EST to 8:00 p.m. PST. You can also send the email to customer.care@sunjoygroup.com or visit www.sunjoyonline.com to get tech. assistance or to place your replacement part order form.

前四位填销售季，
后四位填工厂代码



Production Number: 2018xxxx

Cautions:

1. Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of gazebo construction.
2. The area for assembly should not be less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
3. This unit is heavy. Do not assemble this item alone. Four people are recommended for safe assembly.
4. Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
5. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
6. For outdoor use only. Install on level ground. Do not cook inside the tent.
7. Check all bolts for tightness before and during usage
8. Pegs supplied must be used to hold this gazebo in place when upright.
9. Warranty does not cover damage due to extreme weather conditions.
10. Do not use candles, matches or open flames of any kind in or near a tent.
11. Build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night.
12. Exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery-operated lanterns whenever possible.
13. Do not refuel lamps, heaters or store flammable liquids inside a tent.
14. Extinguish or turn off all lanterns before going to sleep. Do not smoke in a tent.
15. **WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.


Assembly Instructions:

Our clear, easy-to-follow, step-by-step instructions will guide you through the project from start to finish. The final product will be a quality piece that will go together smoothly and give years of enjoyment.


 
 
 
Loading limit of the hook is 45 lbs.

Loading limit of side shelf is 45 lbs.

Parts identification: For ease of identification, all parts are labeled to correspond to the Step number in which the part is used.

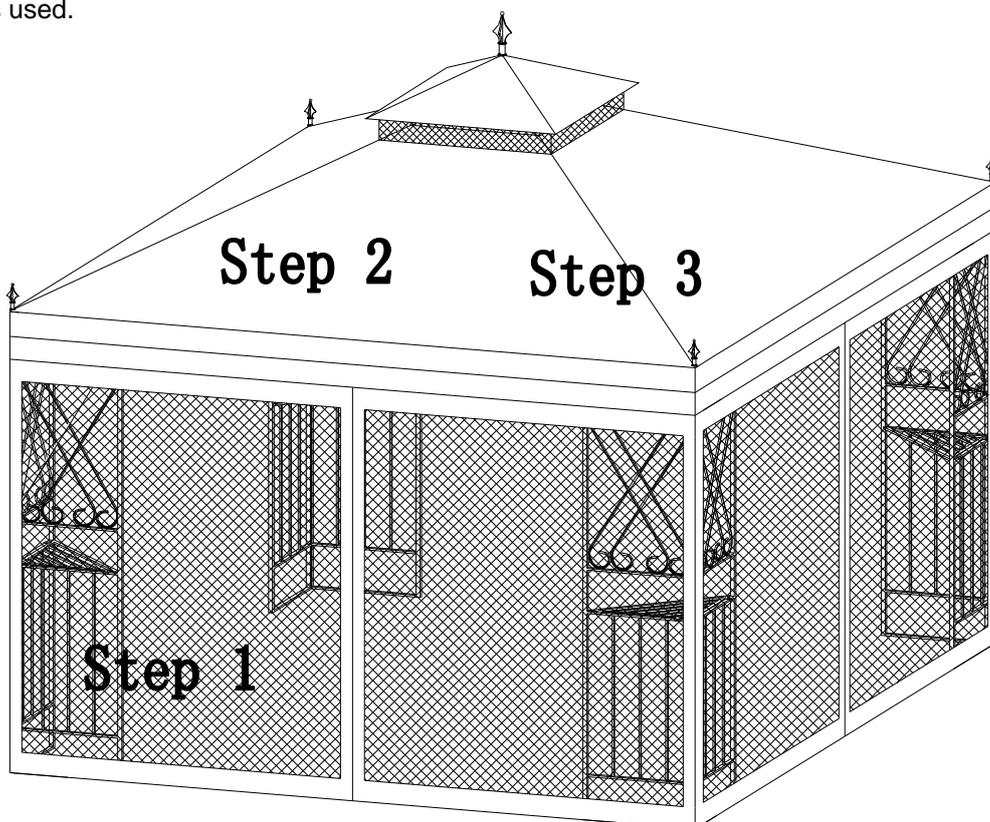

Parts List

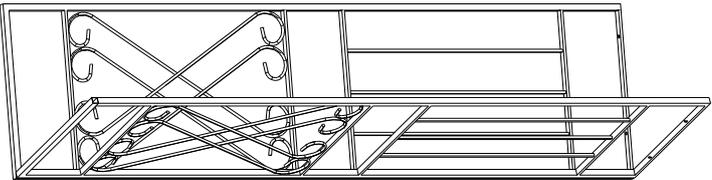Screen	A	4	
Short side support pole	B	2	
Long side support pole 1	C	2	
Long side support pole 2	D	4	
Pole	E	4	
Pole	F	2	
Pole	G	2	
Pole	H	4	
Center Connector	I	1	
Center Connector	J	1	
Top Hook	K	1	
Corner Connector 1	L	2	
Corner Connector 2	M	2	
Center Finial	N	1	
Corner Finial	O	4	
Shelf	P	4	
Big Canopy	Q	1	
Small Canopy	R	1	
mosquito net	S	1	

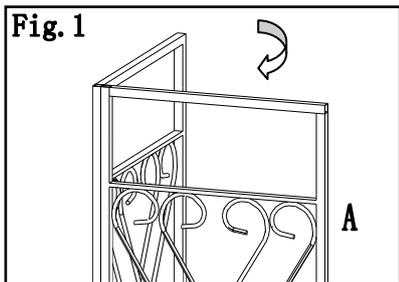
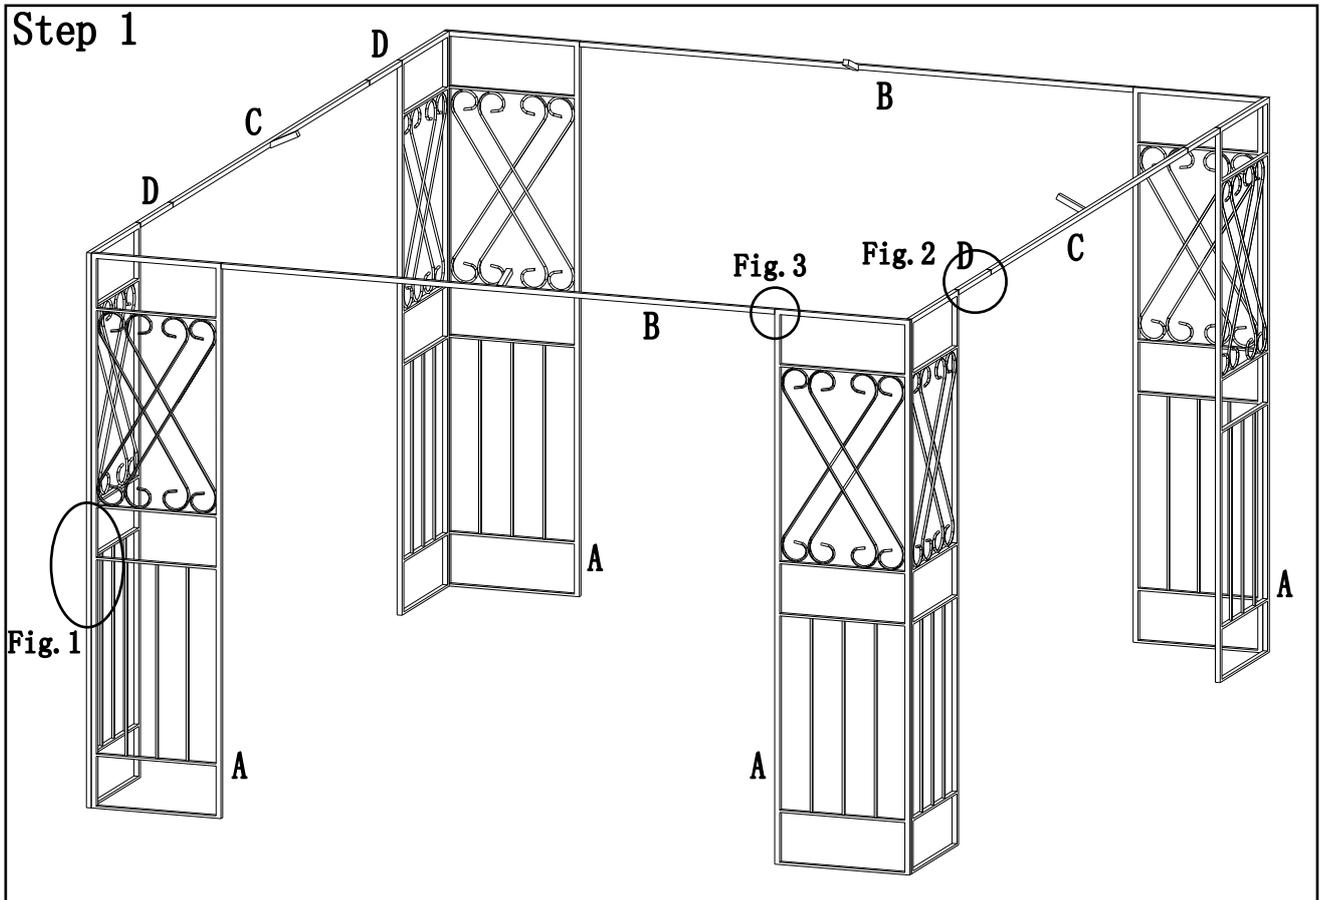


Fig.1: Set up the screen (A) on the ground, and open it as picture.

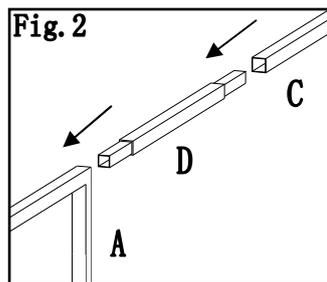


Fig.2: Combine long side support pole 1(C) with long side support pole 2(D), insert then install long side support pole 2 (D) to screen (A)

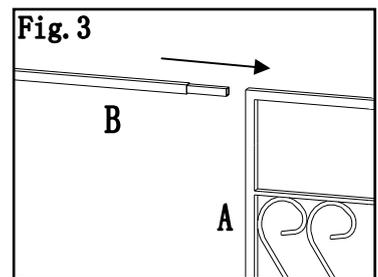
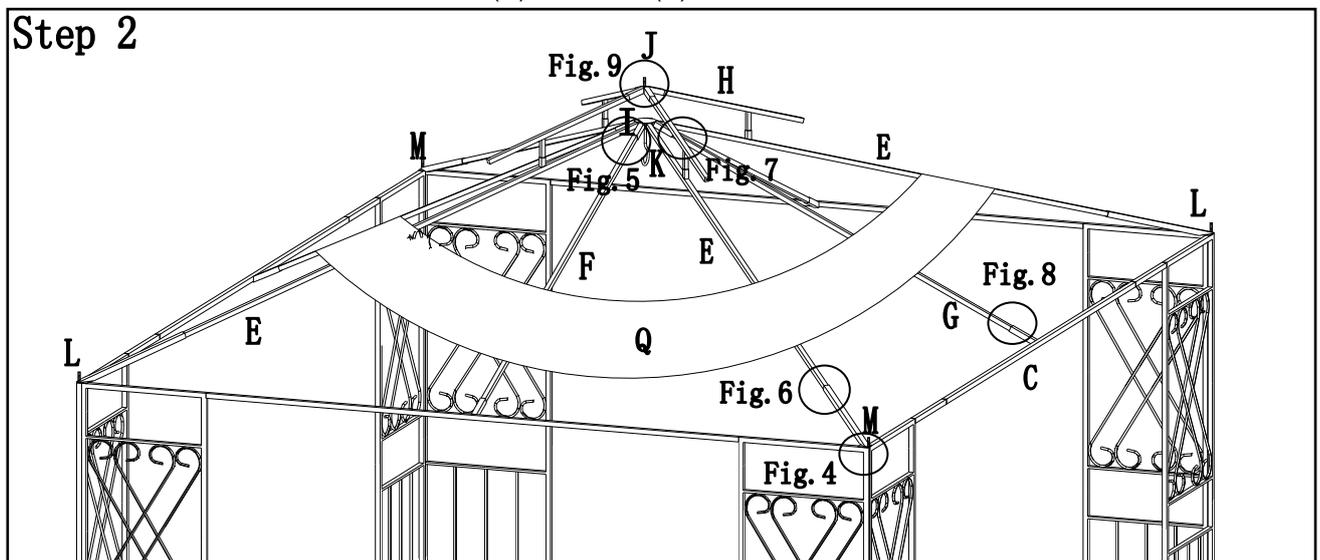


Fig.3: Install short side support pole (B) to screen (A)



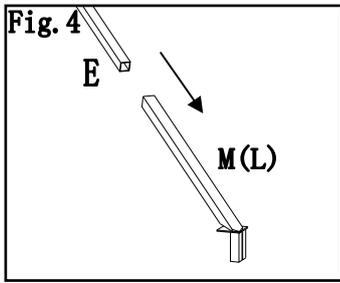


Fig.4: Insert pole (E) into corner connector (M,L)

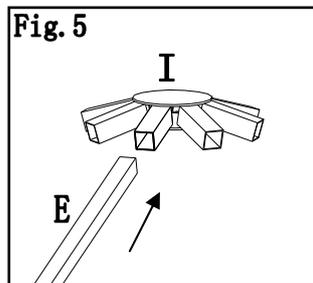


Fig.5: Insert pole (E) into center connector (I)

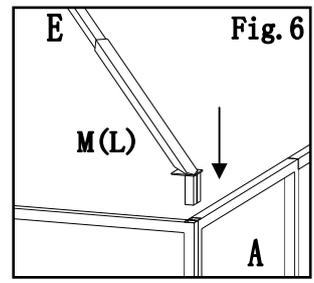


Fig.6: Insert installed corner connector (M, L), into screen (A)

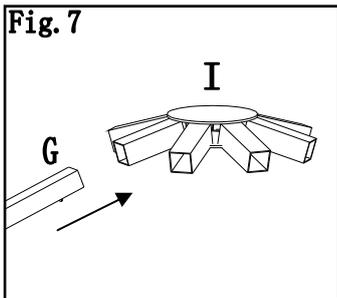


Fig.7: Insert pole (G) into center connector (I)

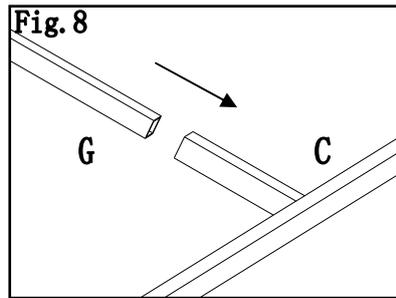


Fig.8: Insert pole (G) into long side support pole1(C),insert pole(F) with the same way, Then slip over the big canopy(Q) on the big top, do not fully spread.

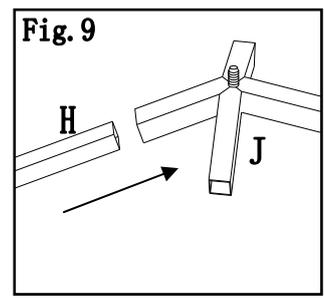


Fig.9: Insert pole (H) into center connector (J)

Hardware Pack 1

CC	“7” stake $\phi 6*180$	16 PCS	
DD	Plastic ring	52 PCS	

Step 3

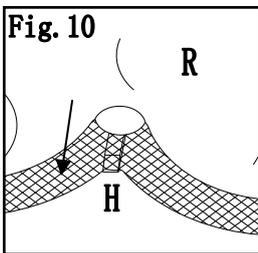
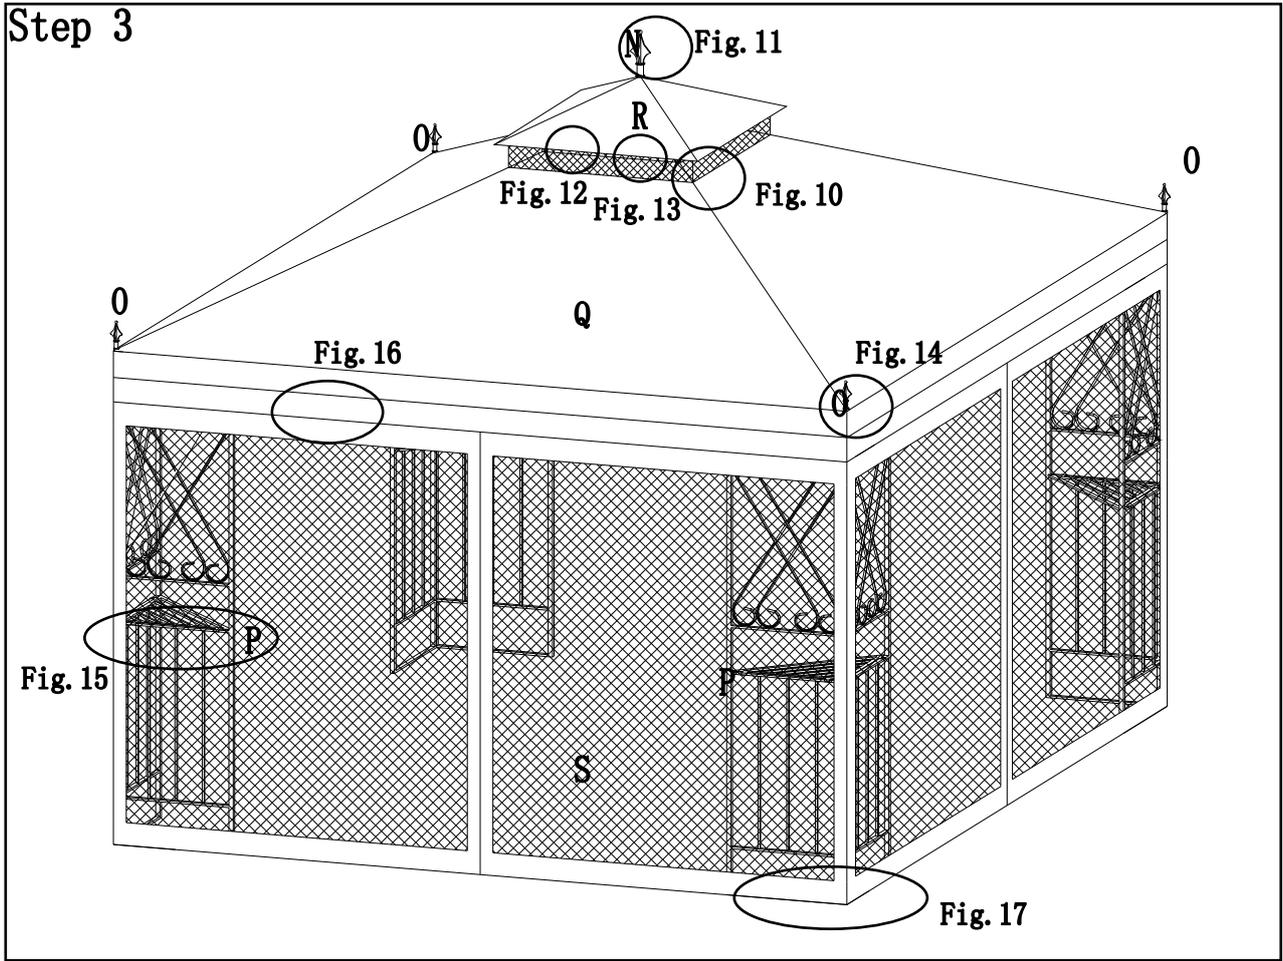


Fig.10: Slip over the small canopy(R) on four corners of

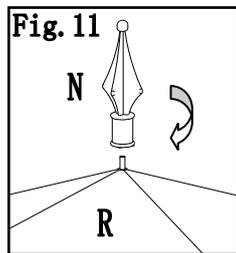


Fig.11: Install center finial onto center connector (J)

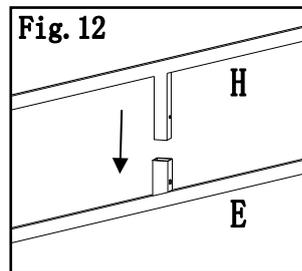


Fig.12: Insert pole (H) into pole (E) as picture

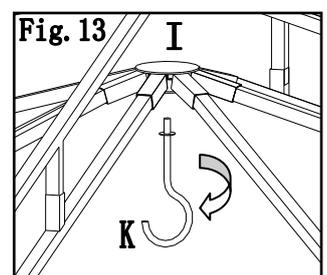


Fig.13: Attach the top hook (K) to center connector (I)

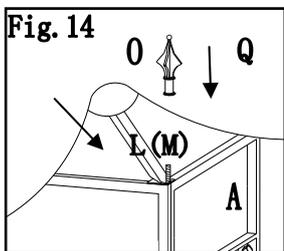


Fig.14: Slip over the big canopy (Q) on four corners of screen (A), install corner finial (O) on the pole as picture

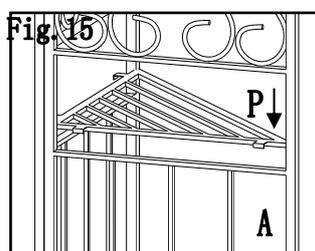


Fig.15: Install shelf (P) at the middle distance of screen (A)

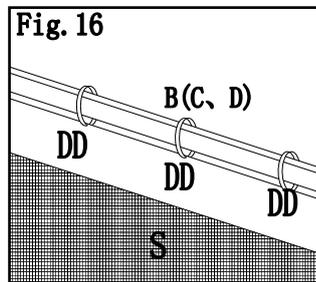


Fig.16: Hang the mosquito net on short side support pole (B), long side support pole1(C)and long side support pole2(D) by

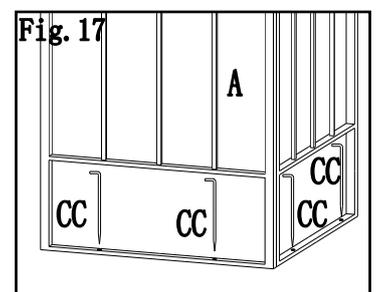


Fig.17: Fix the completely assembled gazebo by stake (CC)

Care & Maintenance:

Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is not a defect and thus not covered by the warranty.

To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint.

Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and caused damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.

Limited Manufacturer's Warranty:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **one (1) year**. We don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Exclusions:

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Made in China