
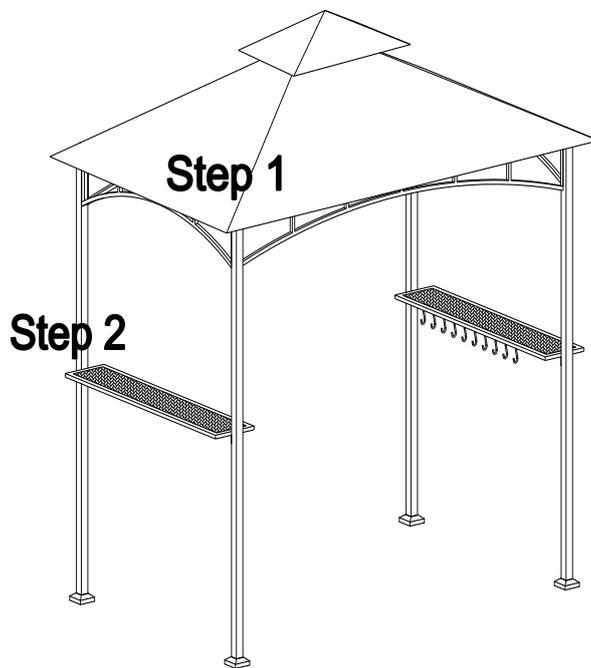


**ASSEMBLY INSTRUCTION**

**ITEM # L-GZ238PST-11C1**

 
 
 
 
 
 
 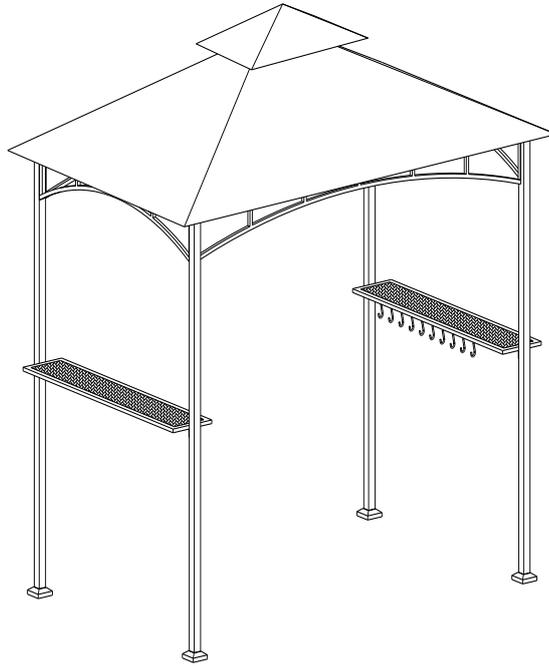


**IMPORTANT:**




Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble.





1. THIS UNIT IS HEAVY! When installing and assembling your gazebo, it is recommended that 2 or more adults are involved.
2. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
3. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.
4. Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the gazebo and to nearby property/structures.
5. Select ideal location. Set out all parts on a clear and level surface prior to assembly. Ideally, the gazebo frame should be set up in its desired location to avoid moving it after assembly.
6. Ensure that all connectors & posts are firmly secured in position fully. It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.
7. Read all instructions before assembly and using this product.
8. Tools required for assembly are: ladder, hammer, and number 2 phillips screwdriver. These tools are not included.
9. KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made of flame-resistant fabric. It is not fireproof. The fabric will burn if left in continuous contact with a flame source
10. Keep children away. Children must never be allowed in the work area. Do not let them handle parts and tools.

## Parts List

Post (1)	A1	2	
Post (2)	A2	2	
Base	B	4	
Base cover	C	4	
Beam	D	4	
Small Top Connector	F1	1	
Large Top Connector	F2	1	
Small Top Pole	G	4	
Long Support	H	2	
Short Support	I	2	
Glass side bar 1	J1	1	
Glass side bar 2	J2	1	
Small Canopy	L	1	
Large Canopy	N	1	
Hook	M	1	
Hook rack	O	1	
   
# Hardware Pack 1




AA	M6X15 Bolt	8 PCS	
BB	M6 Flat Washer	32 PCS	
CC	M6X20 Bolt	16 PCS	
DD	M6X35 Bolt	4 PCS	
EE	M6 Nut	4 PCS	
Z	M6 Wrench	1 PC	

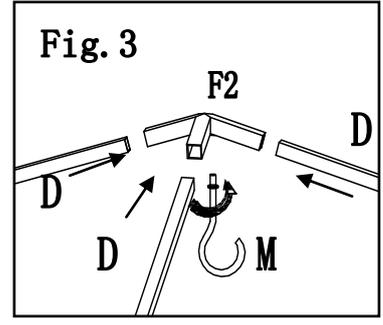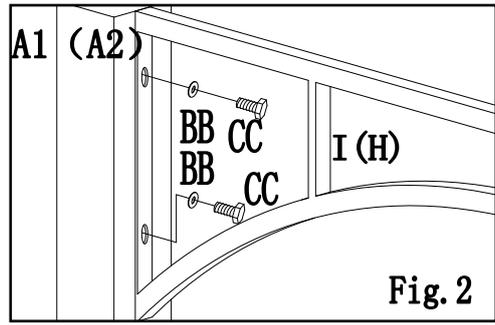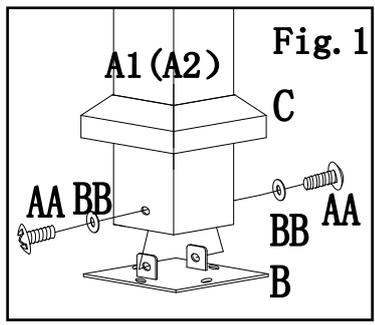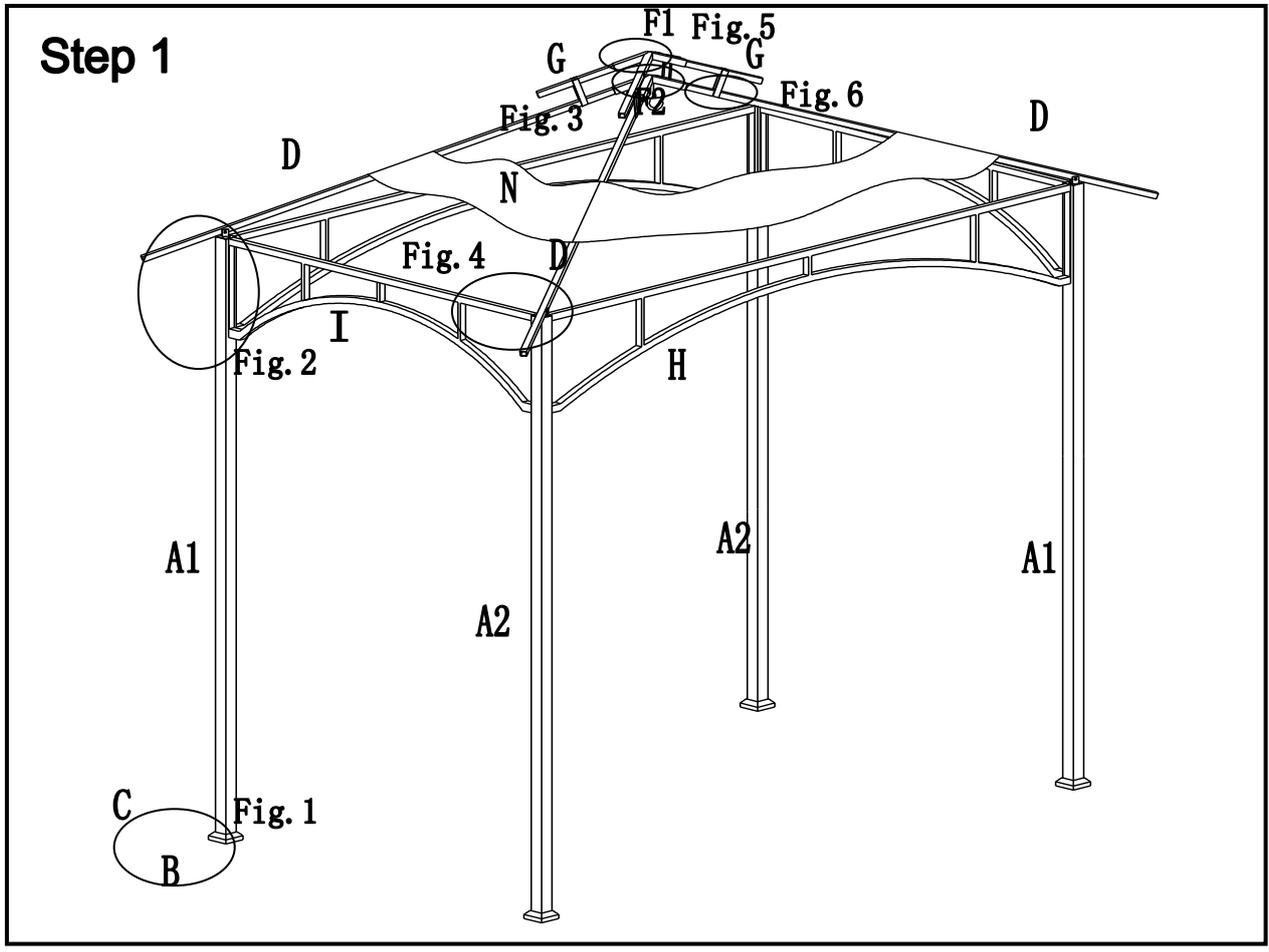

**Fig.1:** Attach the base cover (C) to post A1 (A2) , tighten Base (B) with Post A1 (A2) by using Bolt ( AA ) and Flat Washer(BB).

**Fig.2:** Attach the Long Screen (H) and Short Screen (I) to Post A1 (A2) with Bolt( CC)and Flat Washer(BB).

**Fig.3:** Insert Beam (D) into large top connector (F2), then assemble the hook (M) into the large top connector (F2)

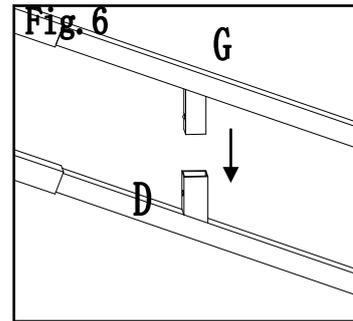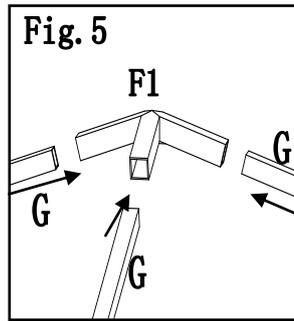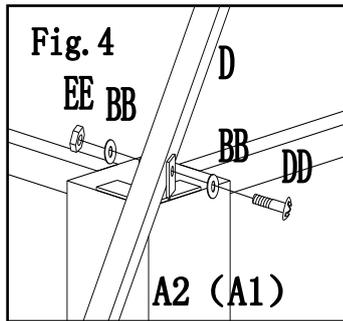



**Fig.4:** Fix Beam (D) to Post A1 (A2) with Bolt( DD) and Flat Washer(BB).

**Fig.5:** Insert small top pole (G) into small top connector (F1).


**Fig.6:** Put large canopy (N) onto the large top, do not fully spread, attach the assembled small top pole to large beam (D).

## Hardware Pack 2


AA	M6X15 Bolt	3 PCS	
BB	M6 Flat Washer	7 PCS	
CC	M6X20 bolt	4 PCS	
FF	Φ6X180MM "7"stake	8PCS	

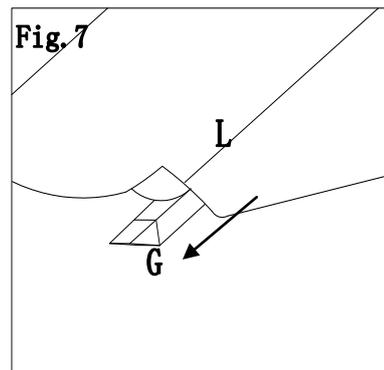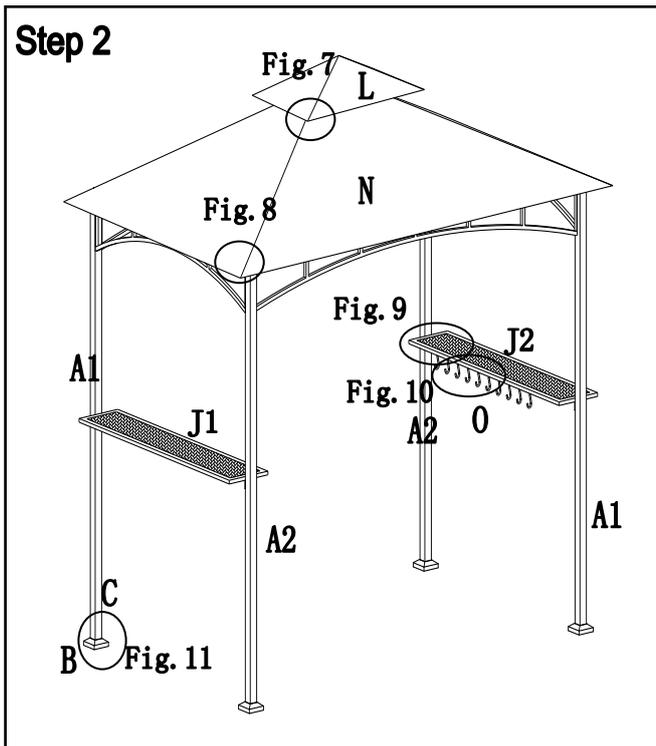


**Fig.7:** Spread the small canopy (L), Put small canopy onto assembled small top pole, then cover four corners.

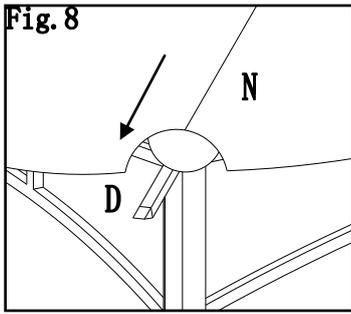


**Fig.8:** Spread the large canopy (N), put large canopy onto assembled beam (D), then cover four corners

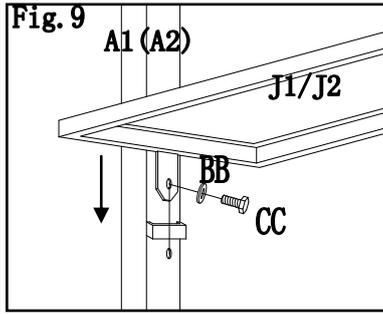

**Fig.9:** Attach the connector of glass side bar J1 (J2) to U shaped plate on the post then tighten the connections by bolt (CC) and flat washer (BB)

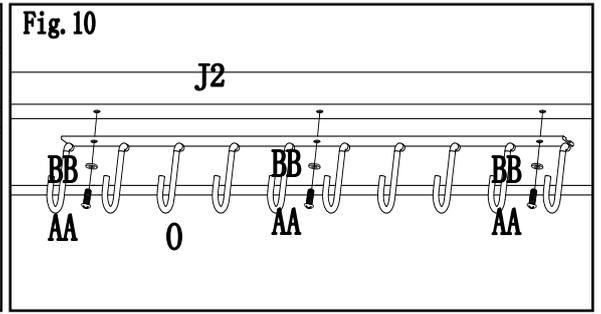

**Fig.10:** Attach hook rack (O) to glass side bar J2 by using bolt (AA) and flat washer (BB).

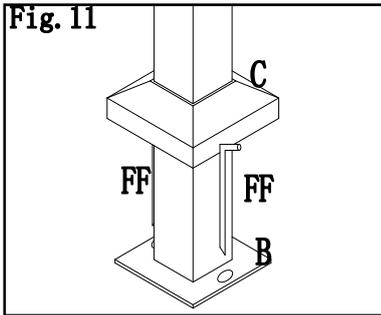

**Fig.11:** Lift up the base cover(C), secure the completely assembled gazebo into the ground by using “7” stakes (FF).

## **Important**

Please do not return this product to the store. For technical assistance or replacement parts, please call Sunjoy Group at 1 (866) 578-6569 between 8:00 AM EST and 8:00 PM PST. You may fax your replacement parts form (which is included in the packaging) to 1 (740) 283-3549 or email to [customer.care@sunjoygroup.com](mailto:customer.care@sunjoygroup.com)

## **Care & Maintenance**

- Before using, clean the product completely with a soft, dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely.
- Do not use strong detergent or abrasive cleaners.
- Do not machine wash.
- Bolts can loosen over time. Be sure to check bolts occasionally, tightening as needed.
- This gazebo is not a permanent structure and should be disassembled & stored away after use.
- Our iron/steel components for garden accessories and patio items are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

## **Limited Warranty**

- This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided, The item is maintained with care and used only for personal, residential purposes.
- The item is warranted to be free from defects in material or workmanship for a period of half a year. If any defect is found, please call our customer service department at 1-866-578-6569 for help. The manufacturer will not cover transportation or delivery costs, **nor** compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## **Exclusions**

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.