


# Assembly Intruction

Item#: 110103016

Vendor code: D-GZ238PST-11K

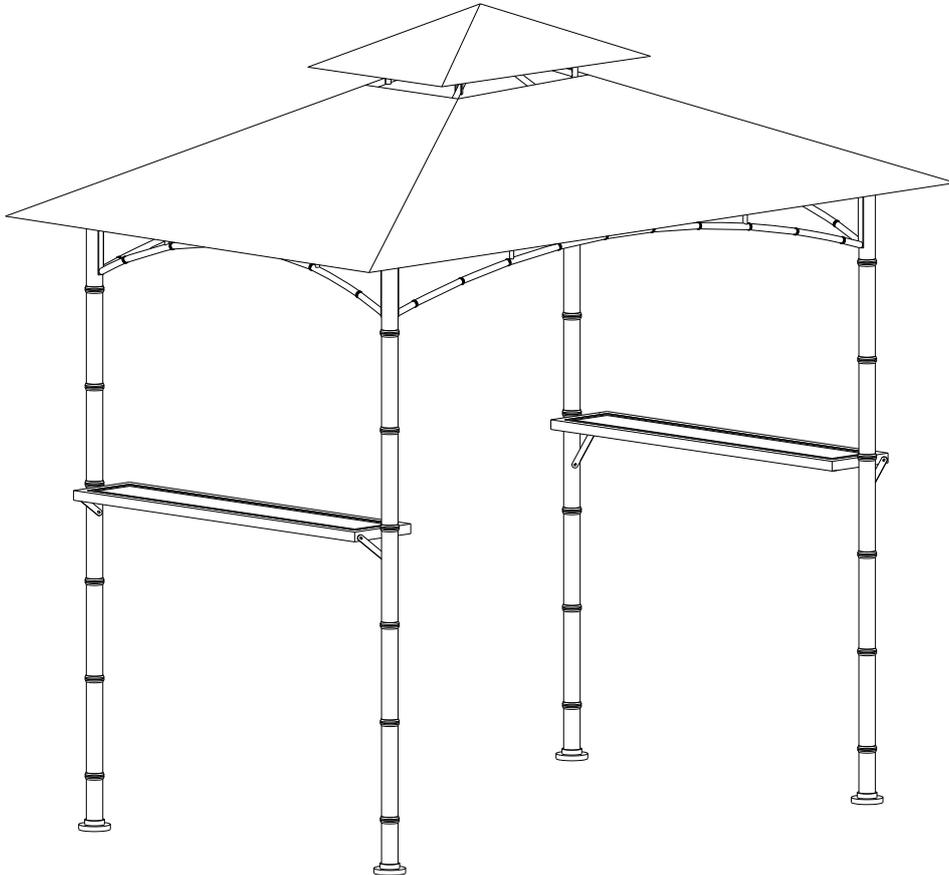

**Thank you for your purchase!** We are pleased that you have chosen Sunjoy for your outdoor furniture purchase. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish.

## **Safety information**

- Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the production construction.
- This package contains small items and plastic bags that should be kept away from children.
- Proper placement of your product is essential. Do not place the product underneath electrical lines.
- Keep fingers away from places where they can be pinched or trapped.
- Some parts may contain sharp edges, wear protective gloves if necessary during assembly.
- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
- Check all screws for tightness before and during usage. Ensure that all connectors and poles are firmly and fully secured into position. It is important to do so before use so as to avoid a possible collapse or damage to the item, which could also result in injury.
- This product is intended for outdoor use only. Install on flat, level ground.
- Stakes are provided to secure the gazebo in grass ground. If you wish to secure the gazebo to a wood deck or concrete surface, you will need to purchase fasteners appropriate (such as expansion bolt) for these surfaces. These are readily available at your local hardware store or home center.
- The gazebo's roof and structure are not guaranteed against extreme weather conditions (storms, high winds, etc.). If the gazebo is not dismantled for the winter, snow must be cleaned off regularly. Any damage caused by snow accumulation is not covered by the warranty.
- Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
- Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the structure. Remove fabric roof and secure screen & privacy panels.
- Warranty does not cover damage due to extreme weather conditions.
- Please check your state and local regulations prior to purchasing. Some jurisdictions may require permits for, or otherwise regulate, installation and use.
- Do not use candles, matches or open flames of any kind in or near a tent.
- Build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night.
- Exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery-operated lanterns whenever possible.
- Extinguish or turn off all lanterns before going to sleep. Do not smoke in a tent.
- Tools Required for assembly (NOT included): **Screwdriver, a hammer, and a ladder not lower than 2m (about 6.6 feet).**

## **Warning**

**Keep all flame and heat sources away from this tent fabric.** This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.


## **Assembly Preparation**

- Please read and understand this entire manual before attempting to assemble or install the product. Keep this manual for future reference.
- Keep the original packaging to store the product.
- Before beginning assembly of product, make sure all parts are present. Do not attempt to assemble the product if any parts are missing.
- For technical assistance on assembly or replacement parts please call our customer service department at

 
 
 
 
 
 
 
 
1-866-578-6569 for help.

- Do not assemble this item alone. At least **two** or more people are recommended for safe assembly.

 
 
 
 
## Step 1




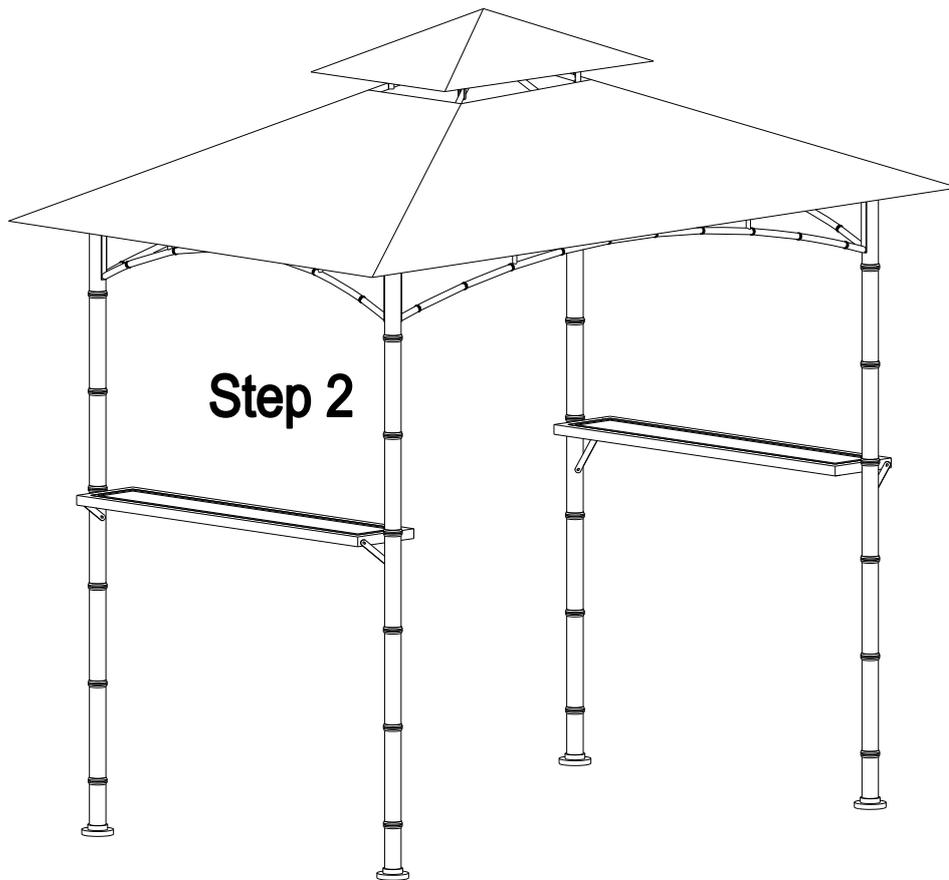


## Parts List



Description	Part#	Label	Qty	Image
Pole 1	GZ023811K01	A1	2	
Pole 2	GZ023811K02	A2	2	
Long screen	GZ023811K03	B	2	
Small screen	GZ023811K04	C	2	
Corner top beam	GZ023811K05	D	4	
Big top connector	GZ023811K06	E	1	
Small top connector	GZ023811K07	F	1	
Small top bar	GZ023811K08	G	4	
Shelf	GZ023811K09	H	2	
Supporter	GZ023811K10	I	4	
Hook	GZ023811K11	J	1	
Small canopy	GZ023811K12	K	1	
Big canopy	GZ023811K13	L	1	
LED Light	GZ023811K14	M	4	

# Hardware Pack 1

Description	Part#	Label	Qty	Image
M6X20 Bolt	BM06020C	AA	16	
M6 Flat washer	UD06C	BB	32	
M6X40 Bolt	SM06040C	CC	8	
M6 Nut	LM06C	DD	8	
M6 Wrench	W10D	Z	1	

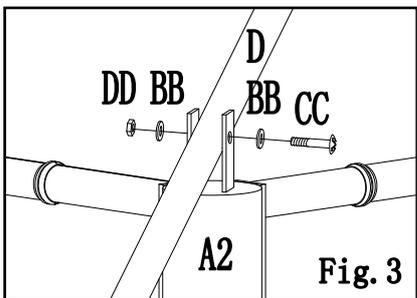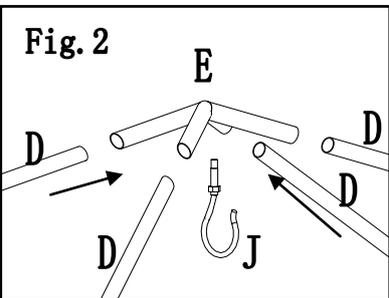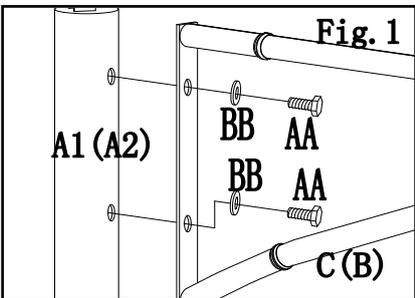
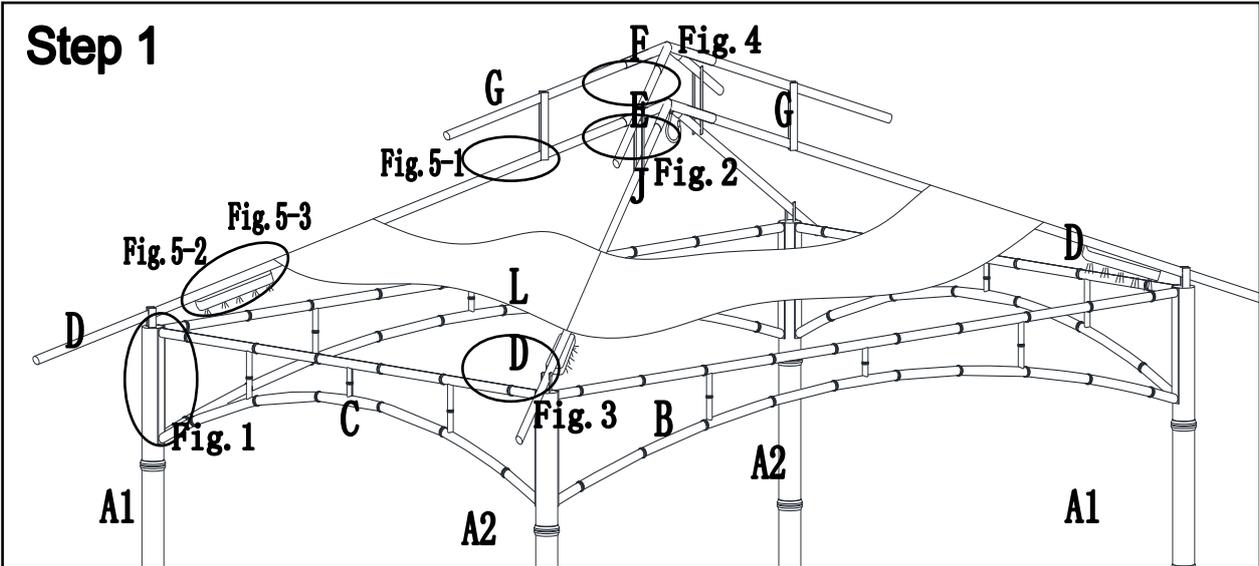


- Fig.1:** Attach Screen C (B) to Pole A1 (A2) by Bolt (AA) and Flat washer (BB).
- Fig.2:** Attach Hook (J) to Big top connector (E). Then insert Corner top beam (D) into Big top connector (E).
- Fig.3:** Connect Corner top beam (D) and Pole 2(A2) by Bolt (CC), Flat washer (BB), and Nut (DD).

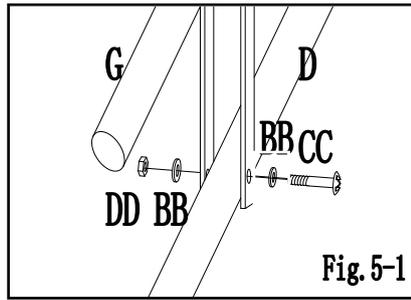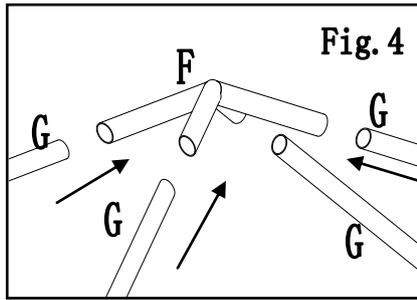

**Fig.4:** Insert Small top bar (G) into Small top connector (F).

 
**Fig.5-1:** First put the big canopy (L) onto the top of the gazebo (Do not fully spread). Then connect Small top bar (G) and Corner top beam (D) by Bolt (CC), Flat washer (BB), and Nut (DD).




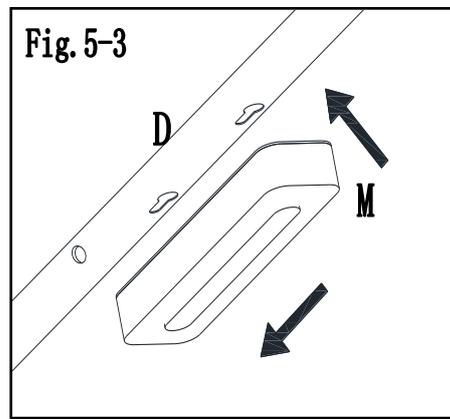
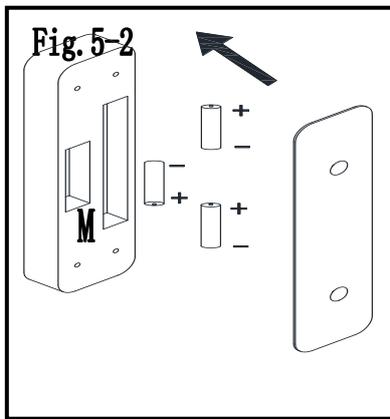


**Fig.5-2:** Take off the back cover of LED light (M), and match batteries into sockets. Attach back cover to LED light (M) ( AAA batteries are not included).

**Fig.5-3:** Hang the assembled LED light (M) into holes of Beam (B) (Note: Pull down forward tightly after LED lights hung into Beam holes).

### Hardware Pack 2

Description	Part#	Label	Qty	Image
M6X20 Bolt	SM06020C	EE	8	
M6 Flat washer	UD06C	BB	8	
Φ6X180MM Stake	DD06180C	FF	12	

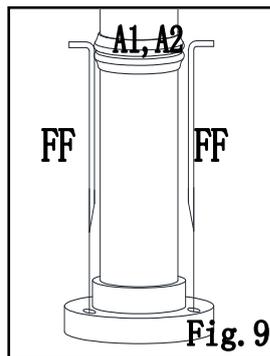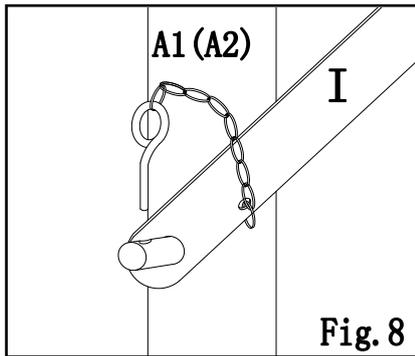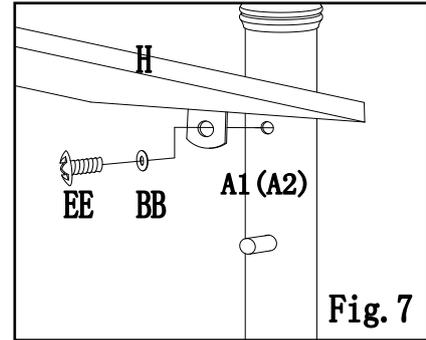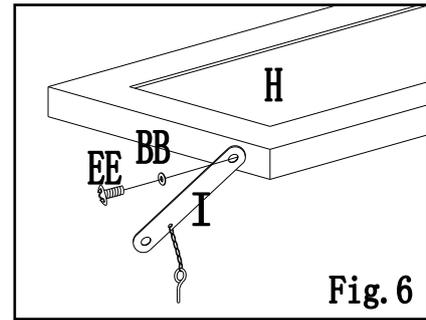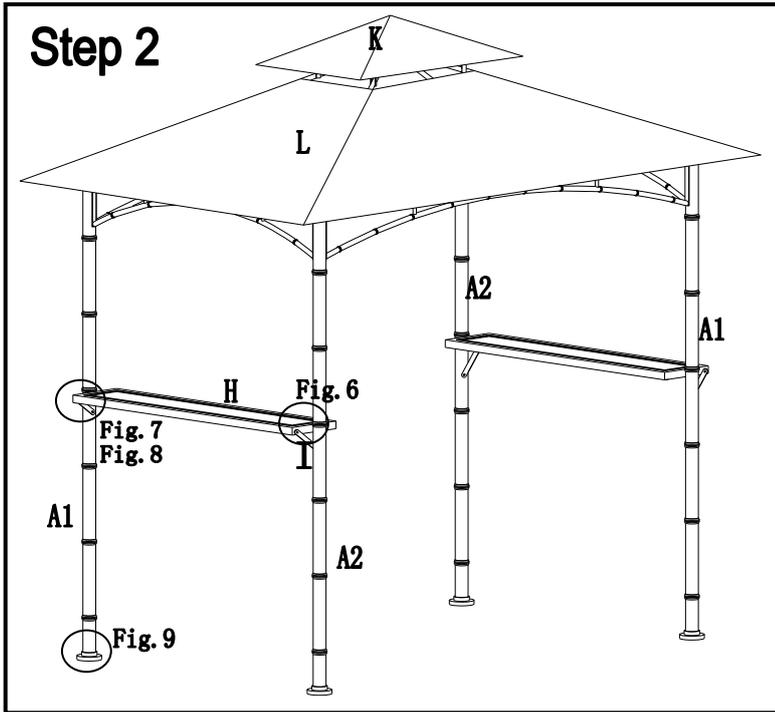

**Fig.6:** Attach Supporter (I) to Shelf (H) by Bolt (EE) and Flat washer (BB).

**Fig.7:** Attach Shelf (H) to Pole A1 (A2) by EE and Flat washer (BB).

**Fig.8:** Fix Supporter (I) to Pole A1 (A2), and then insert the pin on the pole into the hole at the end of the Supporter (I).

**Fig.9:** Using the Stake (FF) to fix up the Gazebo.

## **Important**

Please do not return this product to the store. For technical assistance or replacement parts, please call Sunjoy Group at 1 (866) 578-6569 between 8:00 AM EST and 8:00 PM PST. You may fax your replacement parts form (which is included in the packaging) to 1 (740) 283-3549 or email to [customer.care@sunjoygroup.com](mailto:customer.care@sunjoygroup.com)

## **Care & Maintenance**

- Before using, clean the product completely with a soft, dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely.
- Do not use strong detergent or abrasive cleaners.
- Do not machine wash.
- Bolts can loosen over time. Be sure to check bolts occasionally, tightening as needed.
- This gazebo is not a permanent structure and should be disassembled & stored away after use.
- Our iron/steel components for garden accessories and patio items are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

## **Limited Warranty**

- This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided, The item is maintained with care and used only for personal, residential purposes.
- The item is warranted to be free from defects in material or workmanship for a period of 6 months. If any defect is found, please call our customer service department at 1-866-578-6569 for help. The manufacturer will not cover transportation or delivery costs, **nor** compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## **Exclusions**

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

**Made in China**  
**2016-11**