


Assembly Instructions

10'x20' Shelter

Item: L-GZ761PST

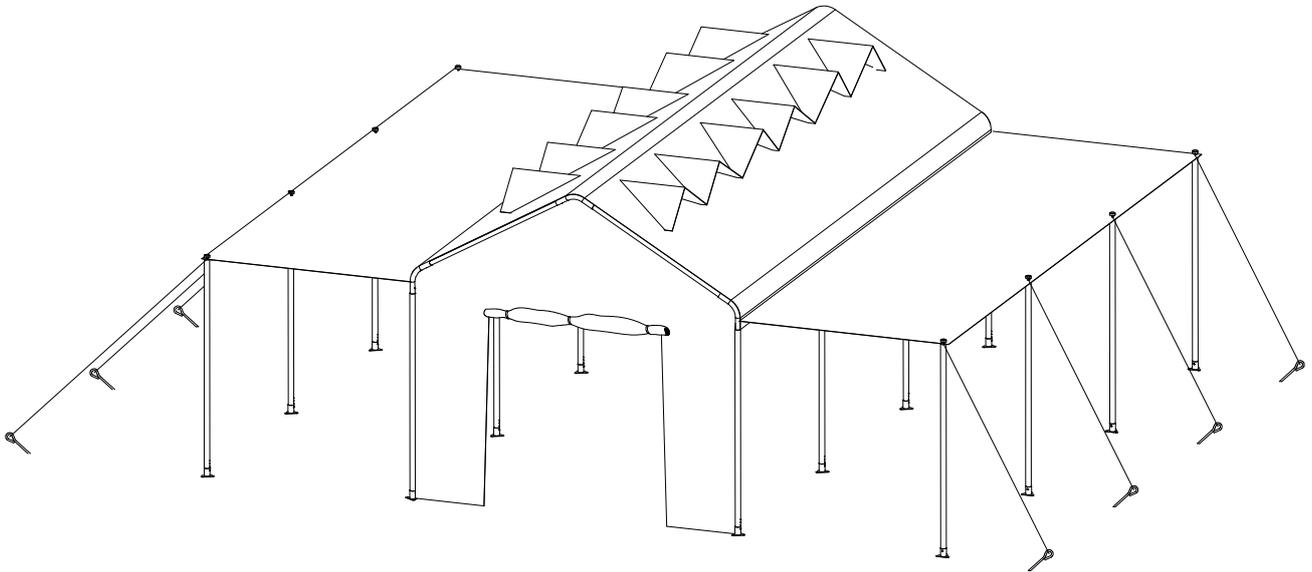

 



Our clear, easy-to-follow, step-by-step instructions will guide you through the project from start to finish. All you will need is a hammer and ladder (not included) whose height is no less than 2.5m.

Item Identification: For ease of identification, all parts are labeled to correspond to the Step number in which the part is used.



PRECAUTIONS:

- ◆ Do not cook underneath canopy.
- ◆ Do not ignite fireworks underneath canopy.
- ◆ Do not bleach canopy to clean.
- ◆ Do not dry clean.
- ◆ Do not wash in washing machine or dry in dryer.
- ◆ Lower and secure side panels if open in stormy conditions.
- ◆ Be certain to brush snow off cover in winter
- ◆ This is a temporary structure and is not recommended as a permanent structure.


Parts List

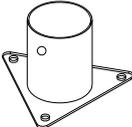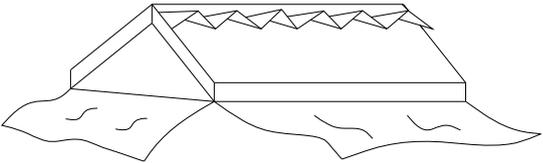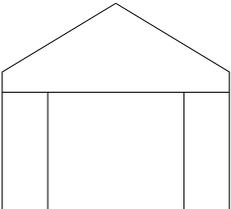3-way corners for horizontal bar	A	6	
4-way corners for horizontal bar	B	6	
Post (1)	C	8	
Horizontal bar	D	9	
Incline bar	E	8	
Post (2)	F	8	
Post base	G	16	
Screw cap	H	8	
Top canopy	I	1	
Short side panel	J	2	
Stake	K	48	
Peg	L	8	

 Hardware Pack 1

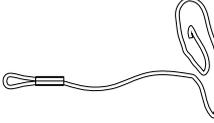Flat washer M8	AA	12	
Nut M8	BB	16	
Bolt M8*60	CC	16	
Elastic ball strap	DD	46	
Rope L=3000mm	EE	8	
Wrench M8	FF	2	


Frame Assembly Layout

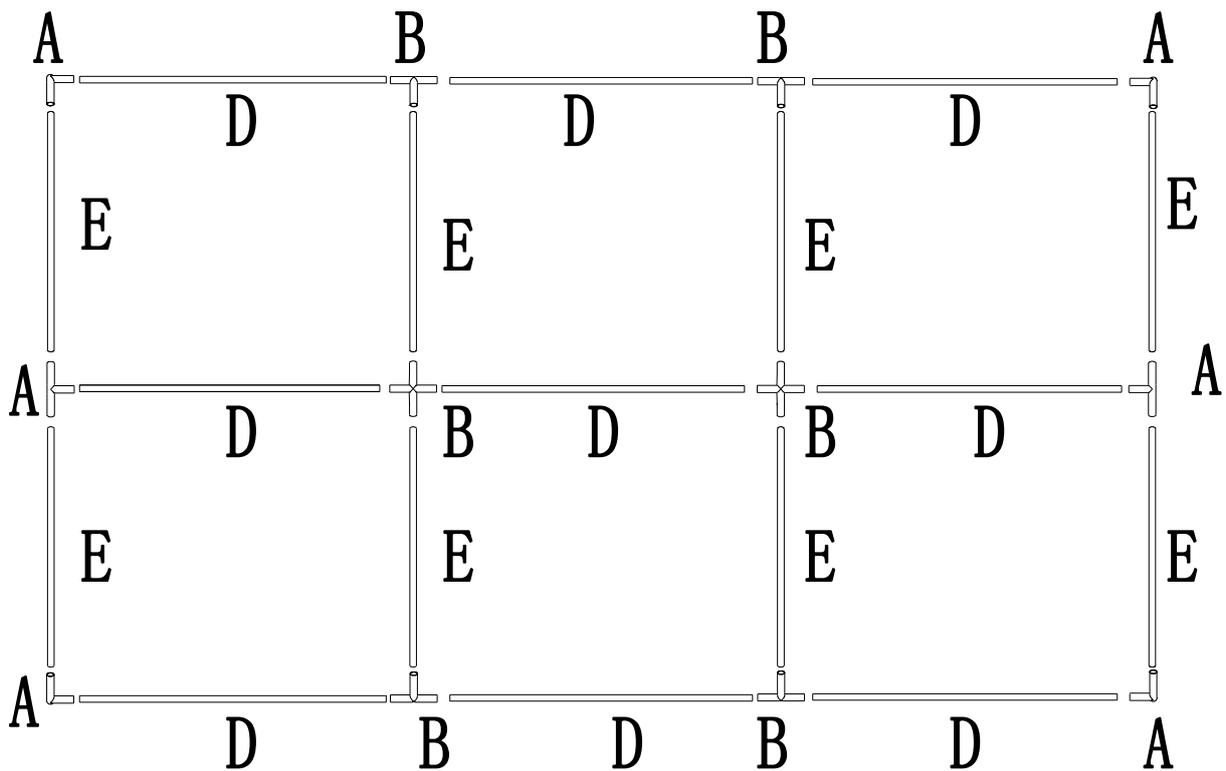

1. Incline bar (E)
2. Horizontal bar (D)
3. 4-way corners (B)
4. 3-way corners (A)

Frame Assembly


Each bar (E, D) has a spring-activated button for locking into the corner pieces. Insert Incline bar (E) and Horizontal bar (D) into corners (A, B) as shown below and the spring-activated button will lock into the corner pieces.

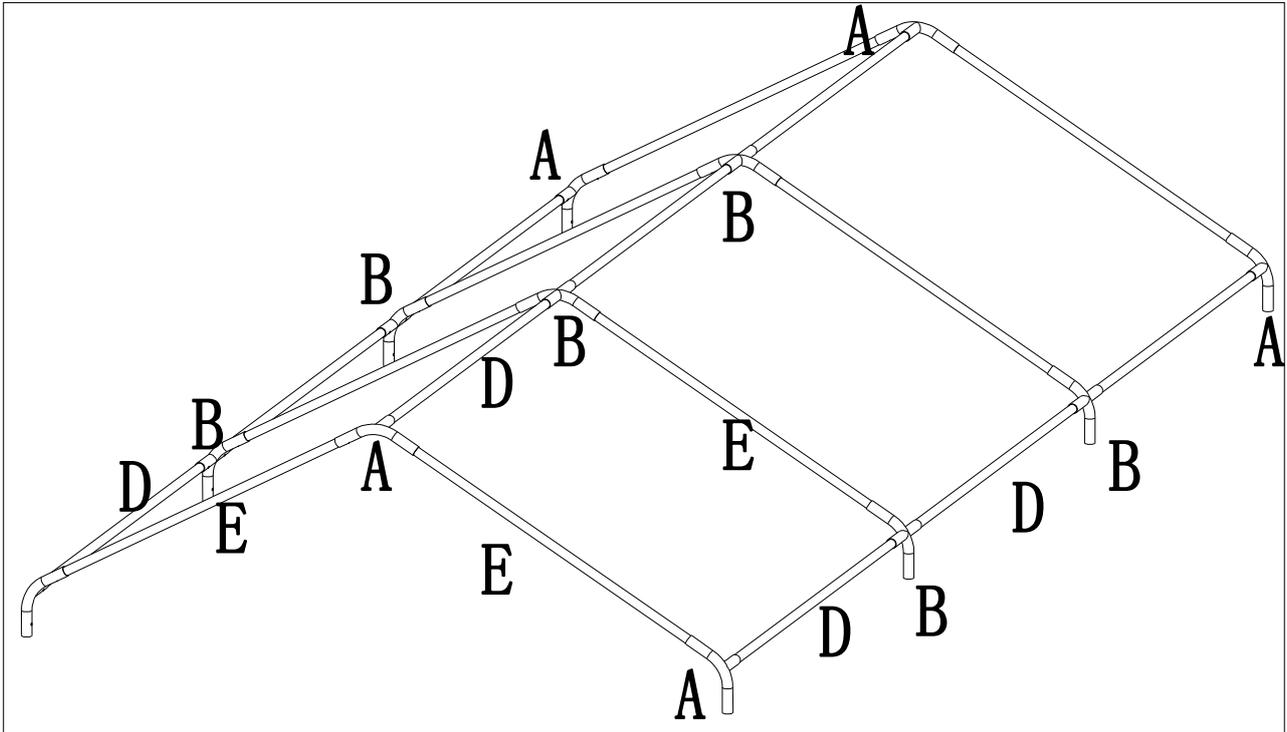

Top Canopy Assembly


Spread the top canopy (I) over the inclined frame as shown below.

Stand the support bar of the vents as shown below

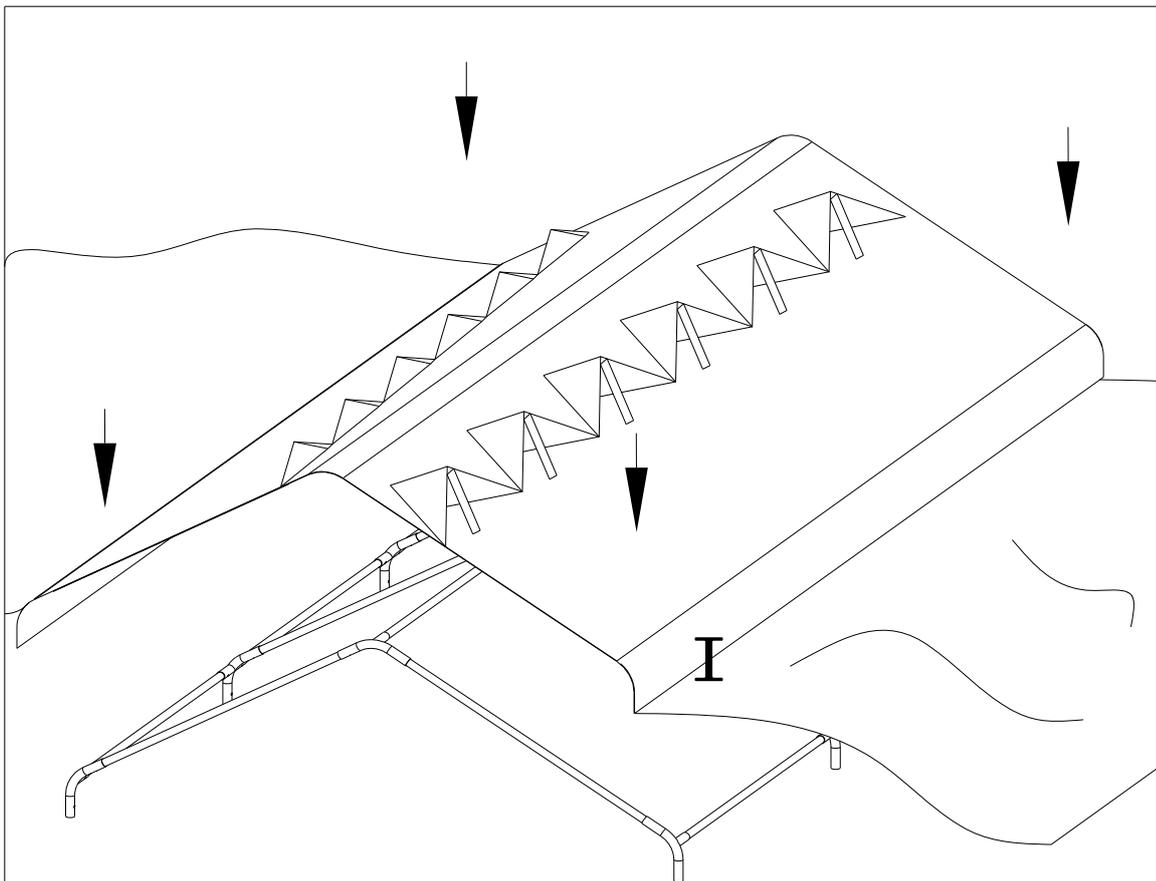

Short side panel Assembly

Tie the short side panel (J) to the incline bar (E) with the elastic ball strap (DD) as shown below.

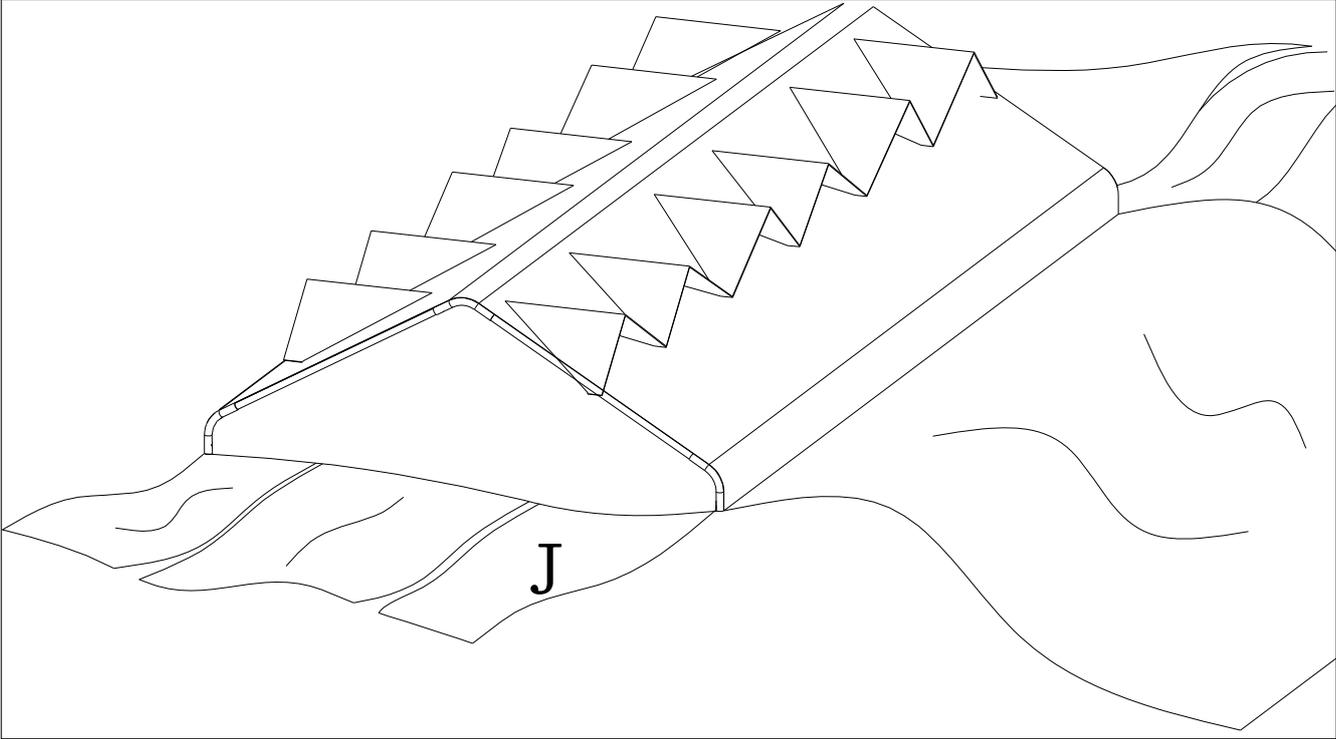

Insert the strap through the grommet on the canopy. Wrap the strap around the bar and then around the ball to lock the ball in place, as shown in Fig.1 & Fig.2.

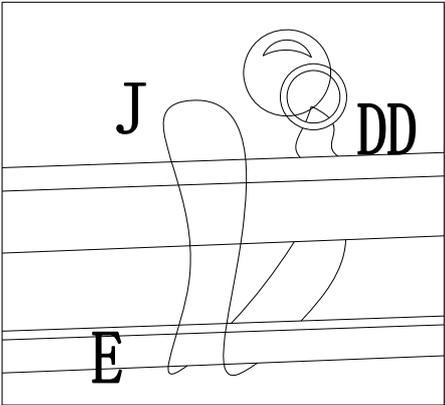


Fig. 1


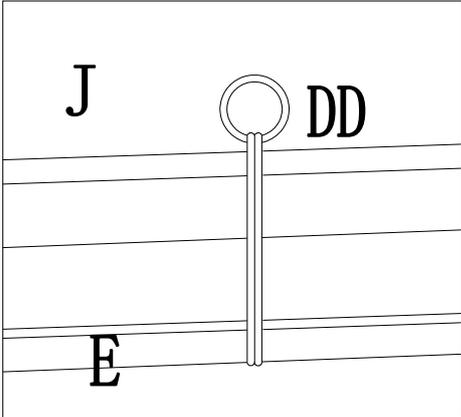


Fig. 2

Post (1) Assembly

Each post (1) has a spring-activated button for locking into the corner pieces. Insert post 1 (C) to post base (G) and tighten with bolt (CC), flat washer (AA) and nut (BB). There are two optional holes on the bottom of the posts. Level the frame by choosing the proper holes in the posts. Insert the shrinkage end of post (1) to corners, and tighten with spring-activated button.

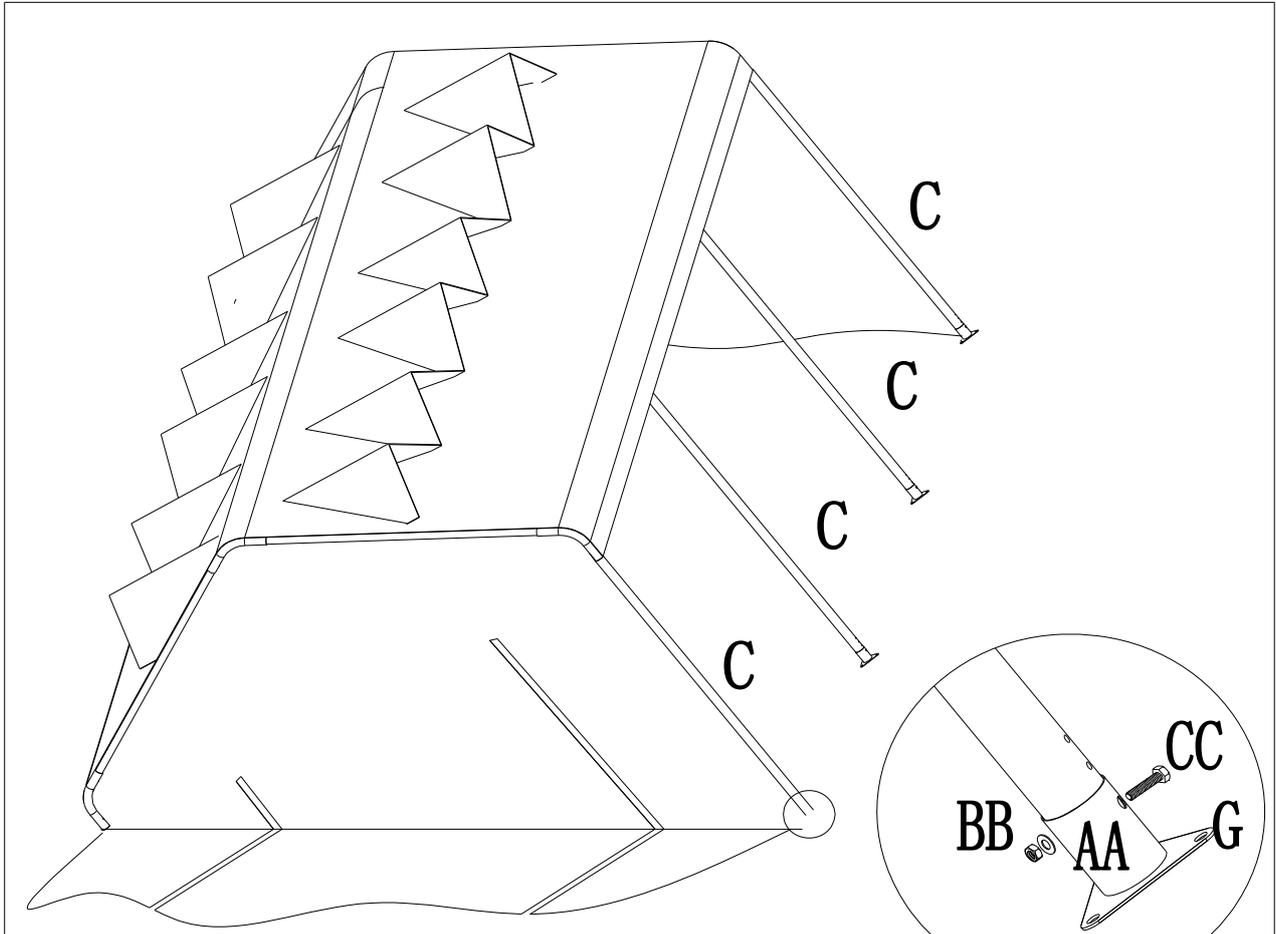

Roll up long side panel

Roll up both of long side panels to the horizontal bar (D) with the elastic ball strap (DD) as shown below.

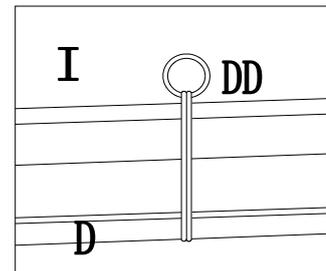
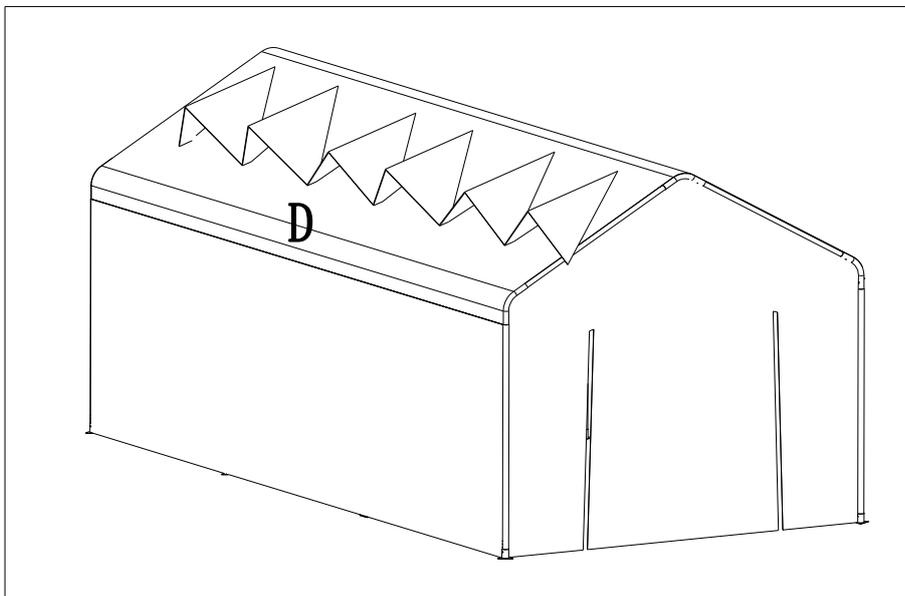


Fig. 2


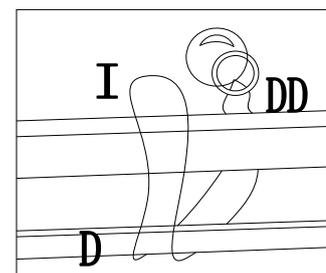


Fig. 1

Post (2) Assembly

Insert post 2 (F) to post base (G) and tighten with bolt (CC), flat washer (AA) and nut (BB). Insert stake (K) to post base (G), then attach the side panel of top canopy (I) and the assembled end of rope (EE) to the screw of top post (2) and fix them by screw cap (H). Finally, attach the other end of the rope to peg (L), and fix it on the lawn as shown below.

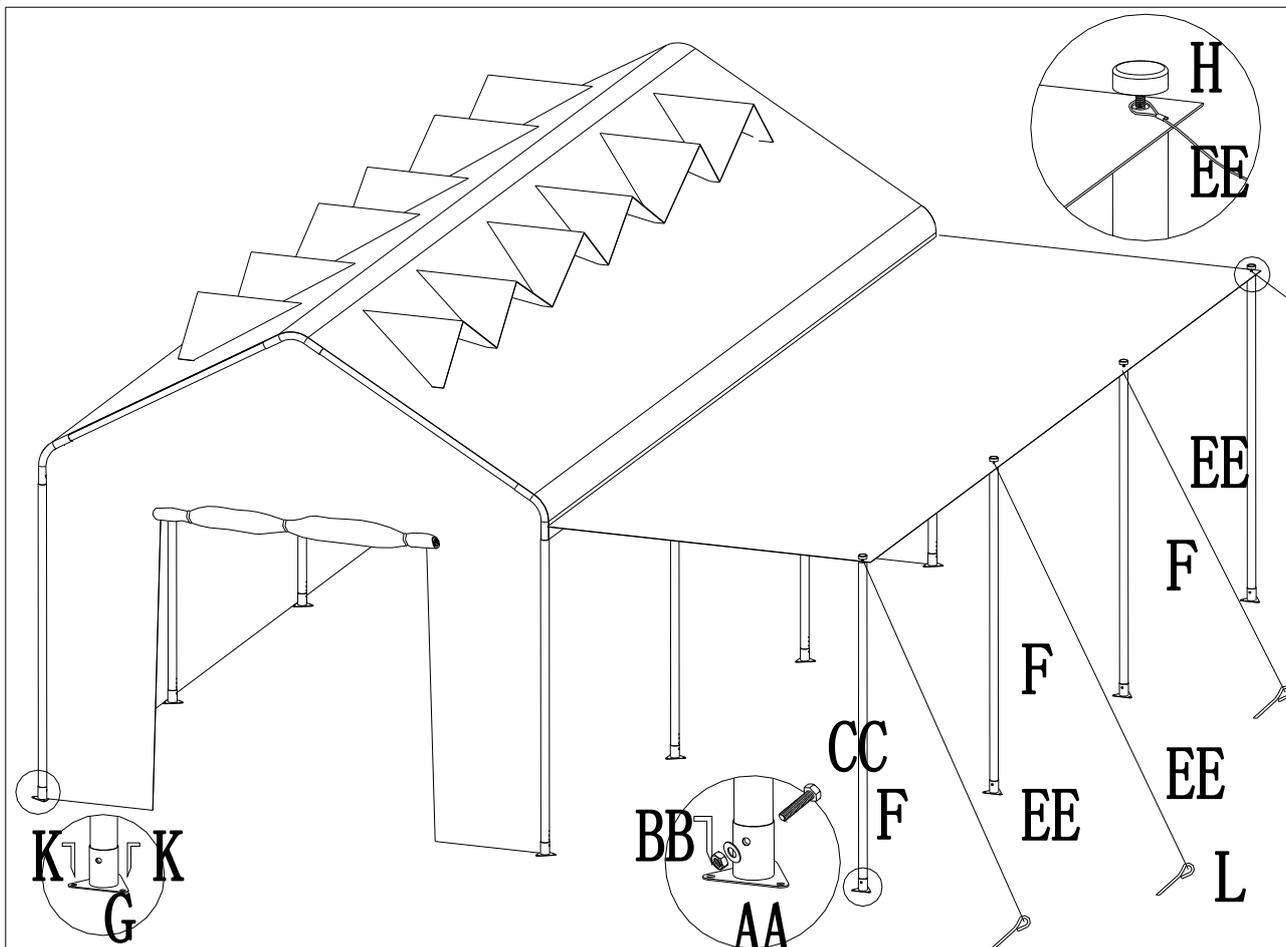

IMPORTANT:

1. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
2. Some parts may contain sharp edges, wear protective gloves if necessary. At least four or more people are recommended for safe assembly.
3. Keep all children and pets away from assembly area.
4. At least 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
5. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
6. The fabric roof should be removed for the winter in areas subject to heavy snowfall. A fabric roof could accumulate a lot of snow/weight which genuinely could be an issue. Remove fabric roof and panels to poles, when there is a risk of high wind, as possible damage will occur to the structure.
7. Install on level surface.
8. Never barbecue under this gazebo or use lanterns that have open flames.
9. This package contains small items and plastic bags that should be kept away from children.
10. Check all nuts and bolts for tightness before and during usage. Ensure that all connectors and poles are firmly secured in position fully. It is important to do so before use so as to avoid a possible collapse or damage to the item, which could also result in injury.

WARNINGS:

1. Assembly Instructions must be followed.
2. Pegs & ropes supplied must be used to hold this gazebo in place when upright.
3. Warranty does not cover damage due to extreme weather conditions.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

This unit is heavy. Do not assemble this item alone.

LIMITED WARRANTY:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **1 year**. If any defect is found, please call our customer service department at 1-866-578-6569 for help. The manufacturer will not cover transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Important: For technical assistance on assembly or replacement parts, please call Sunjoy Industries at 1(866) 578-6569 from 8:00 AM EST to 8:00 PM PST or email to customer.care@sunjoygroup.com or visit www.sunjoyonline.com to place your order or fax your parts replacement order form together with your purchase receipt to 1-740-283-3549 for assistance.

Made in China