


ASSEMBLY INSTRUCTIONS

D-GZ761PST-A SHELTER

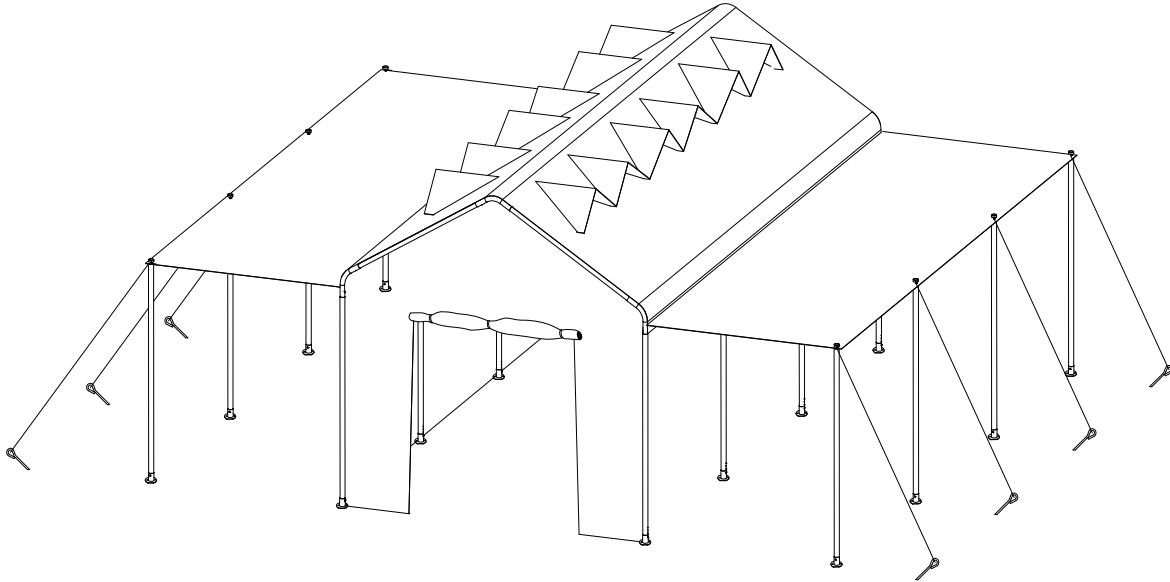

Our clear, easy-to-follow, step-by-step instructions will guide you through the project from start to finish. All you will need is a hammer and ladder (not included) whose height is no less than 2.5m.

 



 
 
 

 
 
 

 


Item Identification: For ease of identification, all parts are labeled to correspond to the Step number in which the part is used.

 
 

 
PRECAUTIONS:

- This unit is heavy. Do not assemble this item alone.
- Do not cook underneath canopy.
- Do not ignite fireworks underneath canopy.
- Do not bleach canopy to clean.
- Do not dry clean.
- Do not wash in washing machine or dry in dryer.
- Lower and secure side panels if open in stormy conditions.
- Be certain to brush snow off cover in winter
- This is a temporary structure and is not recommended as a permanent structure.

IMPORTANT


For technical assistance on assembly or replacement parts, you can call us toll-free at 1-866-578-6569 from 8 a.m. EST to 8 p.m. PST or email to customer.care@sunjoygroup.com or visit www.sunjoyonline.com to place your order or fax your parts replacement order form together with your purchase receipt to 1-740-283-3549 for assistance.

PARTS LIST			
DESCRIPTION	PART#	QTY	LINE DRAWING OF PART
Corner connector	A	6	
Corner connector	B	6	
Post 1	C	8	
Cross bar	D	9	
Slanting bar	E	8	
Post 2	F	8	
Stake base	G	16	
Screw cap	H	8	
Top canopy	I	1	
Side wall (short)	J	2	
Side wall (long)	K	1	
Stake	L	20	
Peg	M	8	
Flat washer M6	AA	16	
Nut M6	BB	16	

Bolt M6*60	CC	16	
Loop	DD	40	
Rope L=3000	EE	8	
Wrench M6	FF	1	

Assembly Steps:


Frame Assembly Layout

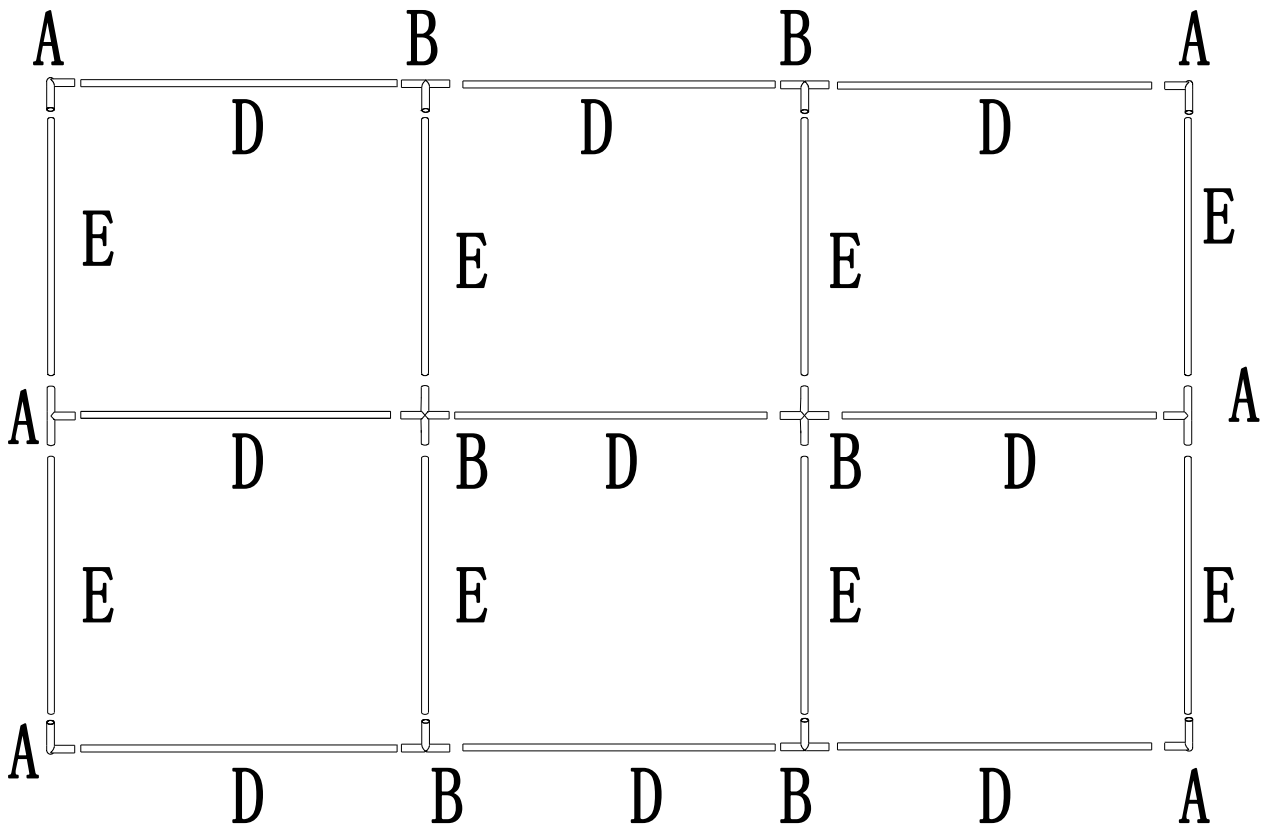

1. Slanting bar (E)
2. Cross bar (D)
3. Corner connector (B)
4. Corner connector (A)


Frame assembly

Insert Slanting bar (E) and Cross bar (D) into Corner connector (A/B) respectively and lock them with the spring tab on the bars.

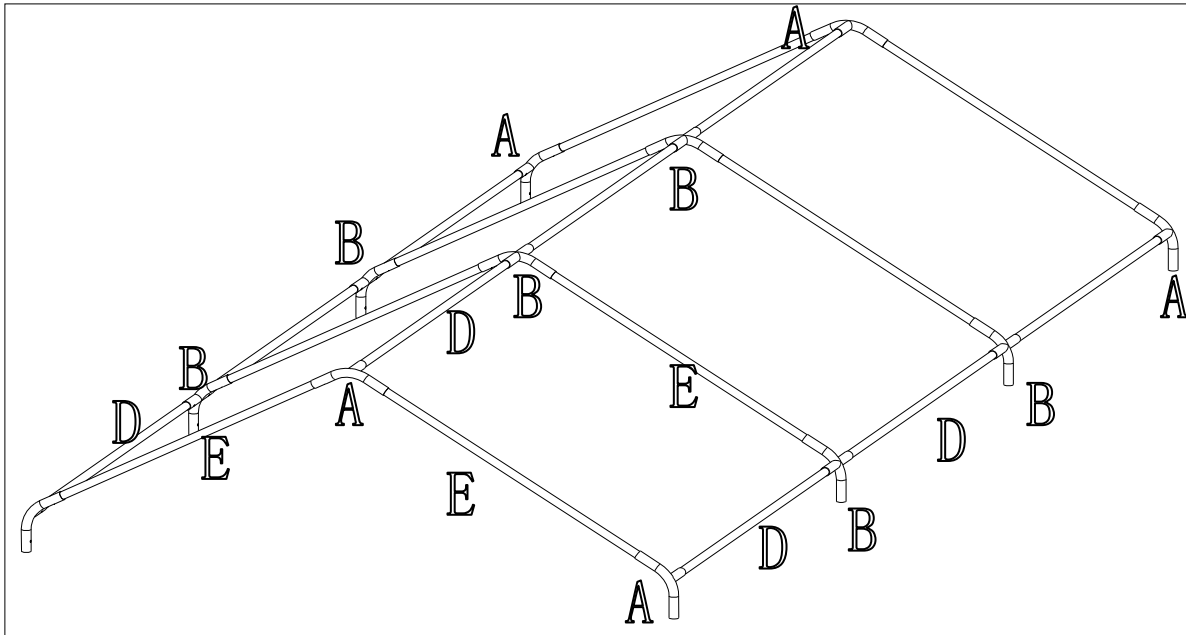

Top canopy assembly

Place and spread Top canopy (I) on the top of the frame.

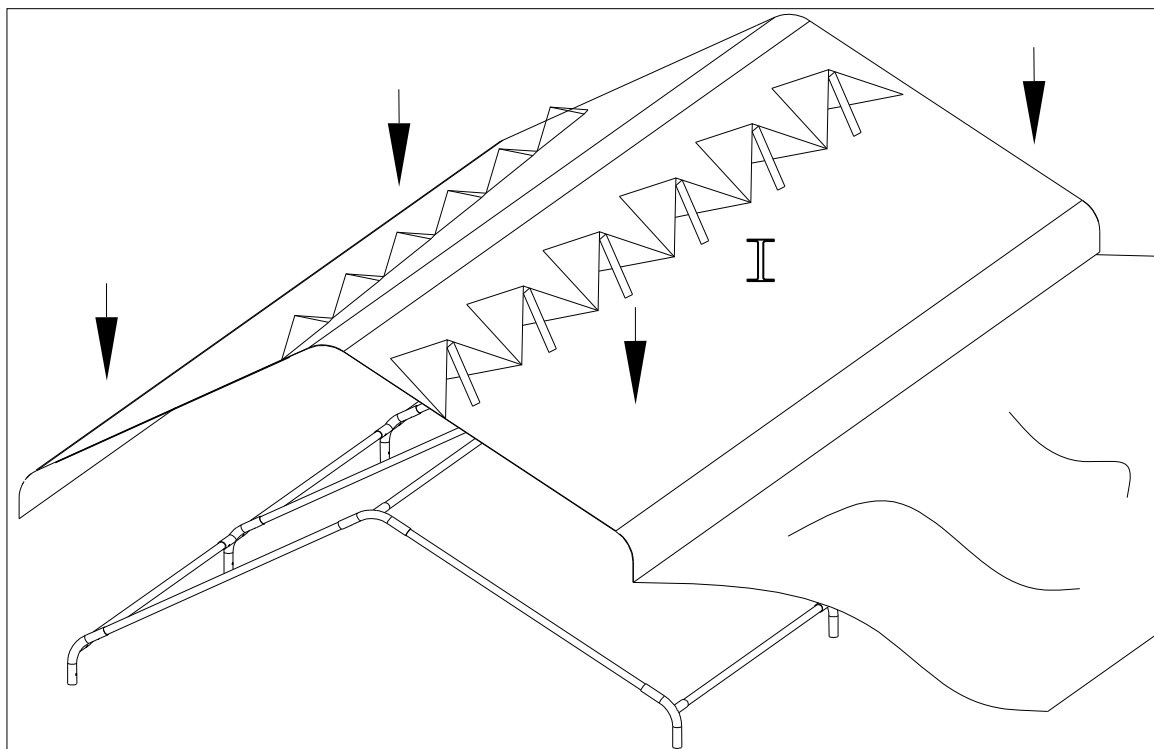

Short side wall Assembly

Pull Side wall (J) on Slanting bar (E) and secure it with Loop (DD). Refer to Fig 1. and Fig 2. Below.

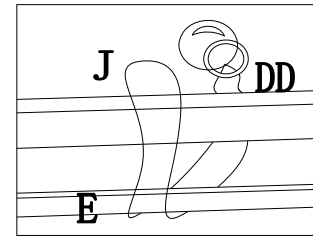
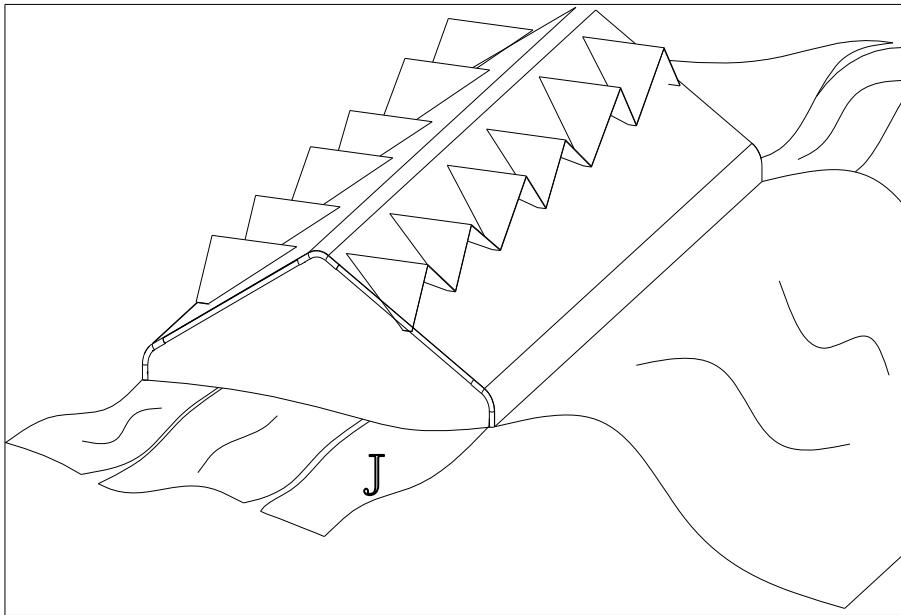


Fig. 1


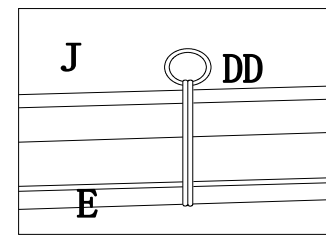


Fig. 2


Post 1 Assembly

Insert Post 1 (C) into Stake base (G) and secure them with Bolt (CC), Washer (AA) and Nut (BB). Insert the other end with extended tube of Post 1 (C) and lock them with the spring tab on it.

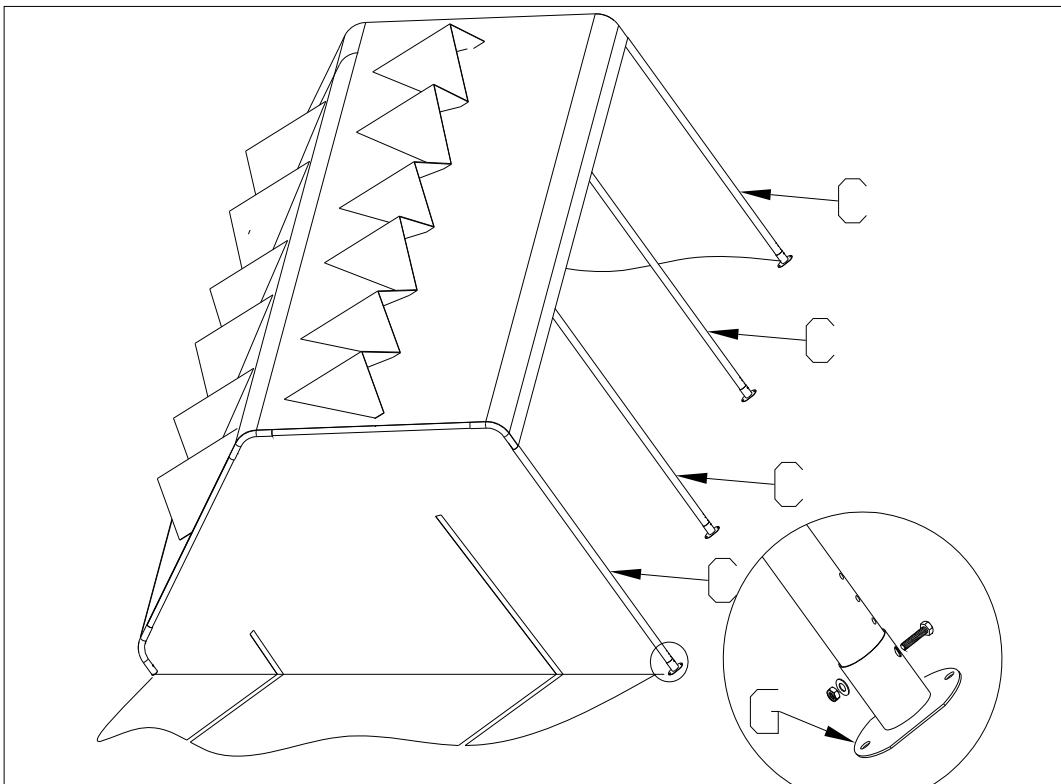

Long Side wall Assembly

Secure Side wall (K) onto Cross bar (D) with Loop (DD).

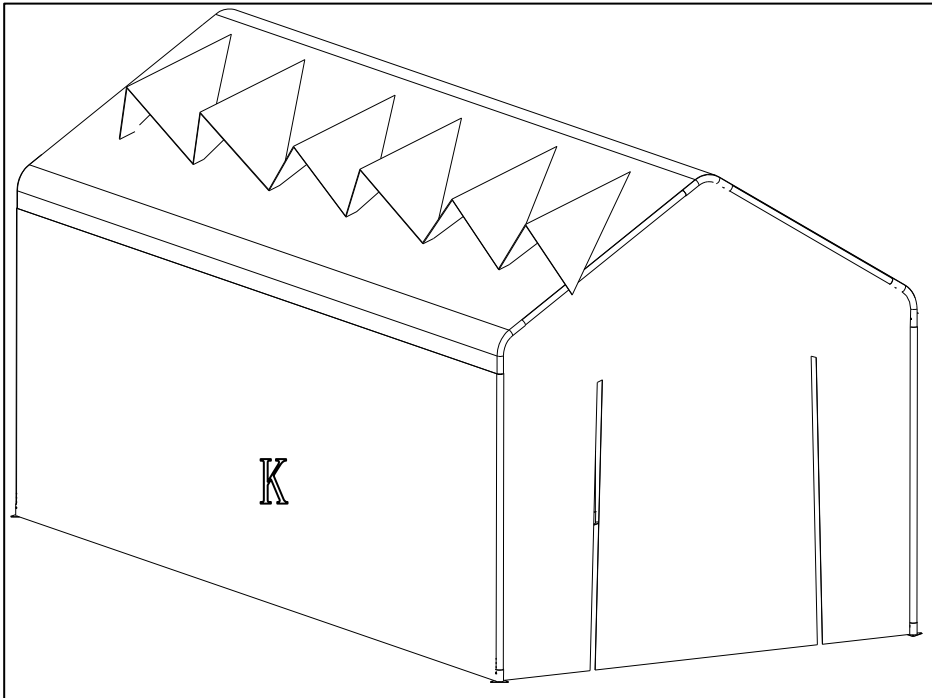


Post 2 Assembly

Insert Post 2 (F) onto Stake base (G) and secure them with Bolt (CC), Flat washer (AA) and Nut (BB).

Insert Stake (L) into the hole on Stake base (G).

Pull the valance of Top canopy (I) and Rope (EE) on the upper end of Post 2 (F) and fasten them with Screw cap (H).

Now your tent is ready for use.

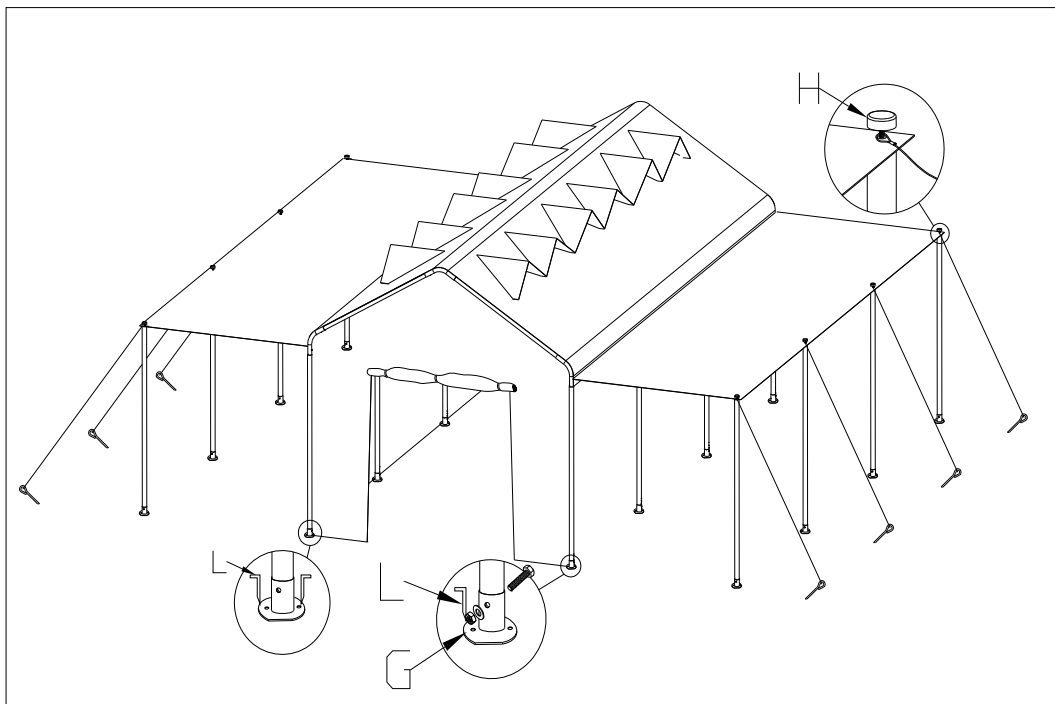

IMPORTANT:

1. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
2. Some parts may contain sharp edges, wear protective gloves if necessary. At least four or more people are recommended for safe assembly.
3. Keep all children and pets away from assembly area.
4. At least 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
5. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
6. The fabric roof should be removed for the winter in areas subject to heavy snowfall. A fabric roof could accumulate a lot of snow/weight which genuinely could be an issue. Remove fabric roof and panels to poles, when there is a risk of high wind, as possible damage will occur to the structure.
7. Install on level surface.
8. Never barbecue under this gazebo or use lanterns that have open flames.
9. This package contains small items and plastic bags that should be kept away from children.
10. Check all nuts and bolts for tightness before and during usage. Ensure that all connectors and poles are firmly secured in position fully. It is important to do so before use so as to avoid a possible collapse or damage to the item, which could also result in injury.

WARNINGS:

1. Assembly Instructions must be followed.
2. Pegs & ropes supplied must be used to hold this gazebo in place when upright.
3. Warranty does not cover damage due to extreme weather conditions.

LIMITED WARRANTY:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **1 year**. If any defect is found, please call our customer service department at 1-866-578-6569 for help. The manufacturer will not cover transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.