


ASSEMBLY INSTRUCTION

ITEM#: L-CM082PST-1

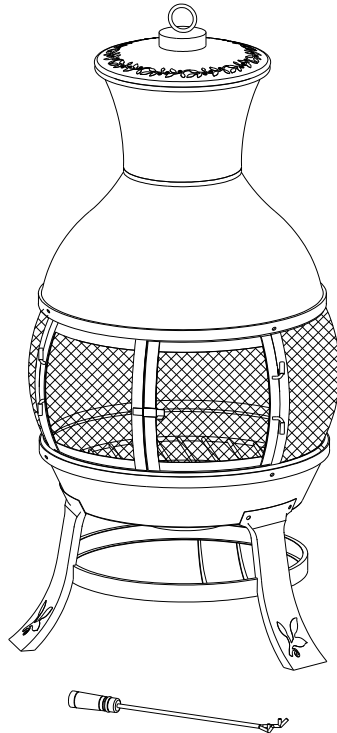


WARNING:

- This chimney is intended for outdoor use only. Do not use on wooden decks.
- This outdoor chimney is intended to burn wood logs only. Do not burn coal, leaves, or other combustible materials in the chimney.
- Not for use by children. Keep children and pets away from this chimney.
- The chimney is hot. Use with caution. Do not touch the hot chimney-with bare hands.
- Never leave the burning chimney unattended, and always extinguish the fire completely before leaving the chimney.
- Do not use near flammable or combustible objects or materials.
- While the chimney is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- DO NOT use this chimney as a cooking appliance. This chimney is not designed for grilling food.
- Check local fire regulations and municipal by-laws for safe use.
- Read all safety guidelines, warnings, instructions, and operating rules carefully before assembling and using this product.
- Some parts may contain sharp edges – especially those noted in the manual. Wear protective gloves if necessary.

Important: For technical assistance on assembly or replacement parts, please call Sunjoy Industries at 1(866) 578-6569 from 8:00 AM EST to 8:00 PM PST. You may email to customer.care@sunjoygroup.com or visit www.sunjoyonline.com to place your order or fax your parts replacement order form (which is included in the packaging) together with your purchase receipt to 1 (740) 283-3549 for assistance.

Parts List		
Part#	Description	Qty
A	Lifter CM0082XX101	1
B1	Chimney Mesh cover CM0082XX102	1
B	Chimney CM0082XX103	1
C	Cover CM0082XX104	1
D	Body CM0082XX105	1
E	Charcoal grate FTYC420G03	1
F	Flat bowl CM0082XX106	1
G	Ash catcher FTJ140G	1
H	Base ring CM0082XX107	1
I	Leg CM0082XX108	3
J	Fire poker FTJB450G	1
AA	M6x15 Bolt SM06015C	11
BB	M6 Washer UD06C	20
CC	M6 Nut LM06C	14
DD	M5x10 Bolt SM05010C	3
EE	M5 Nut FBM05C	3
FF	M6x10 Bolt SM06010C	9
GG	M6/M5 Wrench W1008D	1

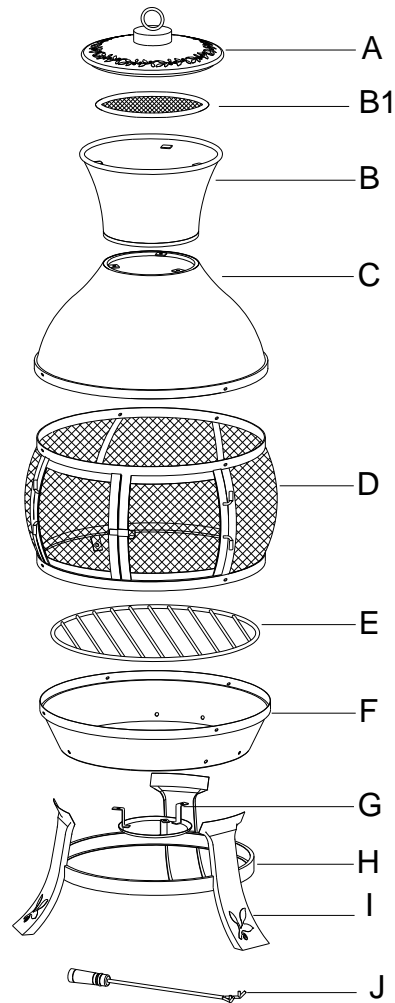

ASSEMBLY STEPS

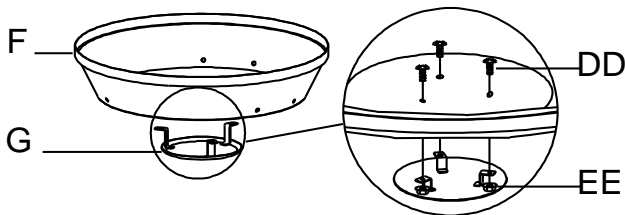


Fig. 1

Fig. 1:

Insert 3 M5x10 bolts (DD) into bowl (F), attach the ash catcher (G) to the bottom with M5 Nuts (EE) using the M5/M6 Wrench (GG).

Fig. 2:

Use 2 M6x10 Bolts (FF), M6 Washers (BB), M6 Nuts (CC) to attach bowl (F) and Leg (I) using the M5/M6 Wrench (GG). Do not over tighten at this point.

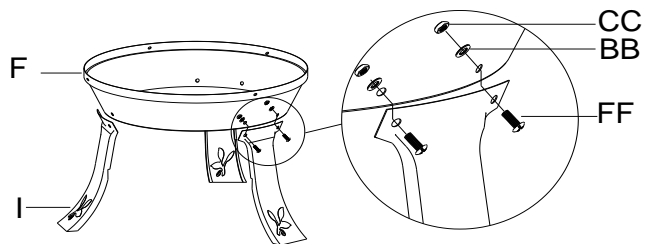


Fig. 2

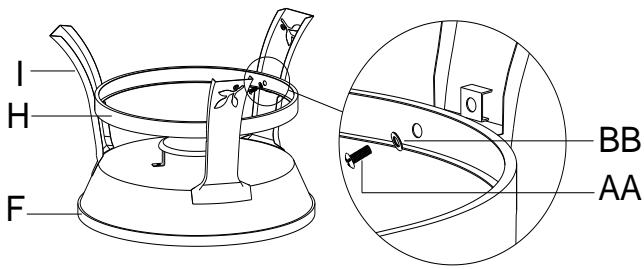


Fig. 3

Fig. 3:

Turn over bowl (F), use M6x15 Bolts (AA), M6 Washers (BB) to attach the ring (H) and leg (I) using the M5/M6 Wrench (GG). Do not tighten at this point.

Fig. 4:

Attach body (D) and bowl (F) with M6x15 Bolts (AA), M6 Washers (BB), M6 Nuts (CC), tighten using the M5/M6 Wrench (GG). Tighten all screws while being careful not to strip the threads.

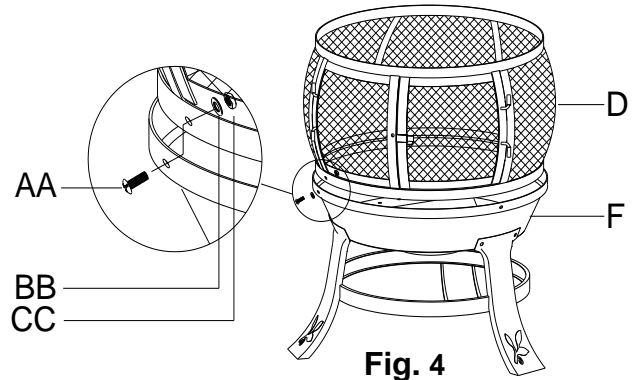


Fig. 4

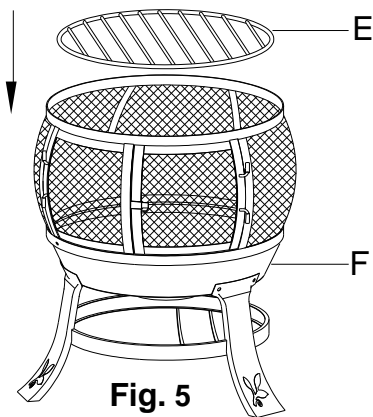


Fig. 5

Fig. 5:

Put Charcoal grate (E) in the bowl (F).

Fig. 6:

Use M6x15 Bolts (AA), M6 Washers (BB), M6 Nuts (CC) to attach Cover (C) with Body (D) using the M5/M6 Wrench (GG).

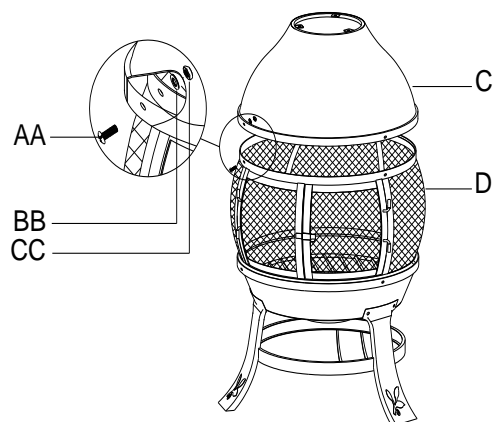


Fig. 6

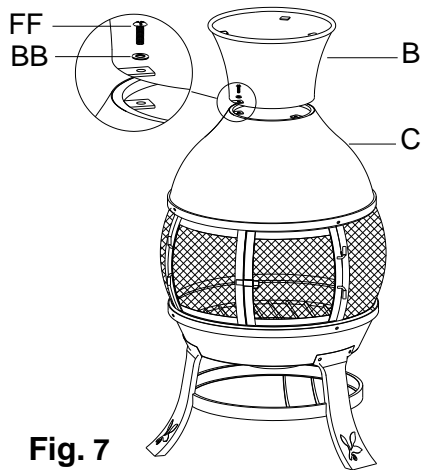


Fig. 7

Fig. 7:
Use M6x10 Bolts (FF), M6 Washers (BB) to attach Chimney (B) and Cover (C).

Fig. 8:
First put Chimney Mesh cover (B1) on Chimney (B). Put Lifter (A) on Chimney (B); put Poker (J) aside.

Now your outdoor chimney is ready for use.

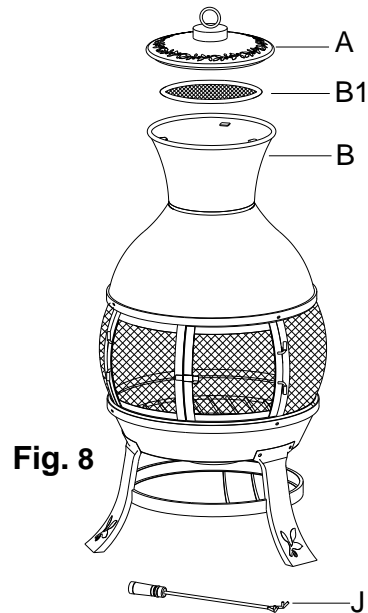


Fig. 8

Care & Cleaning

Before using, clean the fire pit completely with a soft dry towel. When not in use, store in a cool, dry area.

Limited Warranty: The item is warranted to be free from defects in material or workmanship for a period of **6** Months. However, we do not reimburse for transportation or delivery costs, nor compensate the individual or any outside party for assembling or disassembling the product. This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item, provided the item is maintained with care and used only for personal residential purposes.

Exclusions: Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

WARNING: Fuels used in wood or charcoal burning appliances, and the products of combustion of such fuels, contain chemicals known to cause cancer, birth defects or other reproductive harm.