


Assembly Instructions

Item# D-OF134PST-B

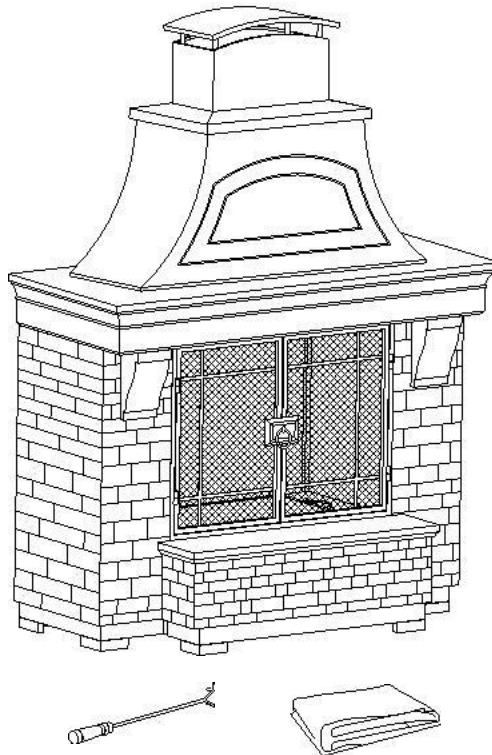

Congratulations on your purchase of Sunjoy Fireplace. Our clear, easy to follow, step-by-step instructions will guide you through the assembly process from start to finish.

WARNING:

Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the Fireplace construction.

Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.

Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.

Check all bolts for tightness before use and periodically check and tighten bolts as necessary.

Assemble on level ground.

For outdoor use only.

Be careful when using the fireplace since the surface is hot. Don't use the fireplace on a wood floor.



IMPORTANT

Please take time to read these instructions thoroughly and follow each step carefully for safe and easy operation. Keep this manual to consumer for installer and consumer future reference/use.


For technical assistance on assembly or replacement parts. In the continental U.S., you can call us toll-free at 1-866-578-6569 from 8 a.m. to 5 p.m. CST Monday – Friday. In the continental Canada, you can call us toll-free at 1-844-SUNJOY1 (1-844-786-5691) from 8 a.m. to 5 p.m. CST Monday – Friday. You can fax the replacement part form which is in the box to (740)-283-3549. You can also send us an email to customer.care@sunjoydirect.com.

Parts List


No.	Description	Qty
A	Chimney Top	1
B	Chimney	1
C	Top	1
D1	Upper Base 1	1
D2	Upper Base 2	1
E	Body	1
F	Fire Trough	1
G	Poker	1
H	Cover	1

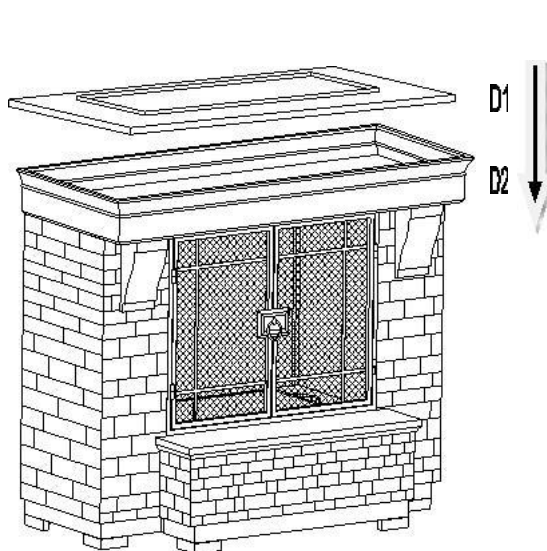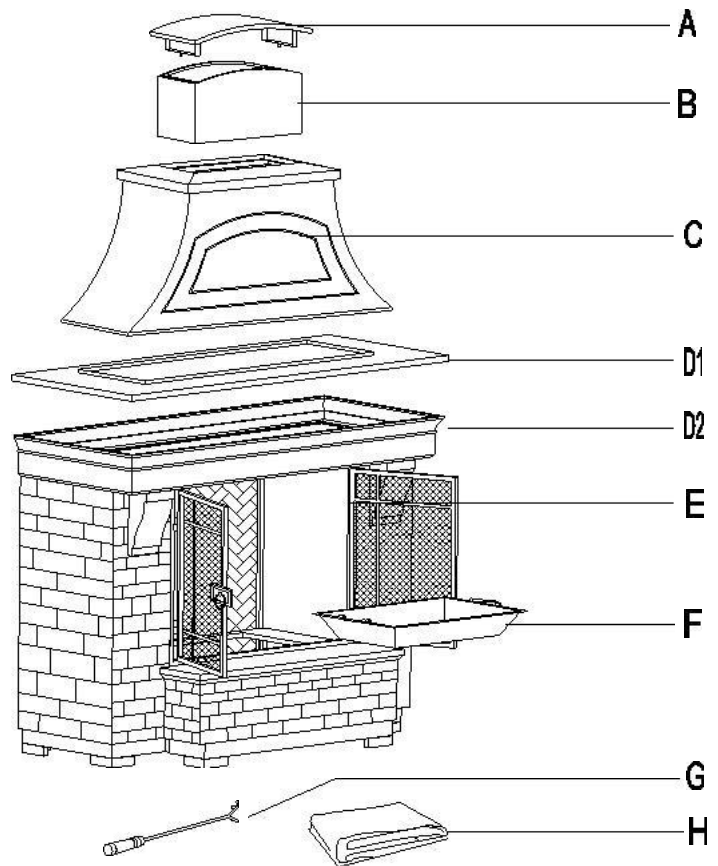


Step 1: Put Upper Base 1 (D1) on Upper Base 2 (D2) as shown above.

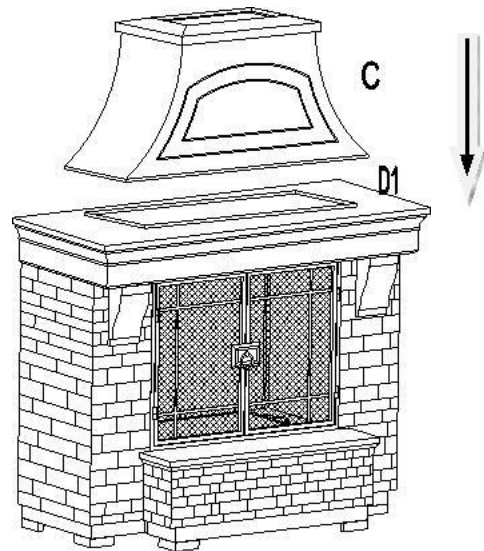

Step 2: Put Top (C) on Upper Base 1 (D1) as shown above.

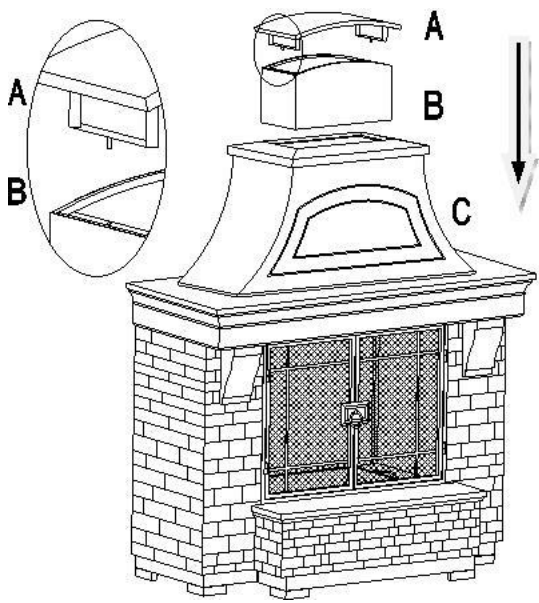

Step 3: Put Chimney Top (A) on Chimney (B). Make sure it insert into the hole of Chimney. Then put assembled Chimney (B) on Top (C) as shown above.

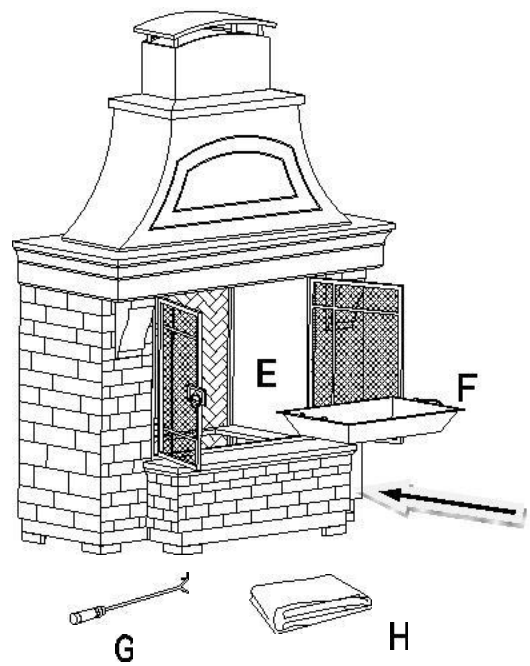

Step 4: Put Fire Trough (F) in Body (E) as shown above. Then Put Poker (G) nearby. When not in use, recommend the use of Cover (H).

Care & Maintenance

Before using, clean the Fireplace completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely. Steel components of garden accessories and furniture are treated with rust inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. To minimize this condition, it is recommended that care be taken when assembling and handling the product, in order to prevent the paint from being scratched.

Limited Warranty

This product carries a 1 year warranty against defects in workmanship and materials. We agree to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Exclusions

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.