

ASSEMBLY INTRUCTION


ITEM#: L-BB050PCO-1




IMPORTANT:

For technical assistance on assembly or replacement parts, you can call us toll-free at 1 (866) 578-6569 from 8 AM. EST to 8 PM PST. You may email to customer.care@sunjoygroup.com or visit www.sunjoyonline.com to place your order or fax your parts replacement order form (which included in the packaging) together with your purchase receipt to 1 (740) 283-3549 for assistance.

PARTS LIST		
PART#	DESCRIPTION	QTY
A	Big bird	1
B	Little bird	2
C	Pot	1
D	Connector	1
E	Crane	3
F	Leg 1	3
G	Leg 2	3
H	Bottom base	1

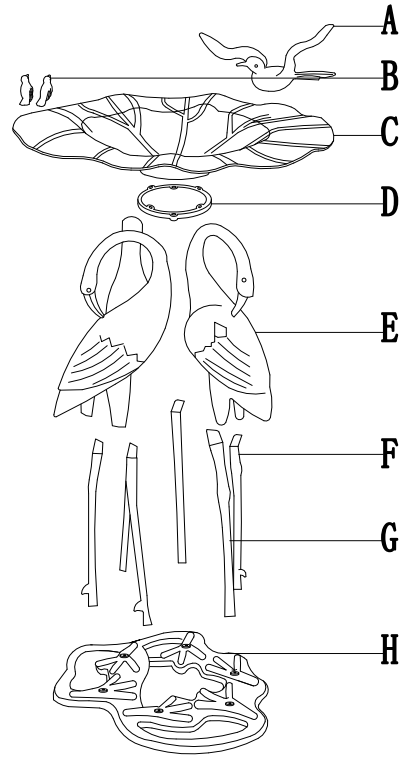

HARDWARE PACK		
PART#	DESCRIPTION	QTY
AA	Stud M6*35	6
BB	Bolt M6*35	6
CC	Bolt M6*20	3
DD	Bolt M6*15	3
EE	Wrench M6/M8	1
FF	Nut M6	12
GG	Flat washer M6	15
HH	Stud M8*30	3
II	Nut M8	3
JJ	Flat washer M8	3

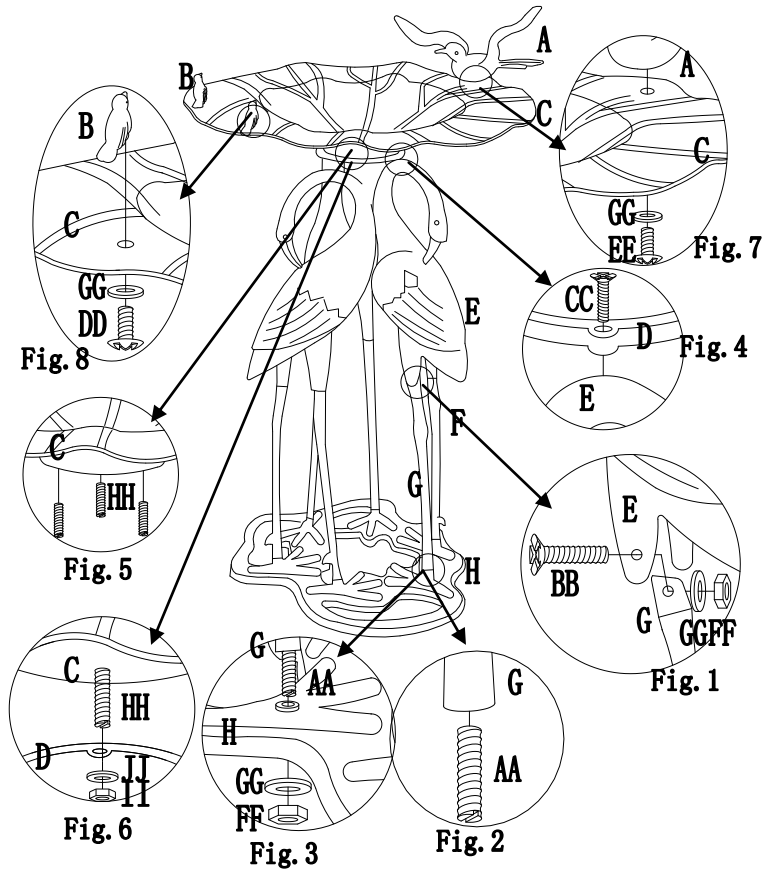

***Assembly requires a screwdriver (not supplied)**

ASSEMBLY STEPS

Fig.1: Put leg 2 (G) at the inner side of the crane, then connect with bolt (BB), flat washer (GG) and nut (FF); connect leg 1 (F) in the same way.

Fig.2: Insert the end of bolt (AA) without the "-" symbols into the holes leg 1 (F)/ leg 2 (G), and tighten with a screwdriver.

Fig.3: Connect leg 1 (F)/ leg 2 (G) and bottom base (H) with bolt (AA), flat washer (GG) and nut (FF).

Fig.4: Connect connector (D) and crane (E) with bolt (CC).

Fig.5: Insert the end of bolt (HH) without the "-" symbols into the holes of pot (C), and tighten with a screwdriver.

Fig.6: Attach connector (D) to pot (C) with bolt (HH), flat washer (JJ) and nut (II).

Fig.7: Connect big bird (A) to pot (C) with bolt (DD) and flat washer (GG).

Fig.8: Connect little bird (B) to pot (C) with bolt (DD) and flat washer (GG).

Fig.9: Tighten all the bolts with wrench (EE) and screwdriver.

CARE AND MAINTENANCE:

To extend the life of garden unit, cover it in bad weather. Due to natural properties of steel material, if rust develops, please clean rust area by sanding slightly (other gazebos state oil, not sandpaper...), then wipe thoroughly and apply touch-up paint if possible.

Limited Warranty:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **6 months**. If any defect is found, please call our customer service department at 1 (866) 578-6569 for help. The manufacturer will not cover transportation or delivery costs, nor compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.