

ASSEMBLY INTRUCTION



 
ITEM#: S-UM277PST




Warning

- Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.
- Check all bolts for tightness before use, and periodically check and tighten bolts as necessary.


Important: For technical assistance on assembly, please call Sunjoy Industries at 1(866) 578-6569 anytime 24 hours / 7 days a week, or email to customer.care@sunjoygroup.com, or visit www.sunjoyonline.com.

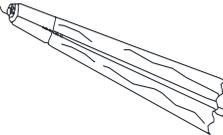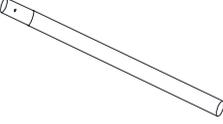PARTS LIST			
Label	Description	QTY	Image
A	Umbrella Shade	1	
B	Lower Pole	1	
C	Solar Panel	1	


ASSEMBLY STEPS

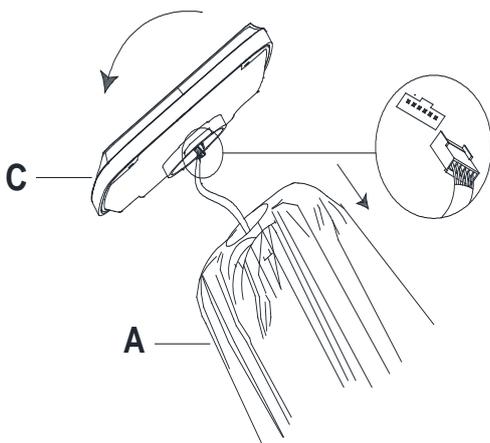


Step 1: Find the plug at the top of the Umbrella Shade (A). Insert the plug into the socket under the Solar Panel (C).

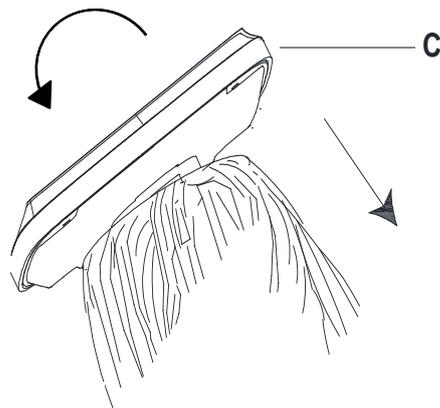



Step 2: Fit the wire inside the top of the Umbrella, and turn the Solar Panel (C) clockwise to attach it to the Umbrella Shade (A). Be careful not to over-tighten. Remove the clear plastic film on the Solar Panel.

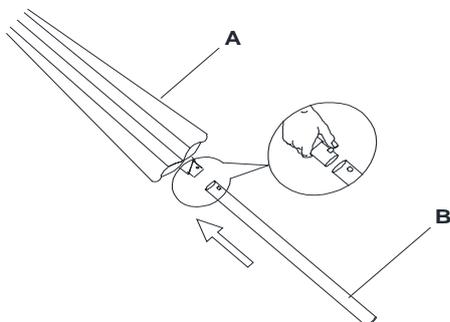

Step 3: Note the spring-button on the Upper Pole of Umbrella Shade (A). Press the spring-button while inserting the Lower Pole (B) - the spring-button should pop into the hole in the lower pole.

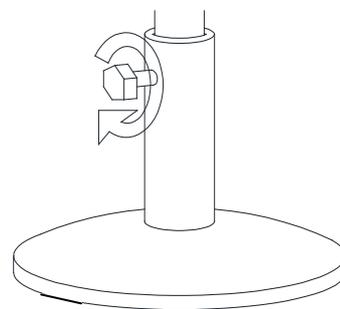

Step 4: We recommend that you secure the umbrella to an umbrella base (not included). Secure the umbrella pole firmly by tightening the knob.

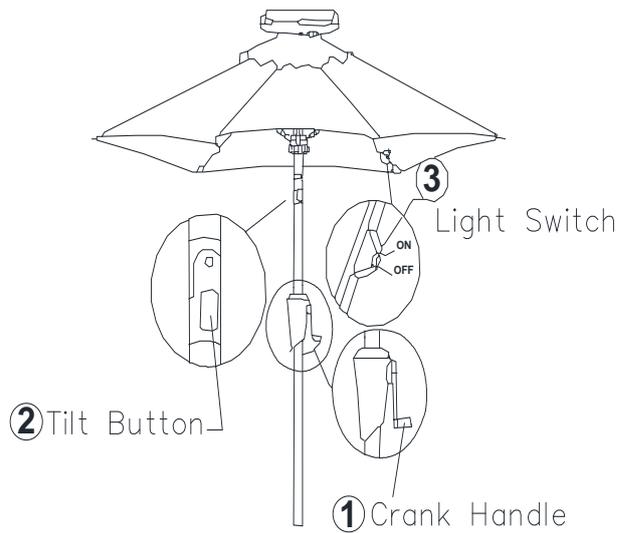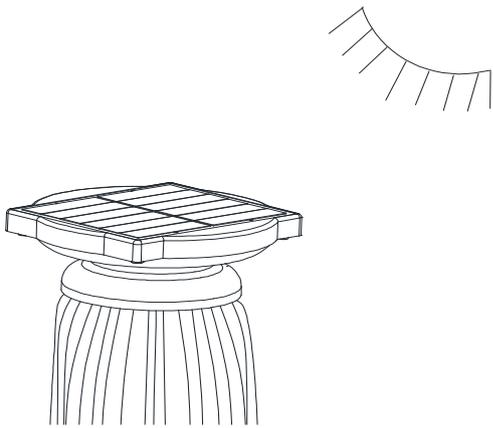

Step 5: Set the umbrella in the direct sunlight to charge the batteries before the first use.

Note: Be sure to charge the batteries for at least 8 hours before the first use. Otherwise it will shorten lifespan of the batteries and decrease performance. Be sure the switch on the pole is in the off position.

Step 6: To open the umbrella:


- (1) Turn the crank handle in the clockwise direction.
 - (2) You can tilt the umbrella to your desired angle by pressing the Tilt Button to release the umbrella top. Release the button to maintain the desired angle.
 - (3) Press the light switch to turn on the solar lights.
- Reverse the steps to take down the umbrella. To close the umbrella, it must be in the upright (not tilted) position.

TO REPLACE THE BATTERY


We recommend that you change the batteries in your solar light umbrella every year or when you feel the light is fading.

Buy one (1) 18650 Lithium 1500mAh rechargeable batteries same as supplied with panel. Install only new battery of the same type in your product. You can purchase at specialty retailers.


*Failure to insert battery in the correct polarity, as indicated in the battery compartment may shorten the life of the battery or cause the battery to leak. Do not dispose of battery in fire. Battery should be recycled or disposed of as per state and local guidelines. Do not mix old and new batteries. Do not mix Alkaline, Standard (Carbon-Zinc) or rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

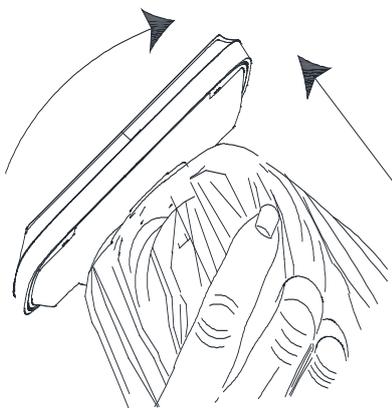


Step 1: Twist the Solar Panel counter-clockwise and remove it from the top of the umbrella. Insert Umbrella support (B) into the Umbrella shade (A).

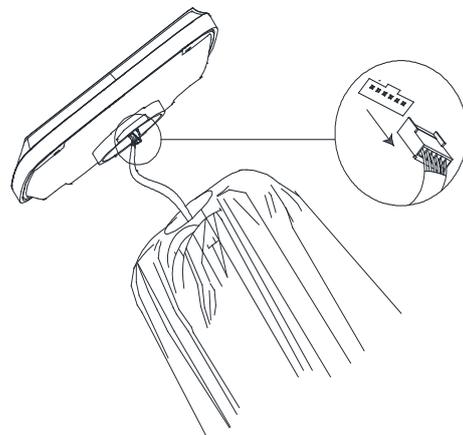


Step 2: Carefully pull the plug out of the socket under the Solar Panel. **IMPORTANT:** Do not pull the wire to remove the plug.

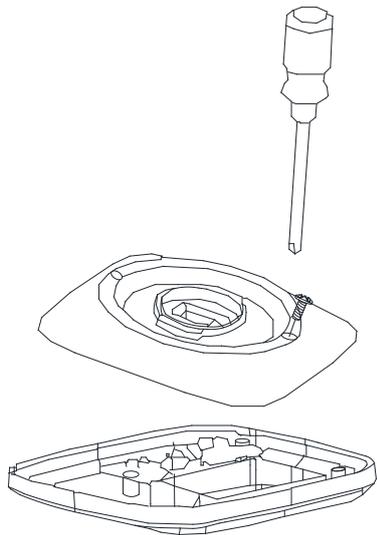

Step 3: Set the Solar Panel upside down on a soft, clean surface to avoid scratching. Loosen all four screws on the bottom of the Solar Panel.

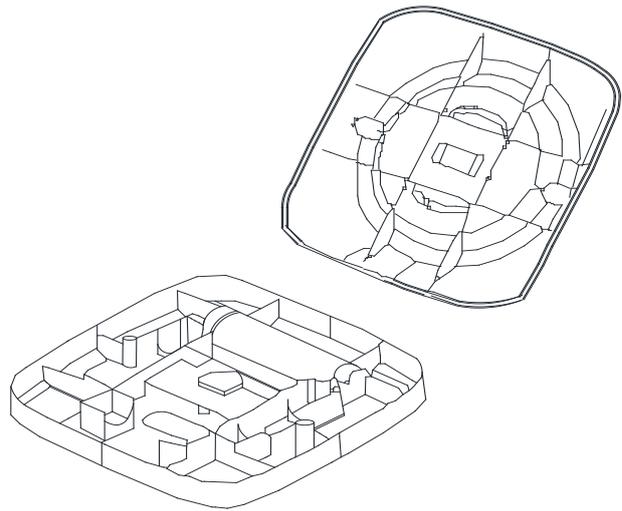

Step 4: Carefully open the Solar Panel. Replace the batteries, matching the +/- on the batteries with the +/- on the battery case.

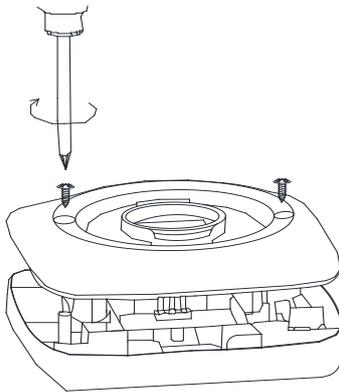

Step 5: Re-assemble the Solar Panel. Do not over tighten the screws.

Attach the Solar Panel back onto the umbrella and follow the instructions in Step 5 to recharge the batteries in a full day of direct sun.

NOTE: Make sure batteries are fully charged before first use. Your solar umbrella is ready to use again!

NOTE: For everyday normal use, turn on the light switch in the night-time when you want to use solar light and turn off the switch after use.

ALSO MAKE SURE THE LIGHT SWITCH IS IN THE OFF POSITION IN THE DAYTIME FOR THE SOLAR PANEL TO RECHARGE THE BATTERIES.

SAFETY INFORMATION:

- Always put the umbrella in the down position when not in use.
- Securely fasten the umbrella to an appropriately sized umbrella base. Do not install into the ground.
- This seasonal use product is not intended for permanent installation or use.

DANGER: Do not use near open flame or other heat sources.

CAUTION: Do not use the umbrella in windy conditions, store the closed umbrella in place.

CAUTION: Do not attempt to alter the wiring or operate the umbrella in place.

CAUTION: Do not use this product for other than its intended purpose.

BATTERY RECYCLING

Please dispose of used batteries properly. Consult your local telephone listings for a battery recycling center near your area.



Do not dispose batteries in household waste.



Do not throw batteries into water.



Protect batteries against heat and fire due to risk of explosion.



Recycling.

Care & Maintenance:

- Before using, clean the product completely with a soft dry towel.
- When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners.
- Steel components of garden accessories and furniture are treated with rust inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched.
- To minimize this condition, it is recommended that care be taken when assembling and handling the product, in order to prevent the paint from being scratched.

Limited Warranty: The item is warranted to be free from defects in material or workmanship for a period of six (6) months. However, we do not reimburse for transportation or delivery costs, nor compensate the individual or any outside party for assembling or disassembling the product. This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item, provided the item is maintained with care and used only for personal residential purposes.

Exclusions

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.