

ASSEMBLY INTRUCTION

 
 
 
ITEM#: S-UM328PST




ATTENTION:


1. Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area.
2. Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
3. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
4. Check all bolts for tightness before and during usage.

Important: For technical assistance or questions, call Sunjoy Group at 1(866) 578-6569 anytime 24 hours / 7 days a week, or email to customer.care@sunjoygroup.com, or visit www.sunjoyonline.com for more information or assistance.


PARTS LIST			
PART#	DESCRIPTION	QTY	Image
A	Umbrella Shade	1	
B	Umbrella Support	1	
C	Bottom Bar 1	1	
D	Bottom Bar 2	1	
E	Top Bar	1	
F	Top Connection	1	

 HARDWARE PACK			
PART#	DESCRIPTION	QTY	Image
AA	Bolt M8* 15 (preassembled)	4	
BB	Washer M8 (preassembled)	4	


ASSEMBLY STEPS

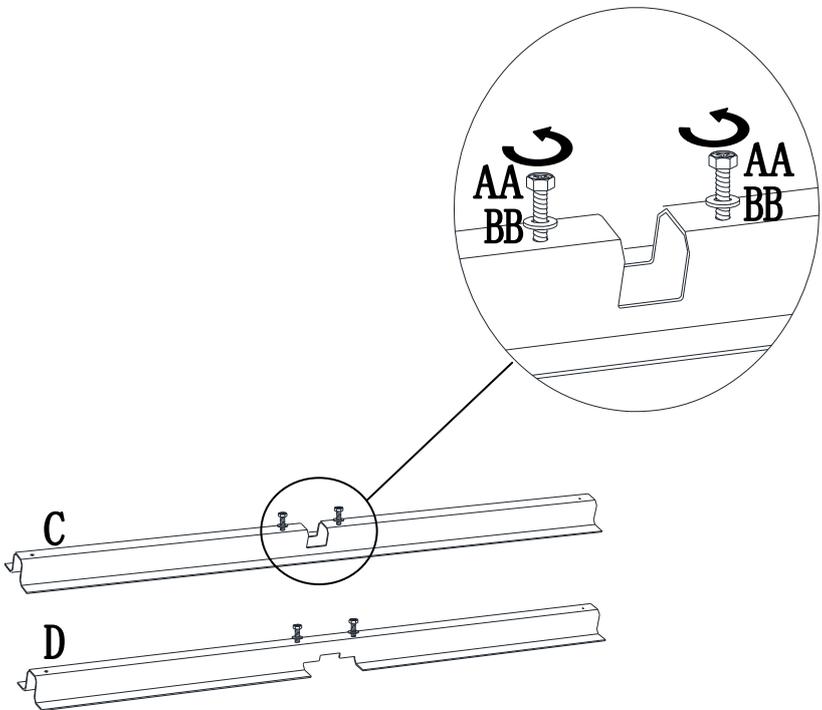

Step 1: Take down Bolt (AA) and Washer (BB) (preassembled on Bottom Bar 1 and Bottom Bar 2).

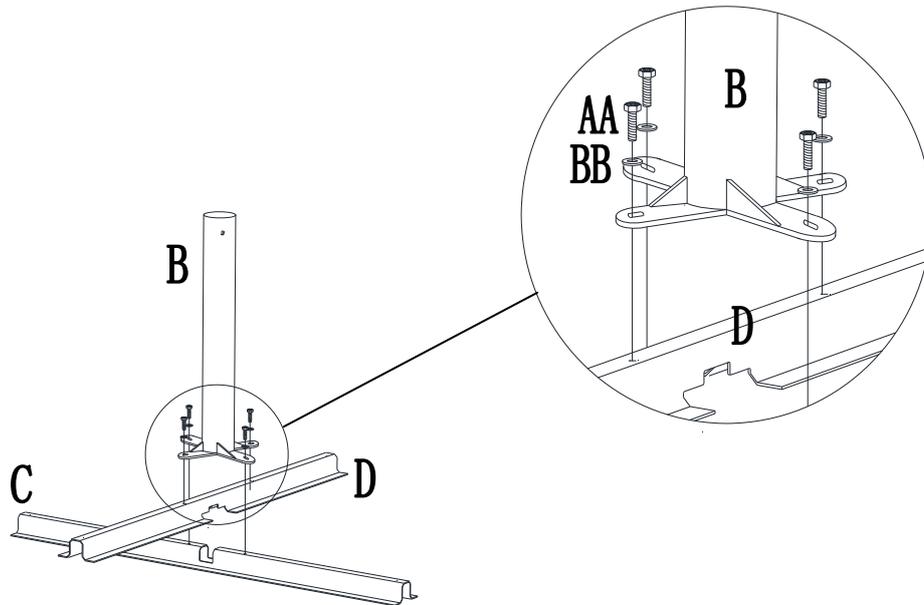


Step 2: Cross Bottom Bar 1 (C) and Bottom Bar 2 (D), connect bars with Umbrella Support (B) by Bolt (AA) and Washer (BB).

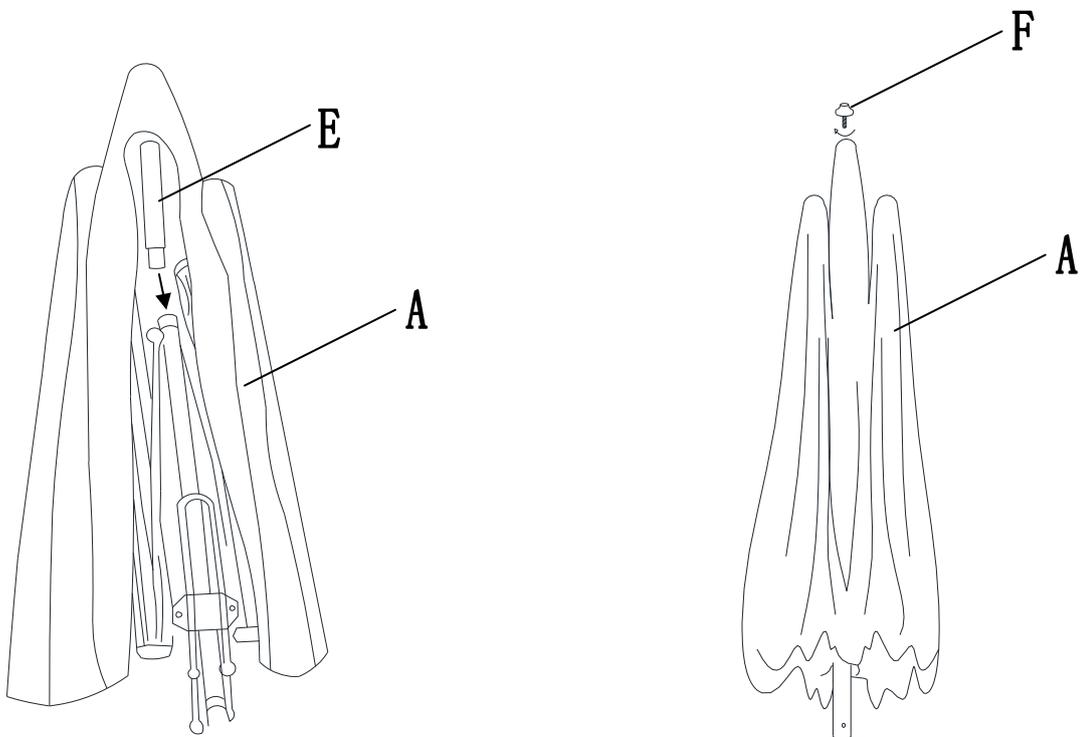

Step 3: Insert Top Bar (E) into Umbrella Shade (A).

Step 4: Screw Top Connection ((F) into Umbrella Shade (A).

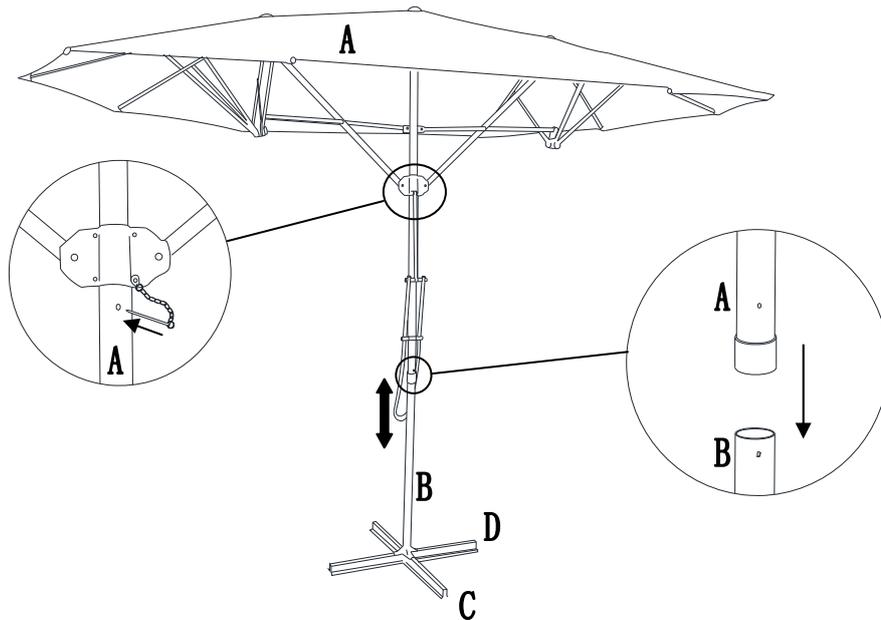

Step 5: Insert Umbrella support (B) into the Umbrella shade (A).

Press the bar (arrow) to open the umbrella canopy, open the umbrella entirely and insert the plug into the hole.

Raise the bar (arrow) to close the umbrella canopy.

MAINTENANCE:

Before using, clean the product completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners.

Steel components of garden accessories and furniture are treated with rust inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched.

To minimize this condition, it is recommended that care be taken when assembling and handling the product, in order to prevent the paint from being scratched.

Limited Warranty: The item is warranted to be free from defects in material or workmanship for a period of six (6) months. However, we do not reimburse for transportation or delivery costs, nor compensate the individual or any outside party for assembling or disassembling the product. This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item, provided the item is maintained with care and used only for personal residential purposes.

Exclusions:

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.