


# Assembly Instructions

 
Item: L-GZ652PST

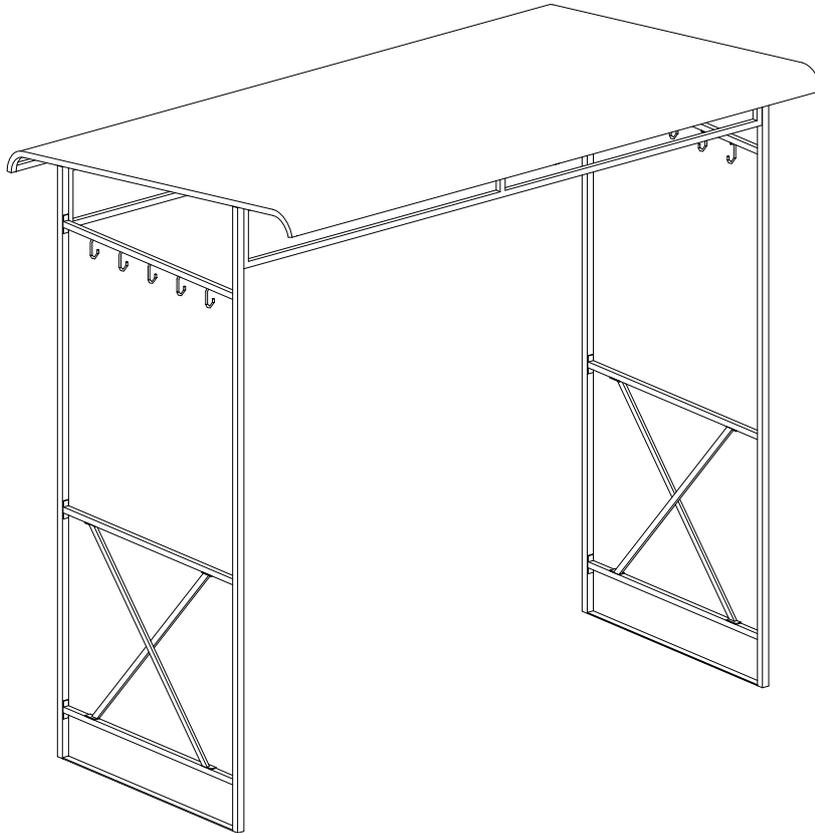

 
 
## **IMPORTANT:**

1. When installing and assembling your gazebo, it is recommended that two or more adults are involved.
2. Do not use the gazebo during an electrical storm, as there is a remote chance of getting struck by lightning.
3. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.
4. Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the structure.
5. Do not use lanterns that contain open flames.
6. This package contains small items and plastic bags that should be kept away from children.
7. Ensure that all connectors & poles are firmly secured in position fully. It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.
8. **KEEP ALL FLAME AWAY FROM THIS SHELTER FABRIC.** The fabric may burn if it is exposed to prolonged contact with a flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.


## Parts List

Post 1	A	1	
Post 2	B	1	
Post 3	C	1	
Post 4	D	1	
Bottom bar	E	2	
Horizontal screen	F	2	
Middle arch pole	G	1	
Right arch pole	H	1	
Left arch pole	I	1	
Bar	J	4	
Horizontal pole	K	2	
Hook bar	L	2	
Upper bar	M	4	
Canopy	N	1	

## Hardware Pack 1

AA	M6X15 Bolt	44 PCS	
BB	M6 Washer	52 PCS	
CC	M6X35 Bolt	8 PCS	
DD	M6 Wrench	1 PC	

## Step 1

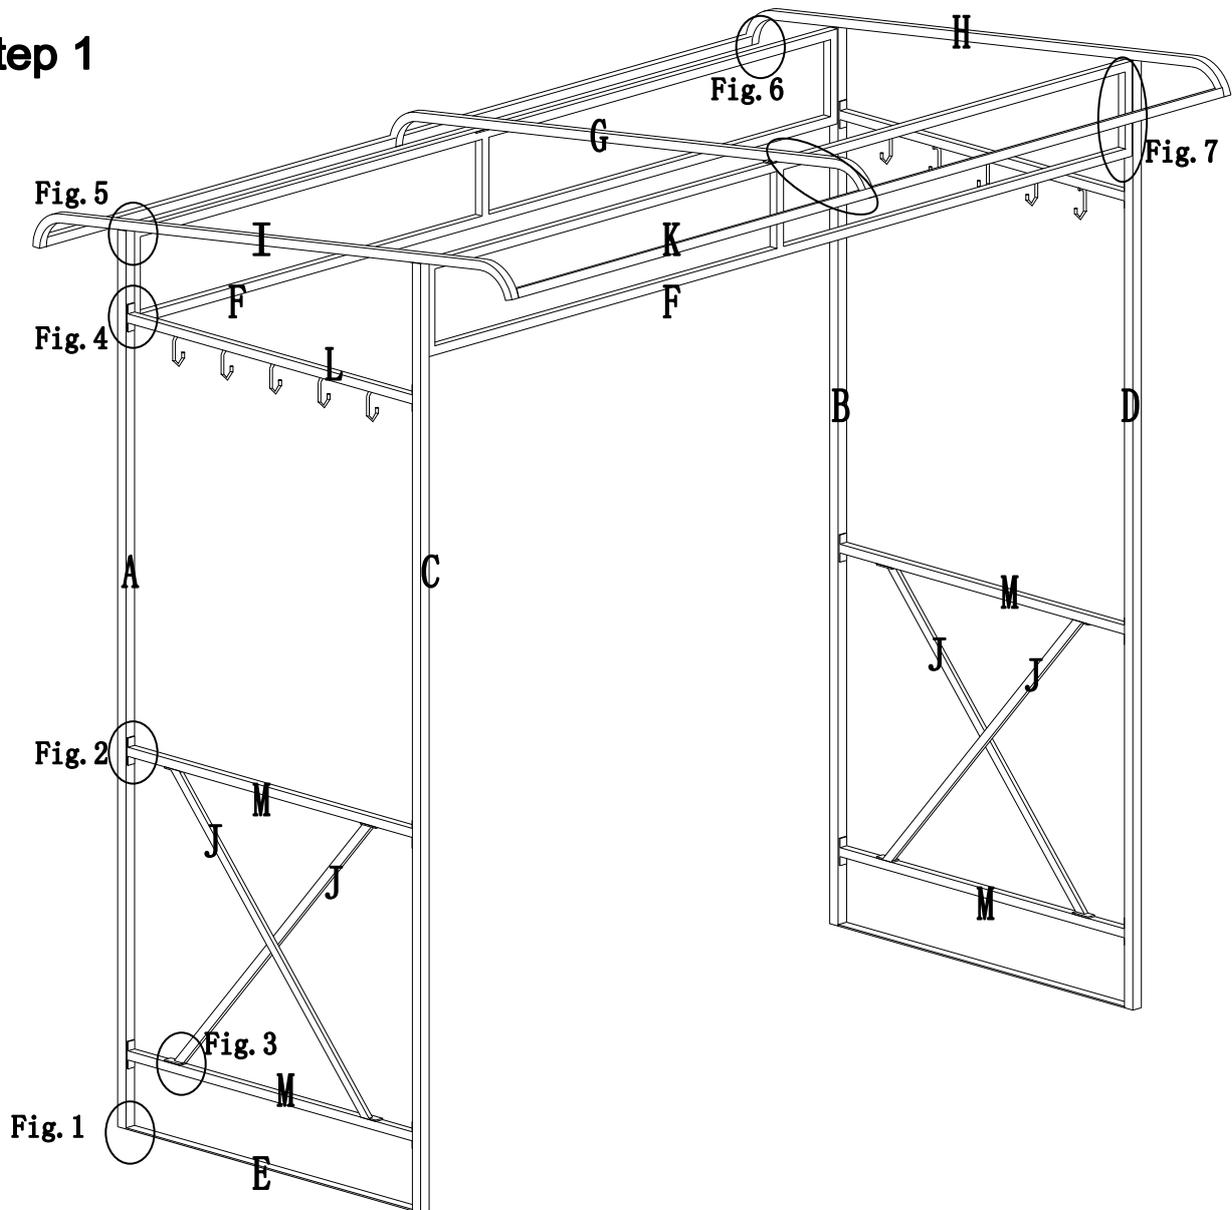

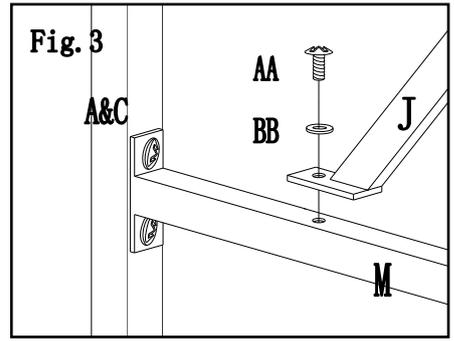
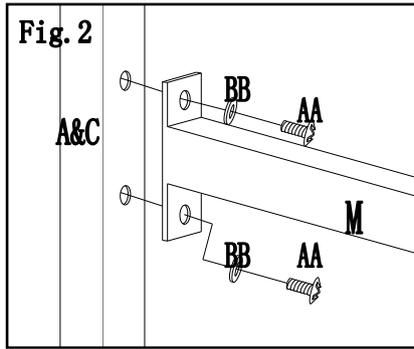
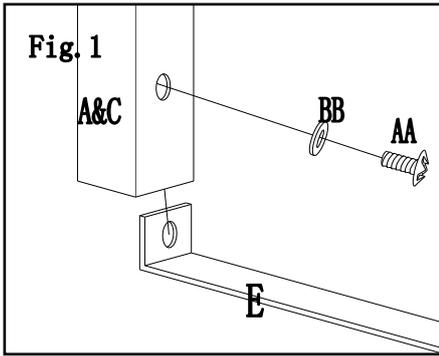


Fig.1: Attach bottom bar (E) to post (A, C) by bolt (AA) and washer (BB). Attach bottom bar (E) to post (B, D) in the same way.

Fig.2: Attach upper bar (M) to post (A, C) by bolt (AA) and washer (BB).

Fig.3: Connect bar (J) and upper bar (M) by bolt (AA) and washer (BB).

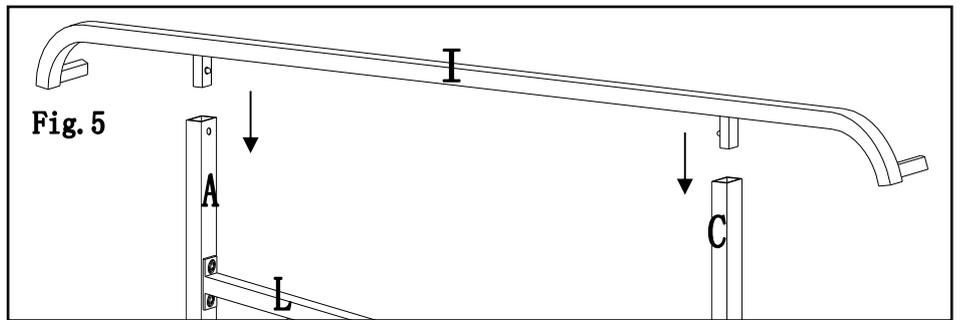
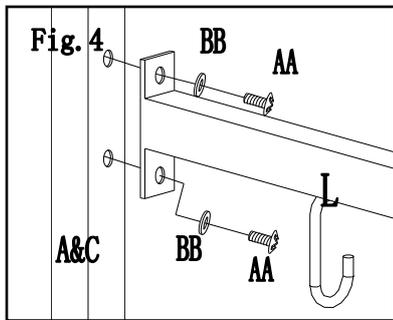


Fig.4: Attach hook bar (L) to post (A, C) by bolt (AA) and washer (BB). Attach hook bar (L) to post (B, D) in the same way.

Fig.5: Insert left arch pole (I) into post (A, C). Insert right arch pole (H) into post (B, D).

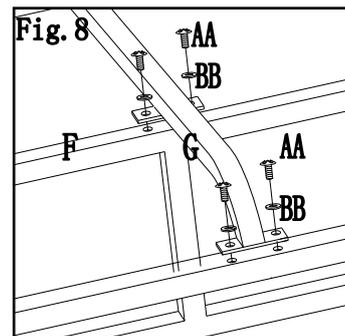
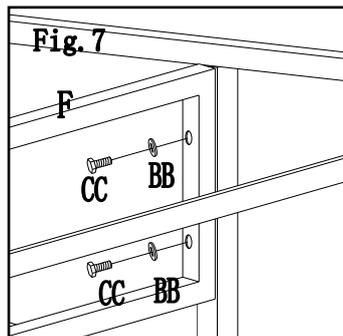
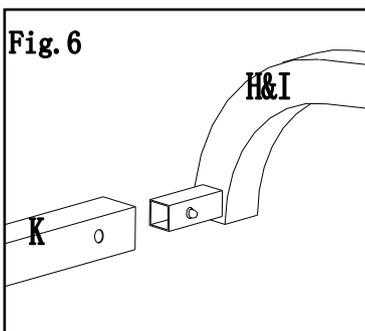


Fig.6: Insert horizontal pole (K) into left and right arch pole (H, I).

Fig.7: Attach horizontal screen (F) to post (A, B) and post (C, D) by bolt (CC) and washer (BB).

Fig.8: Attach middle arch pole (G) to horizontal screen (F) and horizontal pole (K) by bolt (AA) and washer (BB).

**Hardware Pack 2**

EE	Φ6*180 Stake	4 PCS	
----	--------------	-------	---

## Step 2

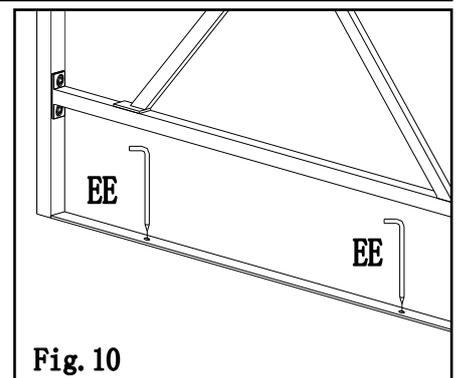
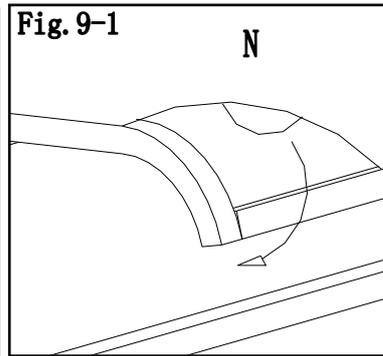
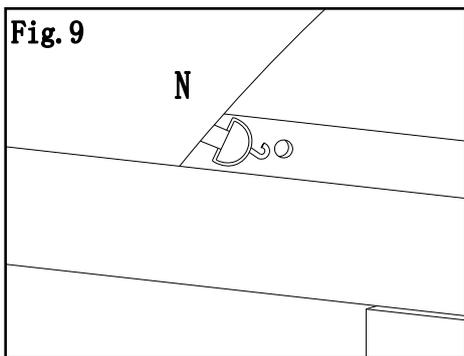
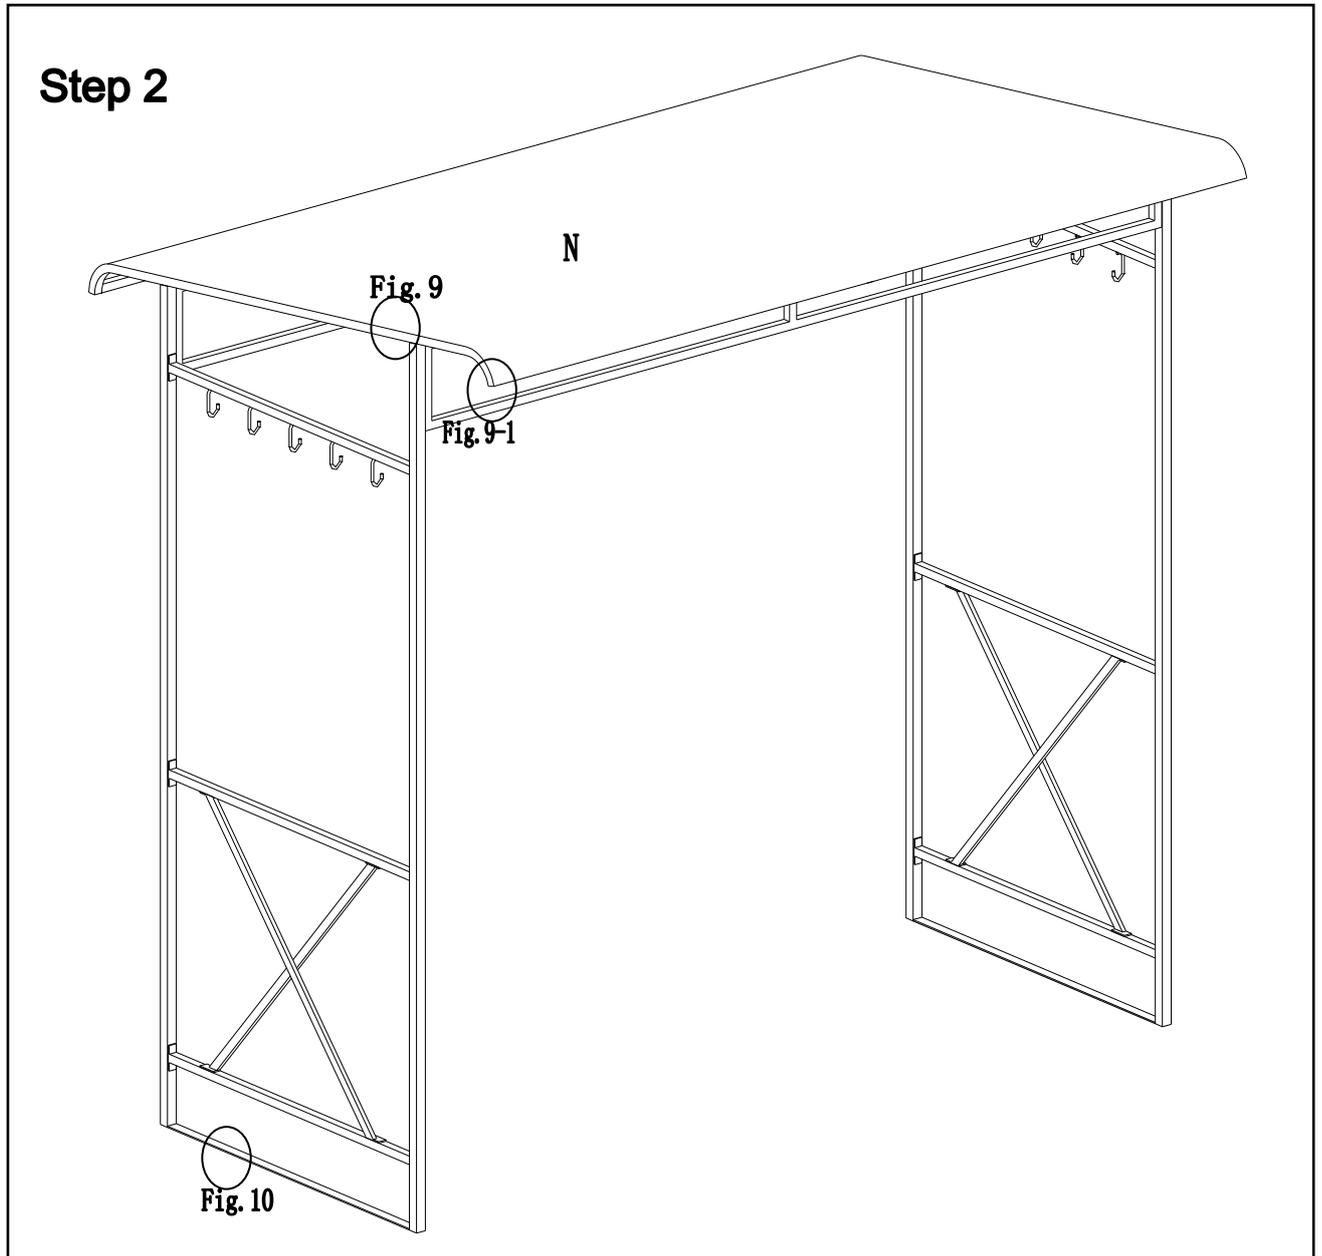


Fig.9、 Fig.9-1: Hang the hook on the canopy to the left and right arch pole (H, I), then put the canopy on the top frame, finally, firm up the canopy to the horizontal pole (K) and the left and right arch pole (H, I) by Velcro.  
Fig.10: Fix the gazebo by stake (EE).

**USE & CARE:**

1. This Gazebo is not a permanent structure and should be disassembled & stored away after use.
2. Do not repack your gazebo until completely dry.
3. This Gazebo must not be left erect in windy conditions.
4. Steel components for garden accessories and furniture are treated with rust inhibiting paint that protects them from rust. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched. Surface rust can be removed easily using a very light application of common cooking oil. If surface oxidation (rusting) occurs and no measures are taken to correct it, the oxidation may start dripping onto the deck or patio, which may cause damaging stains that may be difficult to remove.

**WARNINGS:**

1. Assembly Instructions must be followed.
2. Pegs supplied must be used to hold this gazebo in place when upright.
3. Warranty does not cover damage due to extreme weather conditions.

**IMPORTANT: Please do not return this product to the store.** For technical assistance on assembly or replacement parts. Please call Sunjoy Industries at 1-866-578-6569 from 8:00 am EST to 8:00 pm PST or fax the replacement part form which is in the box to 1-740-283-3549 or Email [customer.care@sunjoygroup.com](mailto:customer.care@sunjoygroup.com) for assistance.

Made in China

2016-2