

COSO[®]
D E S I G N

Original Operating Manual

**Milkfrother
Fomini 11610**



USA Branch

CASO Design USA LLC

50 Mountain View Rd

Warren, NJ, 07059

Info@CasoDesignUSA.com

www.CasoDesignUSA.com

T.: 908.604.0677

Document-Number: 11610 13-08-2018

Printing and typographical errors reserved.

© 2018 CASO Design USA LLC

1 Operating Manual	4
1.1 General.....	4
1.2 Information on this manual	4
1.3 Warning notices	4
1.4 Limitation of liability.....	5
1.5 Copyright protection	5
2 Safety.....	5
2.1 Intended use.....	6
2.2 General Safety information	6
2.3 Danger of fire.....	7
2.4 Danger of burns	7
2.5 Dangers due to electrical power	8
3 Commissioning	8
3.1 Safety information	8
3.2 Delivery scope and transport inspection	8
3.3 Unpacking.....	9
3.4 Using the milkfrother	9
4 Cleaning and Maintenance	9
4.1 Safety information	10
4.2 Cleaning	10
5 Disposal of the Old Device	10
6 Guarantee	10
7 Technical Data	11

1 Operating Manual

1.1 General

Please read the information contained herein so that you can become familiar with your device quickly and take advantage of the full scope of its functions.

Your Fomini Crema / Fomini Crema Inox will serve you for many years if you handle it and care for it properly.

We wish you a lot of pleasure in using it!

1.2 Information on this manual

These Operating Instructions are a component of the Fomini Crema / Fomini Crema Inox (referred to hereafter as the device) and provide you with important information for the initial commissioning, safety, intended use and care of the device.

The Operating Instructions must be available at all times at the device. This Operating Manual must be read and applied by every person who is instructed to work with the device:

- Commissioning
- Operation
- Troubleshooting and/or
- Cleaning

Keep the Operating Manual in a safe place and pass it on to the subsequent owner along with the device.

1.3 Warning notices

The following warning notices are used in the Operating Manual concerned here.

Danger

A warning notice of this level of danger indicates a potentially dangerous situation.

If the dangerous situation is not avoided, this can lead to death or serious injuries.

- ▶ Observe the instructions in this warning notice in order to avoid the danger of death or serious personal injuries.

Warning

A warning notice of this level of danger indicates a possible dangerous situation.

If the dangerous situation is not avoided, this can lead to serious injuries.

- ▶ Observe the instructions in this warning notice in order to avoid the personal injuries.

Attention

A warning notice of this level of danger indicates a possible dangerous situation.

If the dangerous situation is not avoided, this can lead to slight or moderate injuries.

► Observe the instructions in this warning notice in order to avoid the personal injuries.

Please note

A notice of this kind indicates additional information, which will simplify the handling of the machine.

1.4 Limitation of liability

All the technical information, data and notices with regard to the installation, operation and care are completely up-to-date at the time of printing and are compiled to the best of our knowledge and belief, taking our past experience and findings into consideration.

No claims can be derived from the information provided, the illustrations or descriptions in this manual.

The manufacturer does not assume any liability for damages arising as a result of the following:

- Non-observance of the manual
- Uses for non-intended purposes
- Improper repairs
- Technical alterations, modifications of the device
- Use of unauthorized spare parts

Modifications of the device are not recommended and are not covered by the guarantee.

All translations are carried out to the best of our knowledge. We do not assume any liability for translation errors, not even if the translation was carried out by us or on our instructions. The original German text remains solely binding.

1.5 Copyright protection

This document is copyright protected.

CASO Design USA LLC. reserves all the rights, including those for photomechanical reproduction, duplication and distribution using special processes (e.g. data processing, data carriers, data networks), even partially.

Subject to content and technical changes.

2 Safety

This chapter provides you with important safety notices when handling the device.

The device corresponds with the required safety regulations. Improper use can result in personal or property damages.

2.1 Intended use

This device is only intended for use in households in enclosed spaces for making milk foam and heating milk

Uses for a different purpose or for a purpose which exceeds this description are considered incompatible with the intended or designated use.

Warning

Danger due to unintended use!

Dangers can emanate from the device if it is used for an unintended use and/or a different kind of use.

- ▶ Use the device exclusively for its intended use.
- ▶ Observe the procedural methods described in this Operating Manual.

Claims of all kinds due to damages resulting from unintended uses are excluded.

The User bears the sole risk.

2.2 General Safety information

Please note

Please observe the following general safety notices with regard to the safe handling of the device.

- ▶ Read all these instructions before using the appliance.
- ▶ Examine the device for any visible external damages prior to using it. Never put a damaged device into operation.
- ▶ Do not place the device on a polished wood surface, it could damage the wood.
- ▶ Unplug your appliance as soon as you stop using it or to clean it.
- ▶ Unplug the device when you change the accessories (whisk 1 or 2).
- ▶ Allow the device to cool down before cleaning the device or changing the accessories.
- ▶ Children shall not play with the appliance.
- ▶ Cleaning and user maintenance shall not be made by children.
- ▶ Close supervision is necessary when any appliance is used near children.
- ▶ Do not use or store the appliance outdoors.
- ▶ Do not operate without milk in the jug.
- ▶ Never touch rotating parts, risk of injury!
- ▶ By exceeding the filling capacity the jug may overflow.
- ▶ The device should be used only in conjunction with the basis provided.

Please note

- ▶ Never operate appliance on uneven surfaces.
- ▶ Do not insert any objects and/or fingers in the appliance apertures.
- ▶ Only qualified electricians, who have been trained by the manufacturer, may carry out any repairs that may be needed. Improperly performed repairs can cause considerable dangers for the user.
- ▶ Only customer service departments authorized by the manufacturer may carry out repairs on the device during the guarantee period, as otherwise the guarantee entitlements will be null and void in the event of any subsequent damages.
- ▶ Defective components must always be replaced with original replacement parts. Only such parts will guarantee that the safety requirements are fulfilled.
- ▶ Device is not intended to be operated by means of an external timer or separate remote-control system.
- ▶ For your own safety, only use manufacturer accessories and spare parts suited to your machine.

2.3 Danger of fire

Warning

There is a danger of fire due to the event the device is not used properly.

Observe the following safety notices to avoid dangers of fire:

- ▶ Do not set up the device near flammable material.
- ▶ Keep this appliance away from sources of heat (gas, electric, burner, heated oven).

2.4 Danger of burns

Danger

The heated milk in the milk frother and the interior of the jug can get very hot.

Observe the following safety instructions and be careful not to burn or scald yourself or others:

- ▶ When the milk is heated, the interior of the jug gets very hot!
- ▶ Always check the temperature of the milk, before drinking it.
- ▶ When you are heating the milk, keep the lid closed.
- ▶ Do not touch hot surfaces.
- ▶ Do not touch the metal parts, or the housing of the device when the device is in use, as this may cause burning or scalding.
- ▶ Do not remove the lid during operation, as this could cause scalding.

2.5 Dangers due to electrical power

Danger

Mortal danger due to electrical power!

Mortal danger exists when coming into contact with live wires or subassemblies!

Observe the following safety notices to avoid dangers due to electrical power:

- ▶ Do not operate this device if its power cable or plug is damaged, if it does not work properly or if it is damaged or has been dropped. If the power cable is damaged, it will need to be replaced by the manufacturer or his service agency or a similar qualified person, to avoid any dangers.
- ▶ If the connection lead is damaged, you will need to have a special connection lead installed by an authorized electrician.
- ▶ Do not open the housing on the device under any circumstances. There is a danger of an electrical shock if live connections are touched and the electrical or mechanical structure is altered. In addition, functional faults on the device can also occur.
- ▶ Do not put the machine, power cord or plug in water or any other liquid.
- ▶ Do not touch the appliance or the mains plug with wet hands.
- ▶ Do not leave the power cord hanging within children's reach.
- ▶ The power cord must never be near or in contact with the hot parts of the machine, near a source of heat or over a sharp edge.
- ▶ Do not let the power cord come into contact with oils.

3 Commissioning

This chapter provides you with important safety notices during the initial commissioning of the device. Observe the following notices to avoid dangers and damages:

3.1 Safety information

Warning

Personal and property damages can occur during commissioning of the device!

Observe the following safety notices to avoid such dangers:

- ▶ Packaging materials may not be used for playing. There is a danger of suffocation.

3.2 Unpacking

Unpack your device as follows:

- Take out the device from the box and remove the interior and exterior packaging.
- You can find the whisk for frothing in the lid and the whisk for heating on the attachment for the whisks in the jug.
- Clean the appliance thoroughly before the first use. (see chapter Cleaning and maintenance)

3.3 Disposal of the packaging

The packaging protects the device against damages during transit. The packaging materials are selected in accordance with environmentally compatible and recycling-related points of view and can therefore be recycled.



Returning the packaging back to the material loop saves raw materials and reduces the quantities of accumulated waste. Take any packaging materials that are no longer required to “Green Dot” recycling collection points for disposal.

Please note

► If possible, keep the original packaging for the device for the duration of the guarantee period of the device, in order that the device can be re-packaged properly in the event of a guarantee claim.

3.4 Using the milk frother:

- Before using the new Froth Maker for the first time, we recommend that you clean the appliance thoroughly.
- Applying thumb pressure, open and remove the sliding battery compartment cover.
- Install the batteries in the position indicated on the battery position schematic.
- Replace the sliding compartment cover fully into operating position.
- Press the power button to ensure that the batteries are functioning properly.
- The milk frother can be used to froth a number of milk-based liquids, either hot or cold. Scalded or cooked milk is not suitable for frothing: Milk should be heated to a temperature of not more than 140° F.
- Fill a recipient to 1/3 with liquid.
- Grasp the milk frother, immerse the rotating head of the milkfrother into the liquid, and press the power button to activate frothing and release it to stop.
- During the next 15-20 seconds, agitate the milk frother slowly in an up and down motion while keeping the rotating head fully immersed.
- After a suitable head of forth has developed, release the power button to suspend the rotating frothing and remove the milk frother from the liquid.

4 Cleaning and Maintenance

Do not immerse the unit in water or place in the dishwasher. The appliance is best cleaned immediately after each use. Cleaning the head: when the appliance has been used to froth a cold liquid, the head may be cleaned in many cases by rinsing under running water. Persistent stains may be removed by fully immersing the head into hot water in a recipient and pressing the power button briefly. For remaining stains, a brush may be used. Note: operating of the appliance while the rotating head is under running water, i.e. partially immersed, may cause spattering. The casing should be cleaned by wiping with a humid cloth.

4.1 Safety information

Attention

Please observe the safety instructions, before cleaning your milk frother.

- ▶ Before cleaning switch off the unit and take the power plug out of the outlet.
- ▶ Clean the unit with a soft cloth.
- ▶ Don't clean the milk frother with inflammable detergents.
- ▶ Clean the milk frother again thoroughly when the machine hasn't been used for a long time.

5 Disposal of the Old Device

Old electric and electronic devices frequently still contain valuable materials. However, they also contain damaging substances, which were necessary for their functionality and safety.

If these were put in the non-recyclable waste or were handled incorrectly, they could be detrimental to human health and the environment. Therefore, do not put your old device into the non-recyclable waste under any circumstances.



Please note

- ▶ Utilize the collection point, established in your town, to return and recycle old electric and electronic devices. If necessary, contact your town hall, local refuse collection service or your dealer for information.
- ▶ Ensure that your old device is stored safely away from children until it is taken away.

6 Guarantee

12 Months Limited Warranty

Caso Design USA warrants that for a period of 12 months from the date of purchase, this product will be free from defects in material and workmanship. Caso Design USA at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. DO NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of the initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

This limited warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than

Caso Design USA service center. Further this limited warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Caso Design USA's Liability?

Caso Design USA shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Caso Design USA disclaims all other warranties, conditions, or representations, express implied, statutory or otherwise.

Caso Design USA shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of the incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state, or jurisdiction to jurisdiction.

7 Technical Data

Device	Milkfrother
Name	CASO Fomini
Battery	2 x 1,5V (AA)
Item No.:	1610
Dimensions :	1.57" x 9.25" x 1.18"