
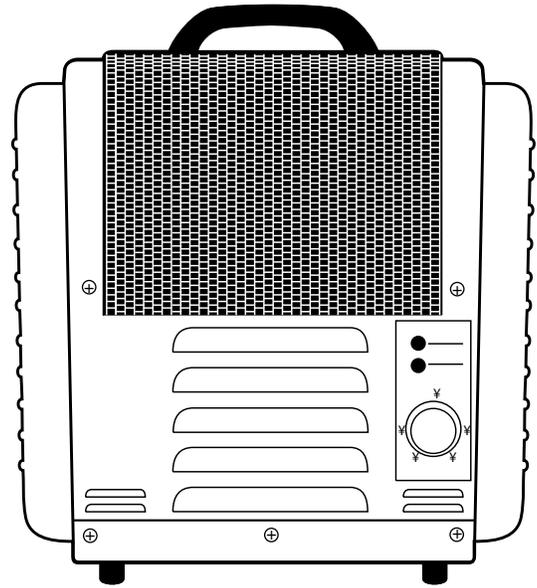


COMFORT ZONE®

CZ240 Heavy Duty (Industrial Grade) Fan Forced Portable Heater

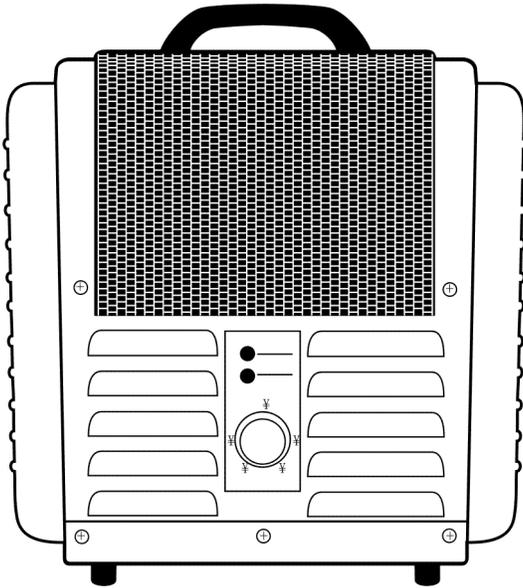

WARNING

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and personal injury including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not touch hot heater surfaces with bare skin. Use handle to move heater.
3. Keep combustible material, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
4. Extreme caution is necessary when heater is used by or near children or invalids, and when heater is operating unattended.
5. Always unplug heater when no heat is desired.
6. Do not use any heater having a damaged cord or plug, or after it malfunctions or is dropped or damaged. Return heater to an authorized repair service for examination, adjustments, or repair.
7. Do not use outdoors.
8. This heater is not intended for use in wet or damp locations, such as bathrooms or laundry areas. Never put heater where it may fall into a bathtub or other water container.
9. Do not run cord under carpets or cover it with rugs or runners. Be sure cord cannot be stepped on or tripped over.
10. To disconnect heater, set control to OFF and unplug it.
11. Connect to properly grounded outlets only.
12. Do not block or place anything in air vent or grille openings as this may cause electric shock, fire or damage.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces such as a bed, where openings may become blocked.
14. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
15. Use this heater only as instructed here. Any other use may cause fire, electric shock or injuries.
16. Do not use with an extension cord. Plug cord directly into a properly grounded outlet only. If an extension cord must be used, cord shall be No. 12 AWG minimum size and rated not less than 5000 watts. If used, the extension cord must have the proper 240 volt receptacle configuration.
17. This heater includes a visual alarm to warn that parts of the heater are getting excessively hot. If a red caution light comes on, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperature. **DO NOT OPERATE THE HEATER WITH THE CAUTION LIGHT ON.**

SAVE THESE INSTRUCTIONS