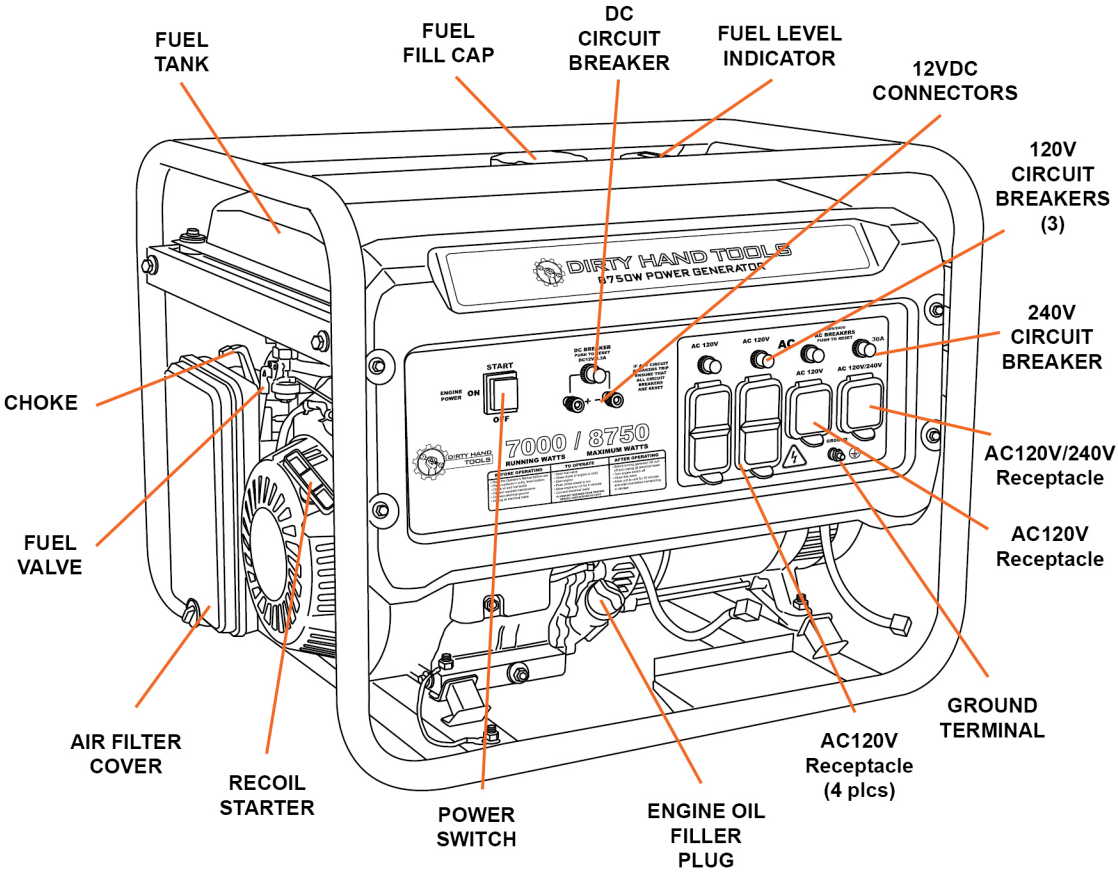
FUEL TANK
FUEL FILL CAP
DC CIRCUIT BREAKER
FUEL LEVEL INDICATOR
12VDC CONNECTORS
120V CIRCUIT BREAKERS (3)
240V CIRCUIT BREAKER
CHOKE
FUEL VALVE
AC120V/240V Receptacle
AC120V Receptacle
GROUND TERMINAL
AIR FILTER COVER
RECOIL STARTER
POWER SWITCH
ENGINE OIL FILLER PLUG
AC120V Receptacle (4 plcs)
DIRTY HAND TOOLS
8750W POWER GENERATOR
START
ENGINE POWER
ON
OFF
7000 / 8750
MAXIMUM WATTS
RUNNING WATTS
AFTER OPERATING
AC 120V
AC 240V
AC 120V/240V
30A
GROUND