


HOTHOUSE : FIBER POLE AND TIE DOWN DIAGRAM

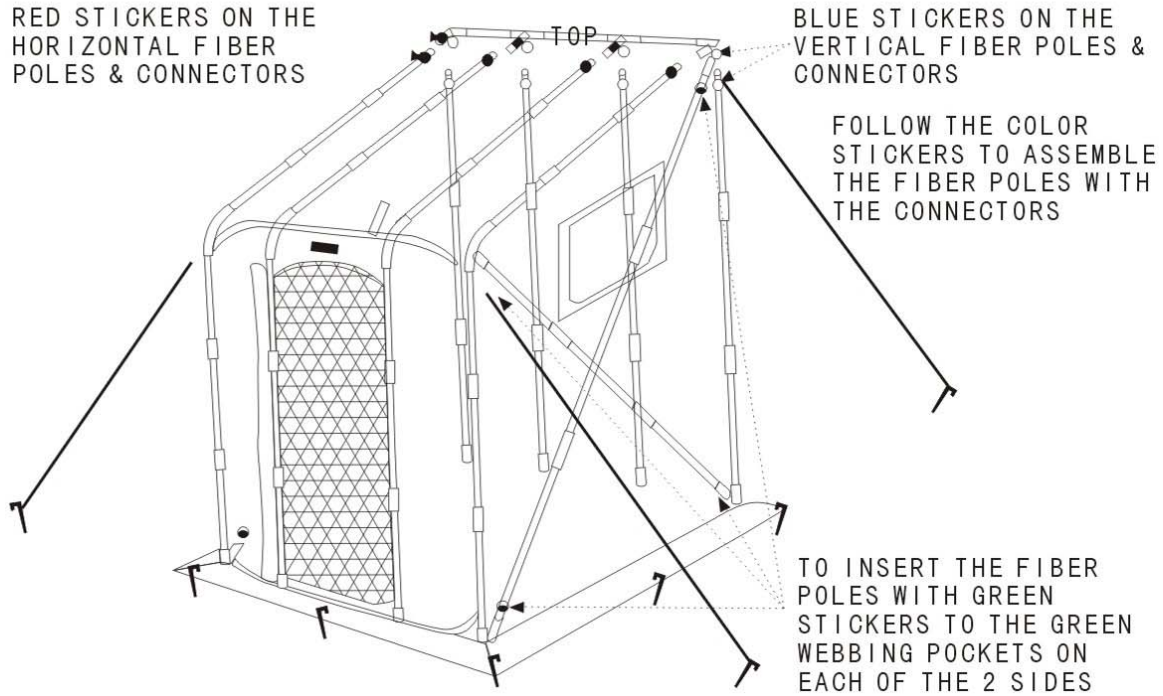

HotHouse set-up

Step 1. Unpack FlowerHouse and accessories, allowing the spring steel bands to pop open.

Step 2. Take fiberpoles out of pack and assemble completely. Ensure poles are fully seated into each other. You will have 4 "L" shaped poles, 4 straight poles, 2 longer straight poles and 1 straight pole with cross members.

Step 3. Install the sidewall support poles (the two longer poles) by inserting the poles into the pockets sewn inside the FlowerHouse in each bottom front sidewall corner. Insert the top end of the pole into the roof support pole (the pole with cross members) which is installed in the back roof peak.

Step 4. Install the back wall supports (four equal length poles) by inserting the top end of each pole in the roof support pole, then inserting the bottom end of the pole in the corresponding pocket sewn into the back bottom wall. (Hint: The pole has enough flex in it to bend while inserting into the pockets)

Step 5. Install the "L" shaped poles by inserting the top end into the fittings in the roof support pole. The bottom of the pole is inserted into the corresponding pocket sewn at the front edge floor, leave the pole off center till both ends of the pole are in place. Once both ends are installed, push pole into place.

Step 6. Stake Greenhouse in place and install high wind tie downs.

(Hint: Fiberpole pockets may be obscured behind the spring steel bands. Pull the band away from the wall and insert fiberpoles into pockets)