


BLOOMHOUSE:FIBER POLE AND TIE DOWN DIAGRAM

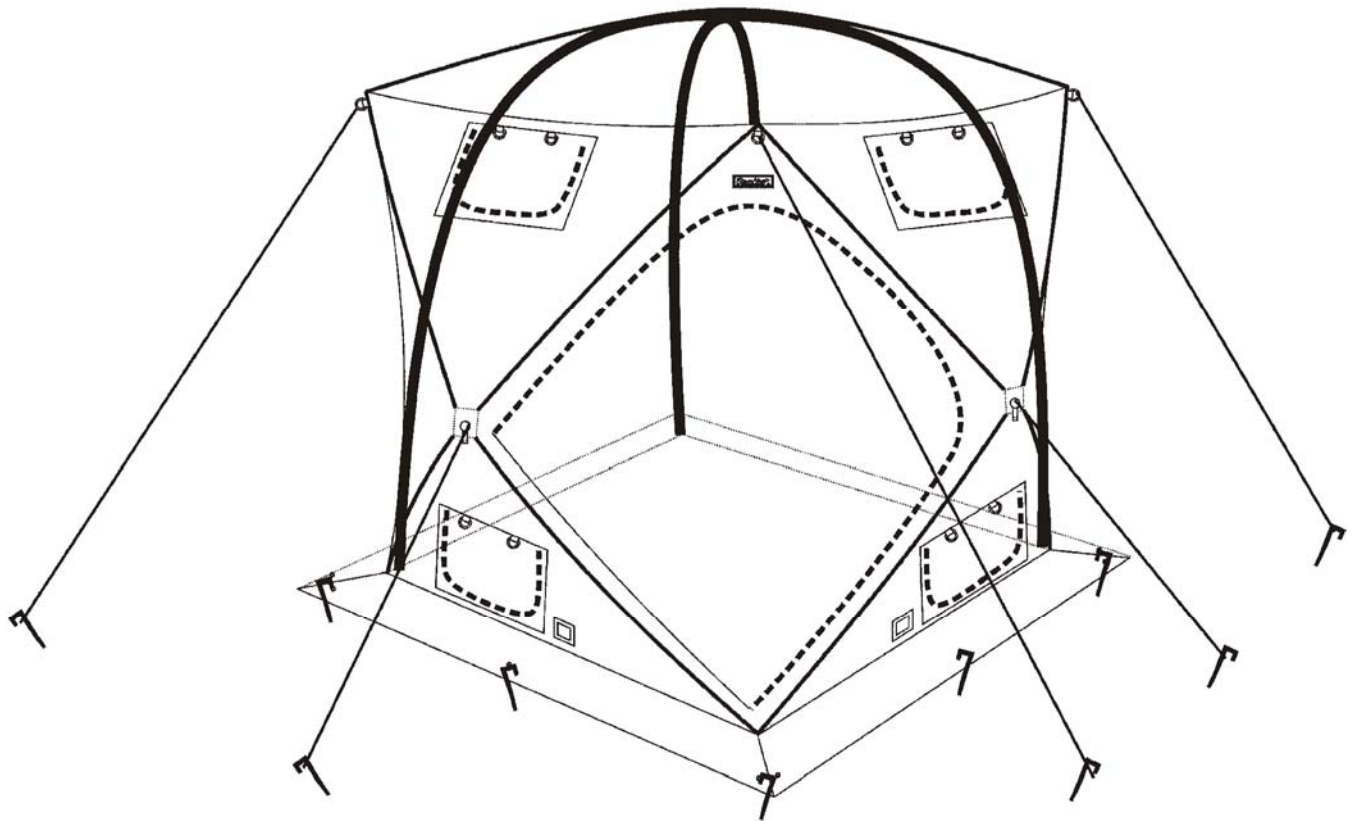

Bloomhouse Heavy Weather Kit

includes two long fiberpoles of different length

After Bloomhouse is set up and in final location

Assemble both poles to full length

Take the longest fiberpole ,rest one end in bottom right inside corner then rest the other end in the bottom left inside corner , the bent pole should cross the top center of the inside of the roof

Then take the shorter of the two poles , rest one end at the back corner across from the door then rest the other end in the corner above the door .

Be sure the Bloomhouse is staked or weighted at the floor and high wind tie downs are attached to the eye bolts in the center of the walls.