



Round Bracket

ASSEMBLY INSTRUCTIONS

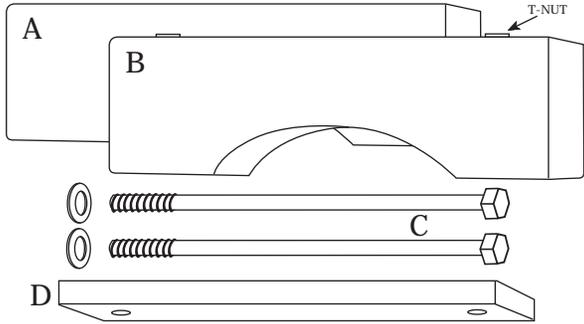

Wood Clamps provide a means for attaching your gate to a post without damaging the post with screws. Please follow these procedures to install a CARDINAL GATE.

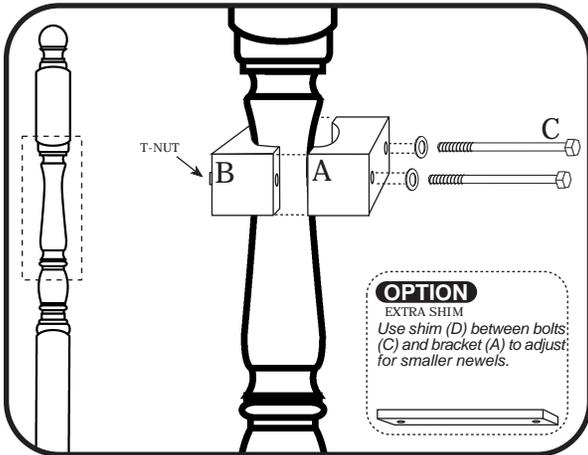

Insert bolt with washer through clamp and screw into T-nut on opposite clamp. The clamp with the T-nut should be on the outside of the post. Mount gate according to instructions. Use shim if necessary to ensure level gate installation.


It may be necessary to obtain longer or shorter bolts from a hardware store, depending on post thickness.

It may be desirable to use a short piece of duct tape or weather strip between clamp and post to protect finish. CARDINAL GATES, INC. will not be responsible for any damage to the finish of a post.


CARDINAL GATES, INC.
79 Amlajack Way • Newnan, GA 30265
770-252-4200 • www.cardinalgates.com

Round Bracket

ASSEMBLY INSTRUCTIONS

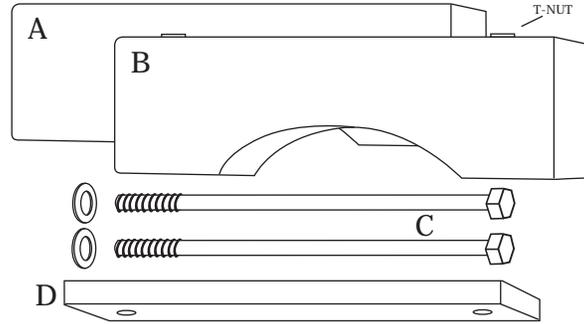

Wood Clamps provide a means for attaching your gate to a post without damaging the post with screws. Please follow these procedures to install a CARDINAL GATE.

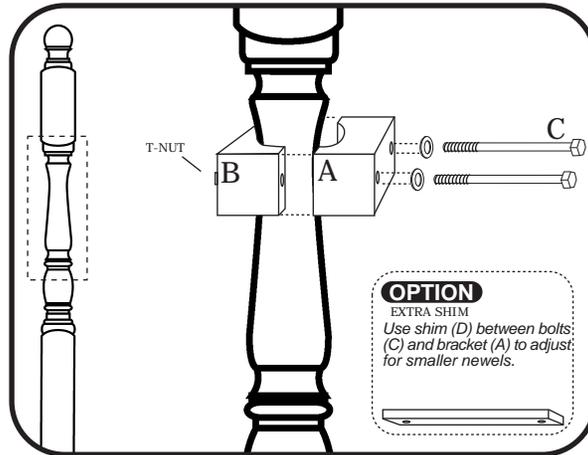

Insert bolt with washer through clamp and screw into T-nut on opposite clamp. The clamp with the T-nut should be on the outside of the post. Mount gate according to instructions. Use shim if necessary to ensure level gate installation.


It may be necessary to obtain longer or shorter bolts from a hardware store, depending on post thickness.

It may be desirable to use a short piece of duct tape or weather strip between clamp and post to protect finish. CARDINAL GATES, INC. will not be responsible for any damage to the finish of a post.


CARDINAL GATES, INC.
79 Amlajack Way • Newnan, GA 30265
770-252-4200 • www.cardinalgates.com

Round Bracket

ASSEMBLY INSTRUCTIONS

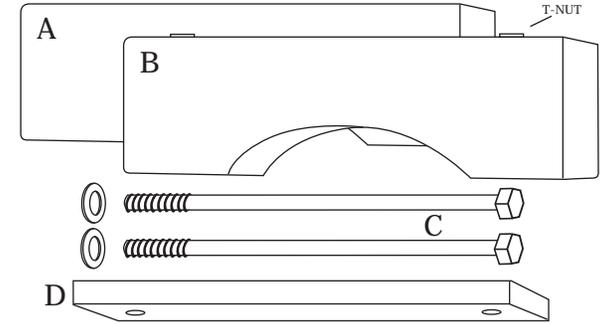

Wood Clamps provide a means for attaching your gate to a post without damaging the post with screws. Please follow these procedures to install a CARDINAL GATE.

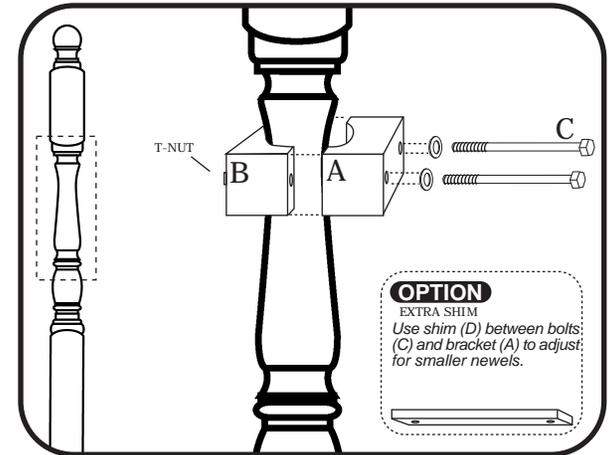

Insert bolt with washer through clamp and screw into T-nut on opposite clamp. The clamp with the T-nut should be on the outside of the post. Mount gate according to instructions. Use shim if necessary to ensure level gate installation.

It may be necessary to obtain longer or shorter bolts from a hardware store, depending on post thickness.

It may be desirable to use a short piece of duct tape or weather strip between clamp and post to protect finish. CARDINAL GATES, INC. will not be responsible for any damage to the finish of a post.

CARDINAL GATES, INC.
79 Amlajack Way • Newnan, GA 30265
770-252-4200 • www.cardinalgates.com