

FRONT RECEIVER HITCH (2WD & 4WD) These kits are ONLY used on full size UTVs

As illustrated below, this kit consists of:

| | |
|----------------------|--------|
| Front Receiver Hitch | Qty: 1 |
| Back Plate | Qty: 1 |
| 3/8" x 1" Bolts | Qty: 4 |
| 3/8" Keps Nuts | Qty: 4 |

TOOLS REQUIRED

7/16" Wrench
7/16" Socket and ratchet

As illustrated below, this kit consists of:

| | |
|----------------------|--------|
| Front Receiver Hitch | Qty: 1 |
| 5/16 x 1 3/8 U-Bolts | Qty: 4 |
| 5/16" Nylock Nuts | Qty: 8 |
| 5/16" Flat Washers | Qty: 8 |



2WD UNITS

2-40723

4WD UNITS

2-40729



Procedure:

Procedure:

- 1** Place the four 3/8" x 1" bolts in the four holes in the receiver.
- 2** Place the back plate on the back side of the suspension mount with the bolt holes visible through the large opening in the suspension plate as shown in figure 1.
- 3** Place the receiver on the front suspension mount inserting the bolts through the large opening and into the holes in the back plate.
- 4** Place the receiver on the front suspension mount inserting the bolts through the large opening and into the holes in the back plate. Install the nuts and tighten as shown finished in figure 2 on page 2.

- 1** Place the hitch between the two vertical front frame rails.
- 2** Insert U-bolts and install a washer and nut on each end.
- 3** Tighten nuts evenly so that the same amount of threads show on each side.

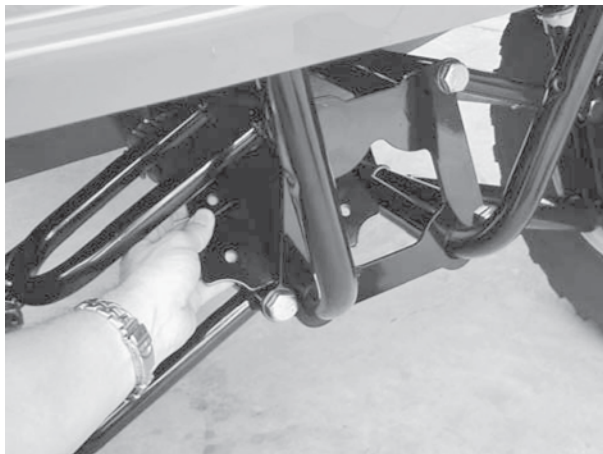


Fig. 1

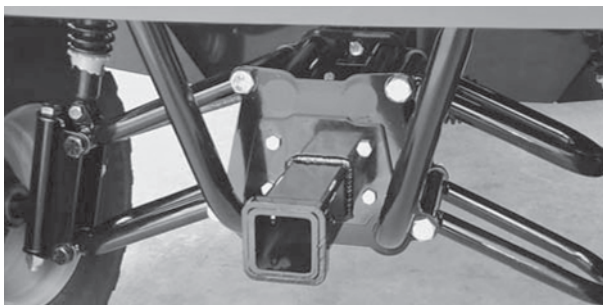


Fig. 2



vertical front frame rails

