



Model# BG-09
Weed Grubber
Assembly Instructions



Assembly Instructions Model BG-02

Step 1: Attaching The Jaws

With the spring (#7) facing down place the M10x35 bolt (#13) through the base of the handle and the end of the Jaws. Secure by tightening the Lock Nut (#25) on to the M10x35 Bolt (#13).

See **Figure 1**

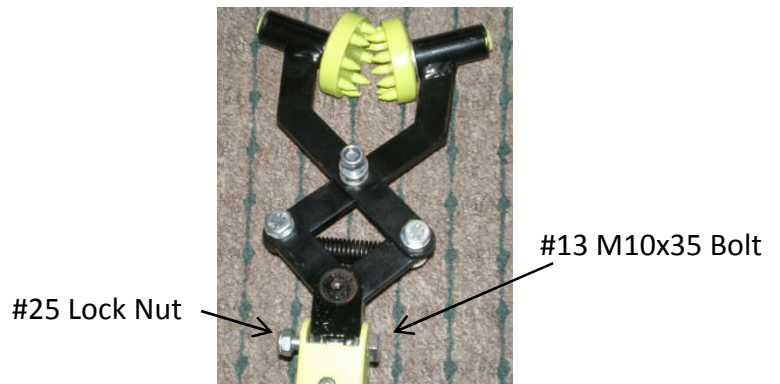


Figure 1

Step 2: Attach The Cable To The Jaws

Attach the looped end of the cable (#11) to the Center Bolt on the Jaws. Put a washer on each side of the cable as pictured in **Figure 2**.

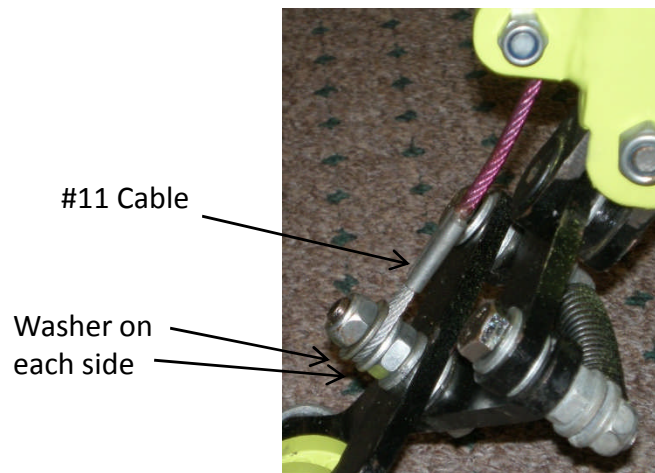


Figure 2

Step 3: Attach Cable to Locking Lever

Put the bolt end of the cable through the Square Bolt M6 (#10) with one M6 Lock Nut (#20) on each side of the Square Bolt. Tighten the M6 Lock Nuts snug to the Square Bolt. Do not over tighten.

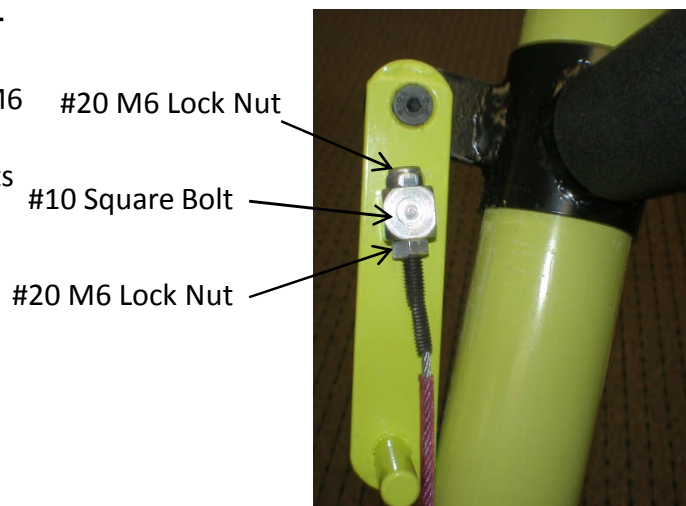


Figure 3

Step 4: Set Tension On Cable

With the unit and jaws laid out straight and with the locking lever in the down position adjust the side handle assembly so that cable is straight with very little tension on it. **See Figure 4**
Next secure the Side Handle Assembly by tighten the bolts on the bracket.

**note: When cable is hooked up correctly the Locking lever and jaws should look like Figures 5 & 6 when opened completely. Be sure not to have too much tension on the cable.*

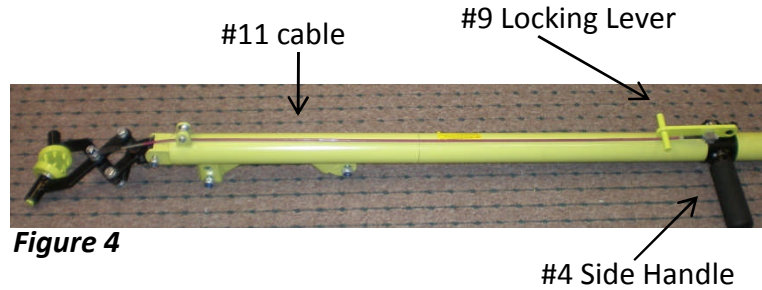


Figure 5



Figure 6

Step 6: Attaching The Lift Leverage Stand

Slide the Lift Leverage Stand (#3) into the intended hole on the back of the handle. Put the M10x40 Hex Bolt (#16) through the outer most hole on the handle and through the hole in the Lift Leverage Stand. Secure by tightening bolt. **See Figure 7**



Figure 7