




www.kamprite.com


# THE ORIGINAL TENT COT SET UP INSTRUCTIONS




www.kamprite.com

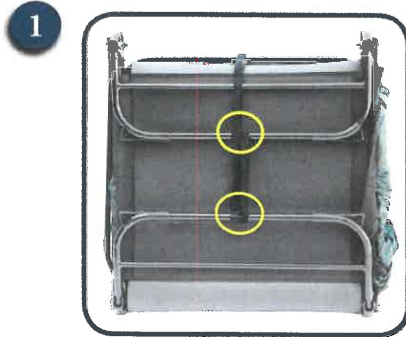


1. REMOVE FROM BAG; RELEASE THE BUCKLE ON THE STRAP, UNCLIP CLASP HOOK

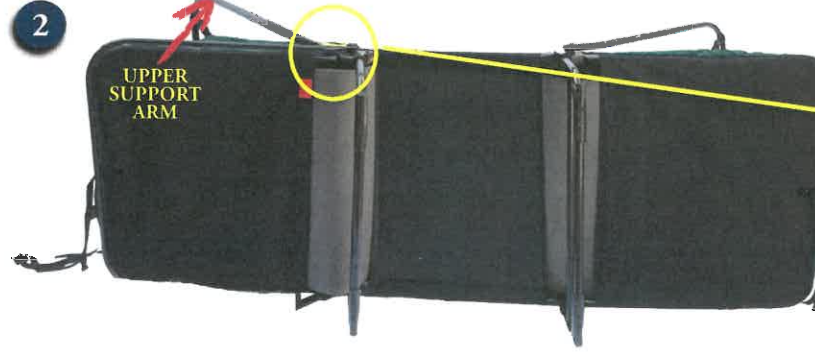

2. LAY THE COT ON ITS SIDE & SPREAD THE BOTTOM SUPPORT LEGS OF THE COT UNTIL FULLY OPENED

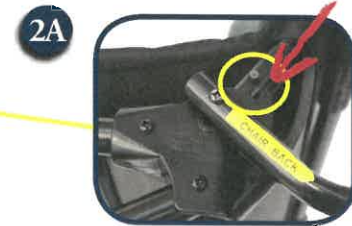

2A. **\*\*PLEASE NOTE\*\***  
THE SIDE MARKED "CHAIR BACK" HAS A LOCKING HINGE. IF THIS BECOMES ENGAGED, SIMPLY UNLOCK THE HINGE BY LIFTING UP ON THE SUPPORT ARM UNTIL THE PIN IS RELEASED FROM THE HINGE

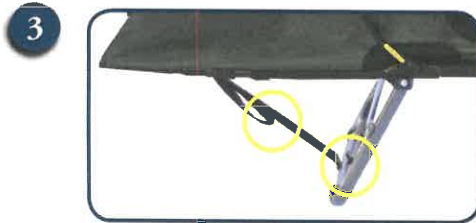

3. ATTACH STRAP "C" CLASPS TO BOTTOM SUPPORT CROSSBARS LOCATED AT EACH END, THEN CONNECT THE SNAP BUCKLES. TIGHTEN STRAPS UNTIL TAUT & PLACE COT UPRIGHT



4. CLIP 3 TOP CLIP HOOKS ON BOTH ENDS (6 TOTAL) TO UPPER SUPPORT ARMS



5. ENSURE CLIPS ARE SECURE ON UPPER SUPPORT ARMS

**FINISHED!**  
YOUR ORIGINAL  
TENT COT IS  
READY TO USE

