




www.kamprite.com

# THE OVERSIZE SET UP INSTRUCTIONS


## TENT SET-UP




www.kamprite.com

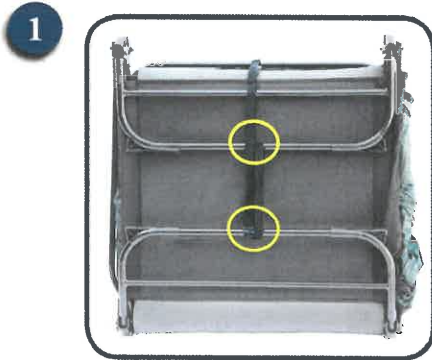

1. REMOVE FROM BAG; RELEASE THE BUCKLE ON THE STRAP; UNCLIP CLASP HOOK

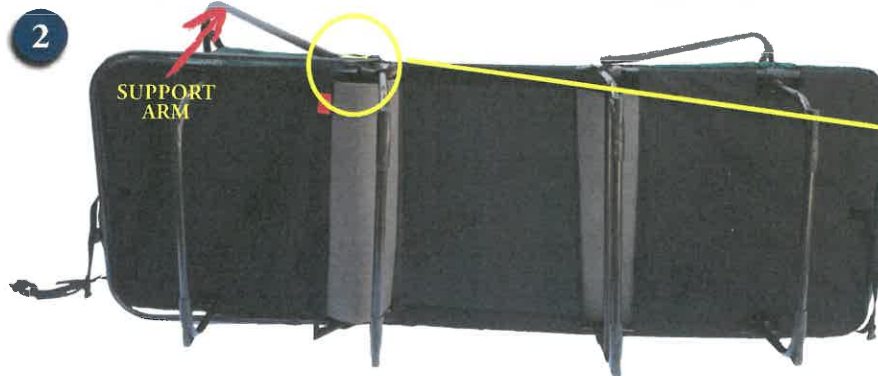

2. LAY THE COT ON ITS SIDE & SPREAD THE BOTTOM SUPPORT LEGS OF THE COT UNTIL FULLY OPENED

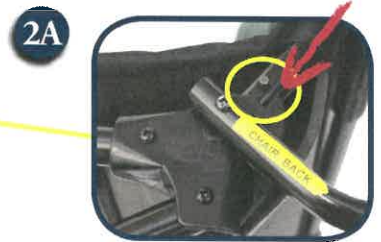


2A. **\*\*PLEASE NOTE\*\*** THE SIDE MARKED "CHAIR BACK" HAS A LOCKING HINGE. IF THIS BECOMES ENGAGED, SIMPLY UNLOCK THE HINGE BY LIFTING UP ON THE SUPPORT ARM UNTIL THE PIN IS RELEASED FROM THE HINGE



3. ATTACH STRAP "C" CLASPS TO BOTTOM SUPPORT CROSSBARS LOCATED AT EACH END, THEN CONNECT THE SNAP BUCKLES. TIGHTEN STRAPS UNTIL TAUT & PLACE COT UPRIGHT



6. INSERT TIPS OF DOME-TOP POLES INTO THE 4 CORNER CLIP HOLES

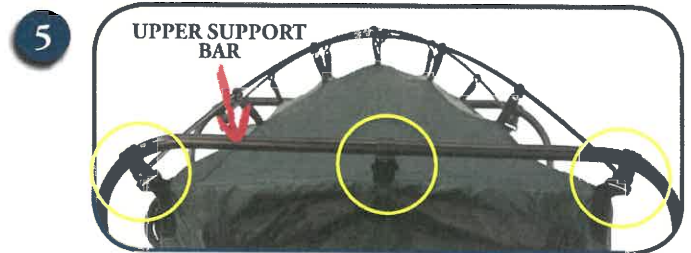

4. CLIP ALL SIX (6) TOP HOOKS TO UPPER SUPPORT BARS, THEN CONNECT DOME-TOP POLES TO TOP CLIPS



5. ENSURE DOME-TOP POLES ARE CROSSED & CLIPPED AT THE CENTER

**FINISHED!**  
**YOUR OVERSIZE**  
**TENT COT IS**  
**READY TO USE**

