

## LB1-Kit, BKit, TKit - (2) 24" x 24" x 9/16" LocBoard® Pegboards, 46 Hooks

Read all instructions completely before installing. Should you have any questions about your installation, please call Customer Service at 440-248-5480

### Review Carton Contents: (2 Boxes Make Up This Kit)

2 Pcs. LocBoard Pegboard 24" x 24" x 9/16" (BKit= Blue, TKit=Tan)

46 Pcs. Assortment of LocHook® Pegboard Hooks

- Boards can be positioned side by side or in separate location in vertical or horizontal mounting positions.
- Pegboards fasten directly to concrete, solid wood and hollow wall structures without the use of furring strips.
- Pegboards are designed with internal mounting flanges that keep mounting hardware hidden from sight and add to the board's structural integrity and holding power.
- If installing to bare studs you will need to install wood headers before completing installation.

### LocBoard™ Installation:

**For Concrete block installation:** (mounting hardware not included.) You can use either masonry screws or concrete plastic anchors with appropriate sized #8 screws. Head diameter of screw should not exceed .36 (3/16" masonry screws will work.)


**For Drywall and plaster installation:** (mounting hardware not included.) Use either self-drilling drywall anchors or normal heavy-duty plastic drywall anchors in addition to #8 screws.

1. (IMPORTANT!) Select wall location for your LocBoards and the desired vertical or horizontal mounting pattern you wish to mount in. When selecting a location for mounting always make sure that mounting locations do not fall in line with, are adjacent to or interfere with any internal or external electrical wiring, wall mounted or built-in electrical appliances, heaters, gas lines, ductwork or plumbing inside of wall, or are located on the opposite side of any wall surface from where you are mounting. If you are unsure, please consult a professional before proceeding with installation.
2. There are three screw holes in each mounting flange on the back of your LocBoard that are accessible through the square holes on the front (see images on back).
3. Place one LocBoard with mounting flanges flat against wall surface, while using a level to make sure your board is straight and squared. Mark the centers of all 6 screw holes onto your wall surface. Note: Installation for first board should be completed before marking mounting holes for the second board.
4. Pre-drill holes for #8 wall anchors marked in Step 3 using 7/32" standard or masonry drill bit depending on wall surface. If you hit a wood stud stop drilling and using a 7/64" drill bit create a pilot hole for the wood screw, Note: avoid over-drilling holes. (Plastic wall anchors should fit snug.)
5. Insert plastic wall anchors in each hole drilled in Step 4 except where you drilled 7/64" pilot hole for wood stud.
6. Align mounting holes in wall surface with screw holes in back flanges. Insert wood screws through the front square opening and into pre-installed plastic wall anchors. Tighten all screws. The head of each screw should not be visible and will be tight against inside surface of each mounting flange.
7. Repeat Steps 2-6 for second LocBoard installation.

**Hook Installation:** Insert the hook back locking tabs into front square openings of tool board. Slide each hook securely into place and install required number of LocScrews (LocScrews are supplied with each pack of LocHooks.)

Each LocHook has the unique capability of being securely mounted vertically and horizontally. Panels must be securely fastened to sound wall structures to support heavy loads.

## Mounting Instructions for LB1-Kit, BKit, and TKit

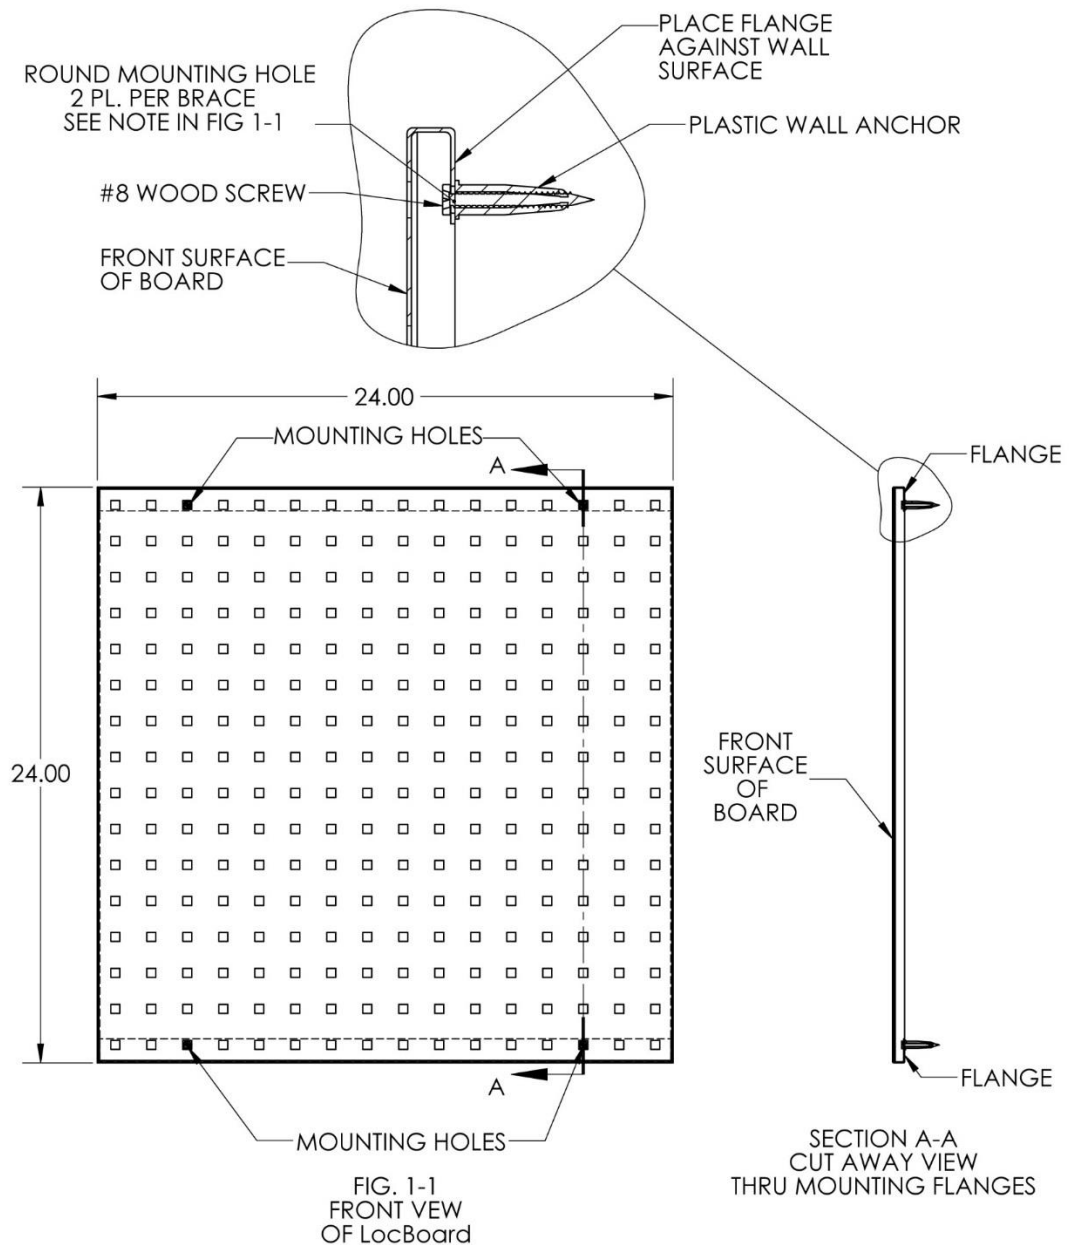

NOTE: USE (2) MOUNTING HOLES PER FLANGE,  
(4) PLACES TOTAL