

## LB2-S - (2) 24" x 42-1/2" x 9/16" Stainless Steel LocBoard®(s)

**Read all instructions completely before installing. Should you have any questions about your installation, please call Customer Service at 440-248-5480**

### **Review Carton Contents: (1 Box Makes Up This Kit)**

2 Pcs Stainless Steel LocBoard Pegboard 24" x 42.5"  
Mounting Hardware

- Boards can be positioned side by side or in separate location in vertical or horizontal mounting positions.
- Pegboards fasten directly to concrete, solid wood and hollow wall structures without the use of furring strips.
- Pegboards are designed with internal mounting flanges that keep mounting hardware hidden from sight and add to the board's structural integrity and holding power.
- If installing to bare studs you will need to install wood headers before completing installation.

### **Stainless Steel LocBoard™ Installation:**

1. (IMPORTANT!) Select wall location for your Stainless Steel LocBoards and the desired vertical or horizontal mounting pattern you wish to mount in. When selecting a location for mounting always make sure that mounting locations do not fall in line with, are adjacent to or interfere with any internal or external electrical wiring, wall mounted or built-in electrical appliances, heaters, gas lines, ductwork or plumbing inside of wall, or are located on the opposite side of any wall surface from where you are mounting. If you are unsure, please consult a professional before proceeding with installation.
2. There are three screw holes in each mounting flange on the back of your Stainless Steel LocBoard that are accessible through the square holes on the front (see images on back).
3. Place one Stainless Steel LocBoard with mounting flanges flat against wall surface, while using a level to make sure your board is straight and squared. Mark the centers of all 6 screw holes onto your wall surface. Note: Installation for first board should be completed before marking mounting holes for the second board.
4. Pre-drill holes for #8 wall anchors marked in Step 3 using 7/32" standard or masonry drill bit depending on wall surface. If you hit a wood stud stop drilling and using a 7/64" drill bit create a pilot hole for the wood screw, Note: avoid over-drilling holes. (Plastic wall anchors should fit snug.)
5. Insert plastic wall anchors in each hole drilled in Step 4 except where you drilled 7/64" pilot hole for wood stud.
6. Align mounting holes in wall surface with screw holes in back flanges. Insert wood screws through the front square opening and into pre-installed plastic wall anchors. Tighten all screws. The head of each screw should not be visible and will be tight against inside surface of each mounting flange.
7. Repeat Steps 2-6 for second Stainless Steel LocBoard installation.

## MOUNTING INSTRUCTIONS FOR LB2-S


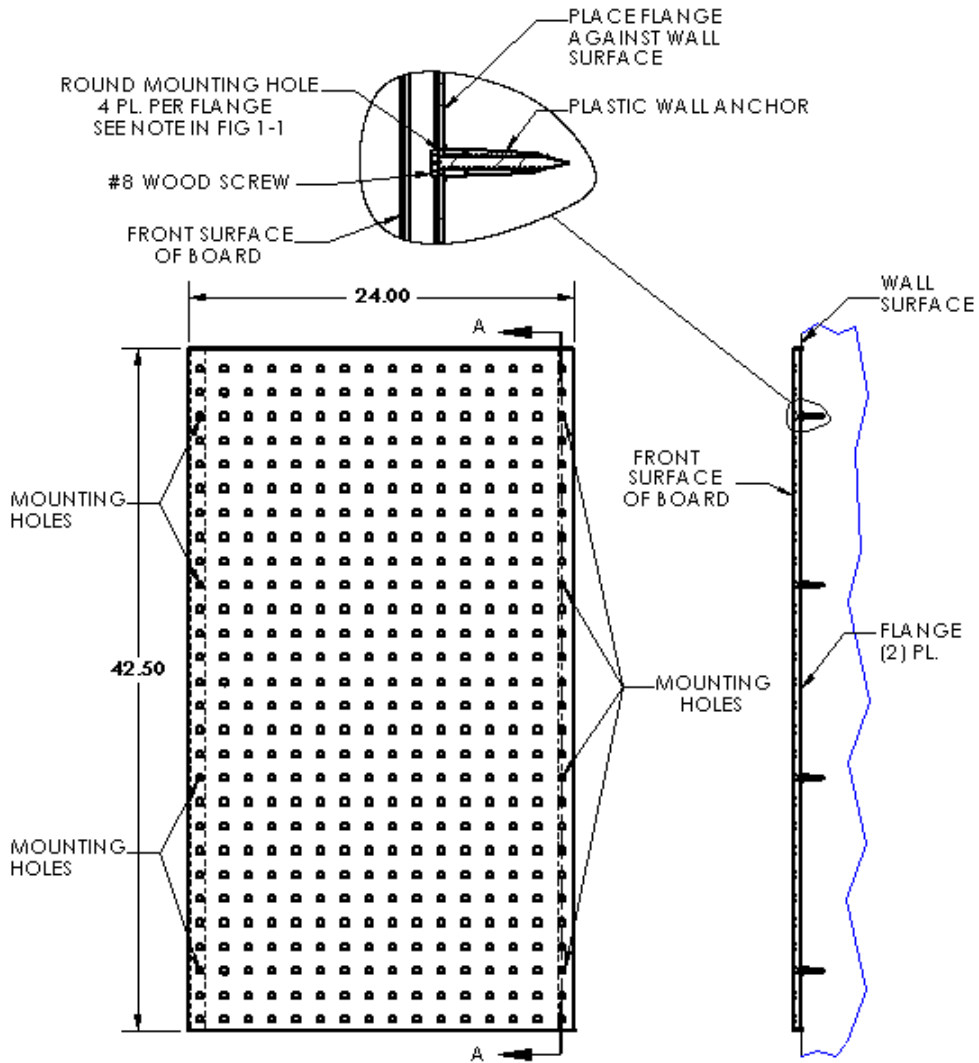


FIG. 1-1  
FRONT VIEW  
OF LocBoard

FIG 1-2  
SECTION A-A  
CUTAWAY VIEW  
THRU MOUNTING FLANGE

NOTE: USE (2) MINIMUM MOUNTING HOLES  
PER FLANGE  
(4) PLACES TOTAL

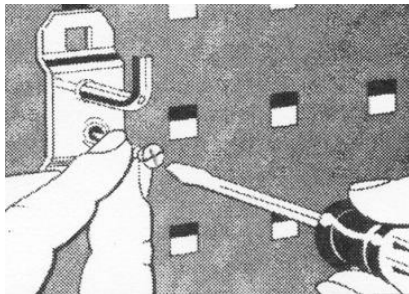

Please contact our Customer Service Division with any questions at:  
30700 D Carter Street · Solon, OH 44139 · (P) 440.248.5480 · [support@tritonproducts.com](mailto:support@tritonproducts.com)

For a full line of products visit [www.tritonproducts.com](http://www.tritonproducts.com)