




POWERSPORTS

CT200U Mini Bike Assembly

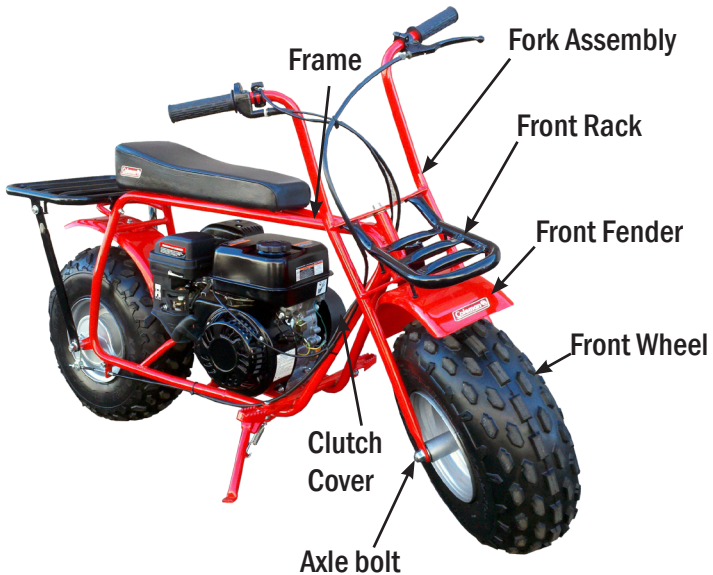

MINIMAL ASSEMBLY REQUIRED

All tools and hardware are included for assembly.

1. Attach handlebar fork assembly to mini bike frame.
2. Attach front rack and front fender.
3. Install front wheel with axle bolt provided.
4. Clip on Clutch cover.