

INSTALLATION INSTRUCTIONS

EQUIPMENT REQUIRED:

WIRING ACCESS LOCATION: SUV3, SUV4

DRILL BITS:

HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN IS NOT INSTALLED.


WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 3/4, 18mm

VEHICLE

TOYOTA 4RUNNER


DO NOT EXCEED LOWER OF
TOWING VEHICLE MFR'S RATINGS OR

HITCH TYPE ▼	MAX GROSS TRLR WT(LB)	MAX TONGUE WT(LB)
WEIGHT DISTRIBUTING	5,500	550
WEIGHT CARRYING BALL MOUNT	5,000	500




FASCIA

HITCH SHOWN IN PROPER POSITION

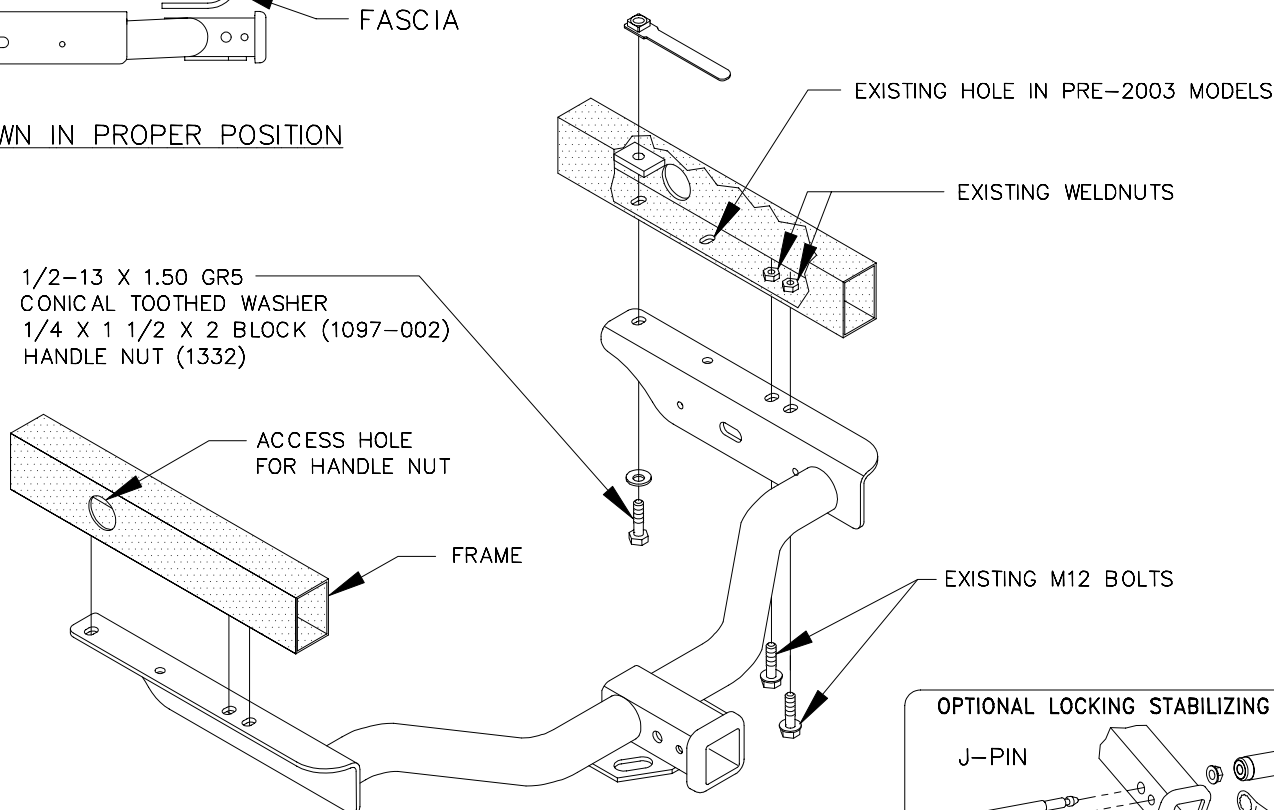

OPTIONAL LOCKING STABILIZING PIN

J-PIN

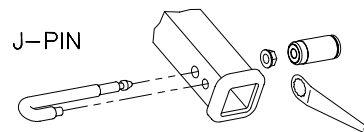

(Order Separately)

NOTE: SPARE TIRE MAY HAVE TO BE REPOSITIONED SLIGHTLY FORWARD TO AVOID CONTACT WITH RECEIVER TUBE.

1. REMOVE TOW HOOKS FROM VEHICLE FRAME AND RETURN TO OWNER FOR REINSTALLATION IF HITCH IS REMOVED FROM VEHICLE.
2. RAISE HITCH INTO POSITION AND ALIGN SIDE BRACKETS WITH EXISTING TOW HOOK HOLES AT END OF FRAME RAILS, REINSTALL EXISTING M12 BOLTS REMOVED IN STEP 1.
3. **FORWARD ATTACHMENT:** FISHWIRE 1/4 X 1 1/2 X 2 BLOCK (1097-002) FROM END OF FRAME. INSTALL HEX BOLT AND CONICAL TOOTHED WASHER AND FASTEN WITH HANDLE NUT (1332) AS SHOWN ABOVE.

TIGHTEN ALL M12 FASTENERS TO 68 LB.-FT.
TIGHTEN ALL 1/2 GR5 HEX BOLTS TO 50 LB.-FT.

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR CONNECTING DEVICES AND TOWING SYSTEMS OF THE STATE OF NEW YORK, V.E.S.C. REGULATION V-5 AND SAE J684.

APPROX WEIGHT (LB.)

40

FASTENER KIT

01130-954

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.

TOWING PRODUCTS
Plymouth, Michigan