

# Installation Instructions

Part Numbers:

## Nissan Sentra


(WILL NOT FIT SR MODEL)

**24907**

**60338**

**77294**

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

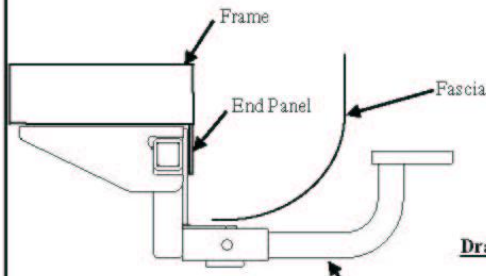

**Drawbar Kit:**  
3593

Drawbar must be used in the **RISE** position only.


Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Carrying Ball Mount	<b>2000 (907 Kg)</b>	<b>200 (91 Kg)</b>

**Wiring Access Location:** PC3,4

Accessory Rating	<b>B</b>
------------------	----------

### Hitch Shown In Proper Position


- Equipment Required:** Power Drill  
**Fastener Kit:** 24907F  
**Wrenches:** 9/16, 11/16  
**Drill Bits:** 1", 7/16

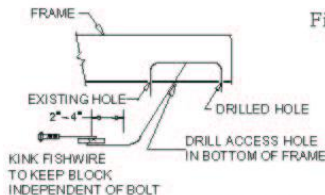

#### EXAMPLE OF FISHWIRE PROCEDURE

**Figure 4**

Fishwiring Location

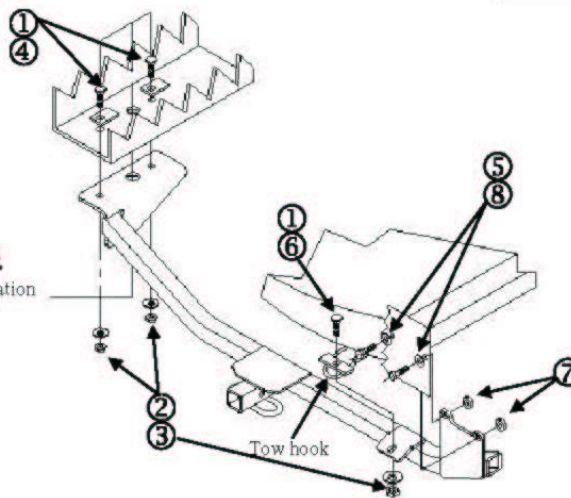

①	Qty. (3)	CARRIAGE BOLT – 7/16-14 X 1.75 GR5	⑥	Qty. (1)	BLOCK .250 x 1.00 x 3.00
②	Qty. (3)	CONICAL WASHER – 7/16"	⑦	Qty. (2)	LOCKNUT FLG 3/8-16
③	Qty. (3)	HEX NUT – 7/16-14	⑧	Qty. (2)	CONICAL WASHER 3/8
④	Qty. (2)	7/16" SQ HOLE WASHER	⑨	Qty. (2)	PULL WIRE – 7/16"
⑤	Qty. (2)	BOLT 3/8-16 X 1.25			

- Hold hitch in place and use as a template to mark holes needed to be drilled in the driver side frame rail. (Hitch can be held up by the tow hook mount and the 3/8" bolts if needed). Remove hitch after holes are marked in these correct locations.
- Fish wire bolts and square hole washers up thru the middle access hole in the frame and out the 2 attachment holes.
- Raise hitch into position over the bolts in the frame and attach the 7/16" conical and nut. 3/8" bolts will push through the passenger side end panel holes that line up with the hitch at the frame rail. Install the 3/8" conical and nuts using a 9/16" socket and a box end wrench on the end panel side.
- Install the 7/16" Carriage Bolt and Block thru the vehicle tow hook and the bracket on hitch. Secure bolt using the 11/16" socket or box end wrench.

Tighten all 7/16" fasteners with torque wrench to 50 Lb.-Ft.

Tighten all 3/8" fasteners with torque wrench to 35 Lb.-Ft.

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.