



“ALL PRO” TRACTOR CANOPY “LAWN PRO” ZERO TURN MOWER CANOPY

MODELS: TAP1000 & LNP1012

⚠ WARNING

READ ALL INSTRUCTIONS BEFORE USING THE ALL PRO OR LAWN PRO CANOPIES
NOTE: ASSISTANCE IS NEEDED WITH THIS PRODUCT INSTALLATION. Failure to read instructions before use could result in injury or death.

Instructions for Installation and Use:

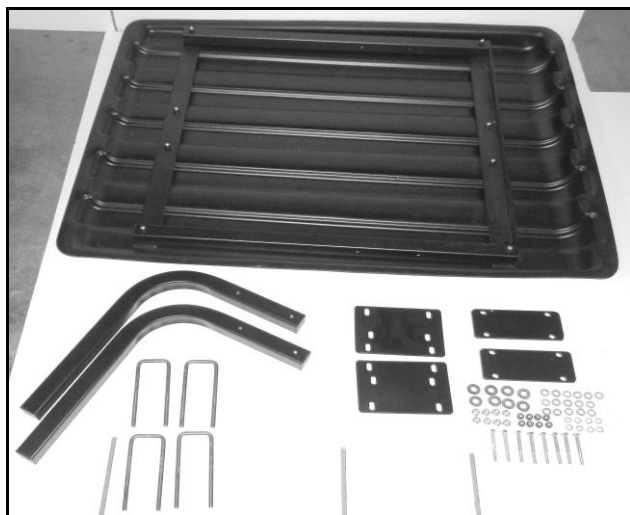


FIG. 1

CONTENTS: SEE FIG. 1

- 1 –COMPOSITE TOP WITH FRAME
- 1 –SET OF 2 UPRIGHT TOP SUPPORTS
- 4 -3/8” U BOLTS
- 4- 5/16” x 2 1/2” U BOLTS
- 8 -3/8” FLAT WASHERS
- 8 -3/8” LOCKNUTS
- 8 -5/16” X 2 1/4” BOLTS
- 16 -5/16” LOCKNUTS
- 24 -5/16” FLAT WASHERS
- 8 –EXTERNAL TOOTH LOCK WASHERS
- 2 –MOUNTING PLATES WITH 6 OBLONG HOLES
- 2 –MOUNTING PLATES WITH (4) 7/16”



FIG. 2

STEP 2-MEASURE THE ROLL BAR WIDTH ON YOUR TRACTOR OR MOWER. MEASURE THE WIDTH OF THE TRACTOR TOP FRAME. SEE FIG. 2

STEP 3-INSTALL MOUNTING PLATES WITH OBLONG HOLES TO CANOPY USING 5/16" BOLTS, FLAT WASHERS, EXTERNAL TOOTH LOCK WASHERS AND LOCK NUTS PROVIDED.

****NOTE**EXTERNAL TOOTH LOCK WASHERS MUST BE INSTALLED BETWEEN MOUNTING PLATES AND CANOPY FRAME. **SEE FIG. 3**



FIG. 3

****NOTE**MOUNTING PLATES CAN BE MOUNTED TO THE INSIDE SEE FIG. 4 OR OUTSIDE SEE FIG. 4A OF THE CANOPY FRAME TO ACCOMMODATE YOUR ROLLBAR WIDTH. ****



FIG. 4 (INSIDE MOUNT)



FIG. 4A (OUTSIDE MOUNT)



FIG. 4

STEP 4-ATTACH UPRIGHT SUPPORTS TO MOUNTING PLATES WITH OBLONG HOLES AS DONE IN STEP 3. *NOTE*SELECT THE APPROPRIATE HOLES OF THE 3 SETS AVAILABLE TO ACQUIRE THE DESIRED ANGLE FOR YOUR TRACTOR TOP/CANOPY.*

****NOTE**THESE BOLTS SHOULD BE LEFT SOMEWHAT LOOSE UNTIL FINAL ASSEMBLY HAS BEEN COMPLETED. ** SEE FIG. 4**

STEP 5-ATTACH 3/8" U-BOLTS TO VERTICAL SIDES OF ROLLBARS USING 3/8" FLAT WASHERS AND 3/8" LOCK NUTS PROVIDED. **NOTE TO INSTALL ON A LEXMARK LAWN MOWER WITH ROUND ROLL BARS, USE THE 5/16" X 2 1/2" U BOLT AND HARDWARE INSTEAD OF THE 3/8. **NOTE**U-BOLTS SHOULD BE LEFT LOOSE ENOUGH FOR THE UPRIGHT SUPPORT BARS TO BE INSERTED THRU U-BOLTS. ** SEE FIG. 5**



FIG. 5

STEP 6-WITH ASSISTANCE RAISE THE CANOPY ASSEMBLY AND SLIDE DOWN THRU THE U-BOLTS. ALSO WITH ASSISTANCE TIGHTEN THE 4 U-BOLTS AROUND THE UPRIGHT SUPPORTS AND ROLLBARS SECURELY. SEE FIG. 6



FIG. 6

STEP 7-BY UTILIZING THE RANGE OF MOVEMENT PROVIDED WITH THE OBLONG HOLES IN THE MOUNTING PLATES, HOLD CANOPY HORIZONTAL TO GROUND. TIGHTEN ALL HARDWARE SECURELY. SEE FIG. 7



FIG. 7

⚠ WARNING CANOPY DOES NOT OFFER ANY ADDITIONAL ROLLOVER PROTECTION.

⚠ WARNING NEVER ALLOW ANYONE TO SIT OR STAND ON CANOPY.

⚠ WARNING CANOPY IS NOT INTENDED TO TRANSPORT ANY CARGO AND/OR EQUIPMENT.

For more information about this or other products, contact us at:

Great Day, Inc.

604 Kimbrough Dr. * Tallulah, LA 71282 * (866) 649-1918 * www.greatdayinc.com