



# “QUICK DRAW” GUN RACK FOR SPORTING CLAYS

MODEL: QD804 SC

## **⚠ WARNING**

READ ALL INSTRUCTIONS BEFORE USING THE “QUICK DRAW” GUN RACK.

NOTE: Failure to read instructions before use could result in injury or death.

## **Instructions for Installation and Use:**



### **Contents: See Fig. 1**

- 2- GUN SUPPORT BARS WITH MOUNTING BRACES
- 1-WITH HORIZONTAL BRACES
- 2- SETS OF GUNCLIPS
- 4- 1” MULTI PLUGS (INSERT IN BOTH ENDS OF VERTICAL BARS)
- 4- ¼” X 1 ¼” BOLTS
- 4- ¼” X 1 ¾” BOLTS
- 4- ¼” LAG SCREWS
- 1-¼” X 2-1/4” BOLT
- 9- ¼” LOCKNUTS
- 18- 5/16” FLAT WASHERS
- 2- 5/16” STAR LOCKWASHERS



### **STEP 1:**

CONNECT HORIZONTAL SUPPORT BRACES TO GUN SUPPORT BAR USING 1- ¼” X 2-1/4” BOLT, 2- FLAT WASHERS, 2- STAR LOCKWASHERS, AND 2- ¼” LOCKNUTS. DO NOT OVER TIGHTEN. **FIG. 2 NOTE:** STAR LOCKWASHERS GO BETWEEN HORIZONTAL SUPPORT BARS AND VERTICAL GUN SUPPORT.

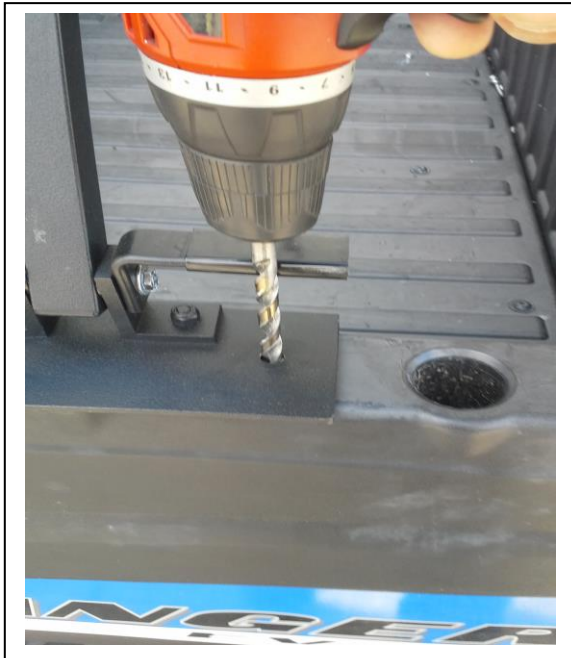
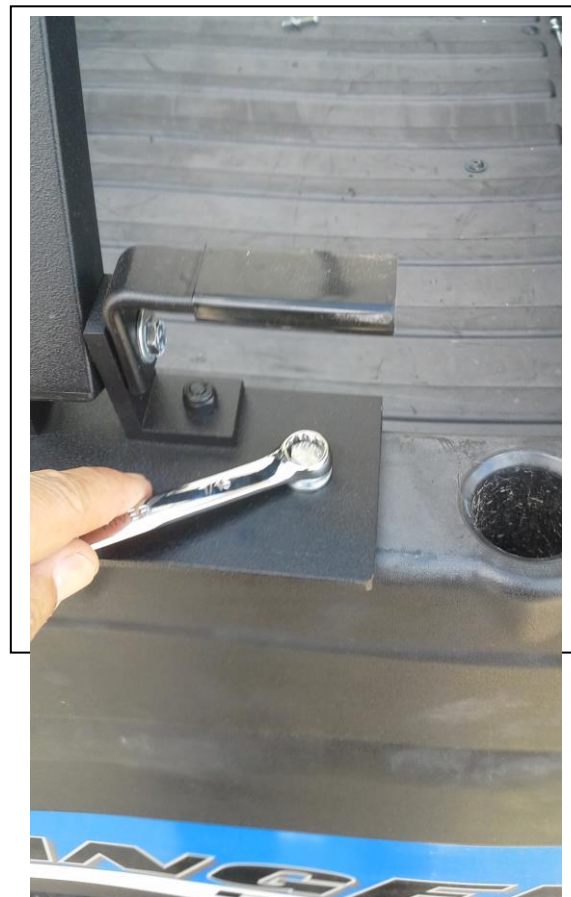


FIG. 3

**STEP 2:**

PLACE GUN RACK IN DESIRED LOCATION ON SIDE RAILS OF UTV'S CARGO BED. DRILL HOLES IN DESIRED LOCATION. **\*\*NOTE\*\*** IF USING 1/4" LAG SCREWS, DRILL HOLES USING 3/16" DRILL BIT. IF USING 1/4" BOLTS, WASHERS AND LOCKNUTS, DRILL HOLES USING A 5/16" DRILL BIT. **FIG. 3**


**STEP 3:**

ATTACH BASE PLATES TO SIDE RAILS USING EITHER 4- 1/4" LAG SCREWS AND 4 FLAT WASHERS OR 4- 1/4" X 1 1/4" BOLTS, 8- FLAT WASHERS, AND 4- 1/4" LOCKNUTS. TIGHTEN SECURELY. **FIG. 4**



**STEP 4:**

ADJUST ANGLES OF GUN SUPPORTS UNTIL HORIZONTAL SUPPORT BRACES ARE LEVEL. TIGHTEN ALL HARDWARE COMPLETELY. **FIG. 5**

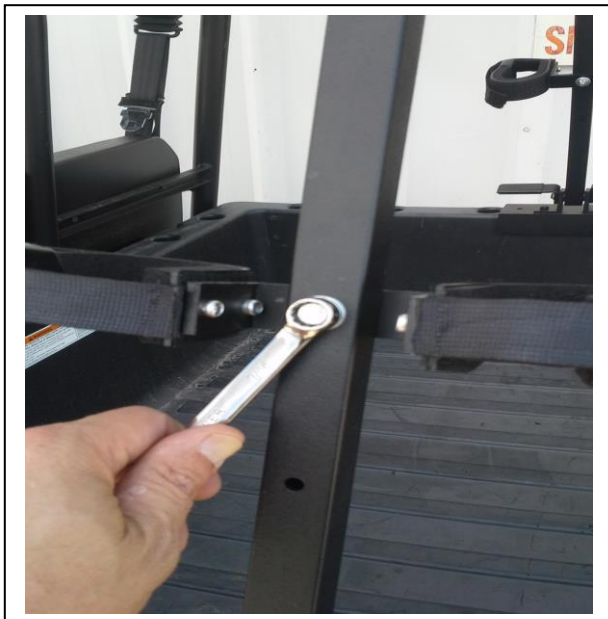

**STEP 5:**

ATTACH GUN CLIPS TO GUN RACK SUPPORTS USING 4- 1/4" X 1 3/4" BOLTS, 4- FLAT WASHERS, AND 4- 1/4" LOCKNUTS. TIGHTEN SECURELY. **FIG. 6**

**FIG. 6**

For more information about this or other products, contact us at:  
Great Day, Inc.

604 Kimbrough Dr. \* Tallulah, LA 71282 \* (866) 649-1918 \*

[www.greatdayinc.com](http://www.greatdayinc.com)

**\*\*  WARNING \*\***

1. \*NEVER PLACE A LOADED GUN(S) INTO “QUICK DRAW” GUN RACK.
2. \*NEVER HAVE AMMUNITION READILY AVAILABLE OR ACCESSIBLE TO CHILDREN OR OTHER PASSENGERS.
3. \*NEVER ALLOW CHILDREN TO INSTALL OR REMOVE GUN(S) FROM “QUICK DRAW” GUN RACK WITHOUT ADULT SUPERVISION.
4. \*NEVER USE “QUICK DRAW” GUN RACK OR FIREARMS IN ANY MANNER THAT IS IN VIOLATION OF APPLICABLE STATE OR FEDERAL LAWS.
5. \*DO NOT MOUNT “QUICK DRAW” GUN RACK INTO VEHICLE WHERE IT MAY IMPAIR DRIVER’S VISION.
6. \*DO NOT INSTALL “QUICK DRAW” GUN RACK IN VEHICLE WHERE IT COULD CAUSE AIRBAG INTERFERENCE.
7. \*MAKE SURE THE MUZZLE(S) OF THE GUN(S) IS POINTED UP AND AWAY FROM ANY VEHICLE OCCUPANTS.
8. \*DO NOT MOUNT THE “QUICK DRAW” GUN RACK INTO VEHICLE WHERE IT WILL INTERFERE IN ANY WAY WITH THE OPERATION OF THE VEHICLE. I.E. STEERING WHEEL, BRAKE PEDAL, OR GAS PEDAL.
9. \*NEVER USE “QUICK DRAW” GUN RACK TO CARRY ANYTHING OTHER THAN AN UNLOADED GUN(S). I.E. AXES, KAISER BLADES, SHOVELS.....
10. \*MAKE SURE GUN(S) ARE PROPERLY SECURED INTO CRADLES WITH VELCRO STRAPS BEFORE OPERATING VEHICLE.
11. \*NEVER TRY TO INSTALL OR REMOVE GUN(S) FROM THE “QUICK DRAW” GUN RACK WHILE OPERATING THE VEHICLE OR WHILE THE VEHICLE IS MOVING.

**\*\*  WARNING \*\***

**PLEASE READ AND FOLLOW ALL INSTRUCTIONS AND WARNINGS INCLUDED WITH THIS PRODUCT.**