


ASSEMBLY INTRUCTION


ITEM#: L-BB028PCO

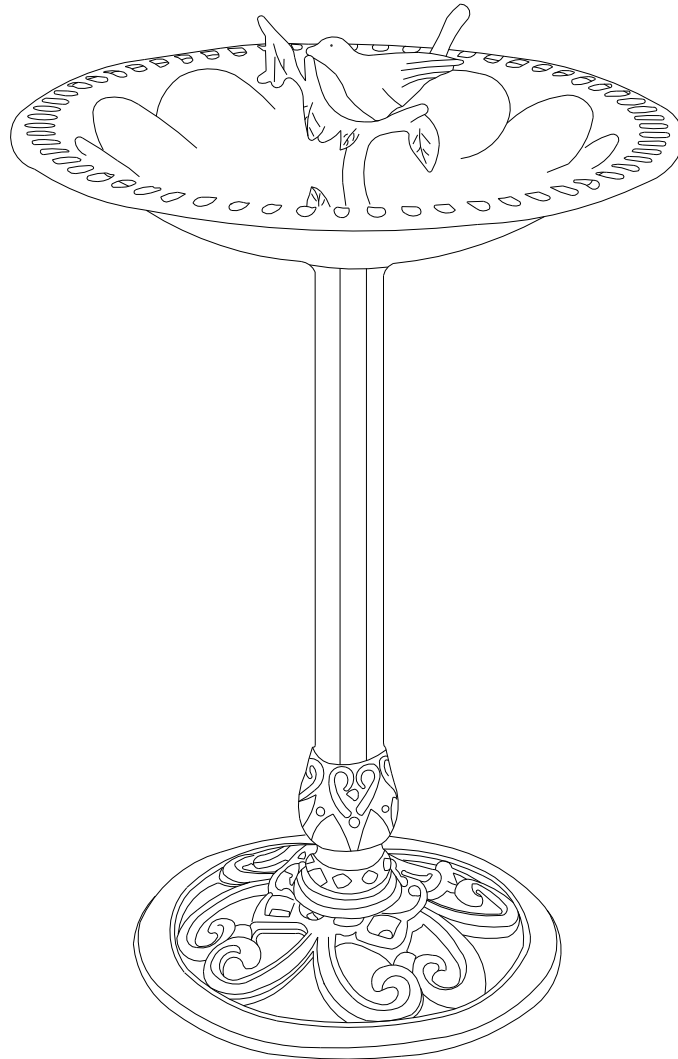

IMPORTANT:

For technical assistance on assembly or replacement parts, you can call us toll-free at 1 (866) 578-6569 from 8 AM. EST to 8 PM PST. You may email to customer.care@sunjoygroup.com or visit www.sunjoyonline.com to place your order or fax your parts replacement order form (which included in the packaging) together with your purchase receipt to 1 (740) 283-3549 for assistance.

PARTS LIST		
PART#	DESCRIPTION	QTY
A	Base BB0028XXX01	1
B	Pedestal BB0028XXX02	1
C	Bowl BB0028XXX03	1
D	Bird BB0028XXX04	1
E	Branch BB0028XXX05	1
F	Stud (M6×30) IM06030C	3
G	Flat Washer (M6) UD06C	3
H	Nut (M6) LD06C	3
I	Stud (M8×30) IM08030C	3
J	Flat Washer (M8) UD08C	3
K	Nut (M8) LD08C	3
L	Screw (M5×16) SM05016C	1
M	Stud (M6×20) IM06020C	1

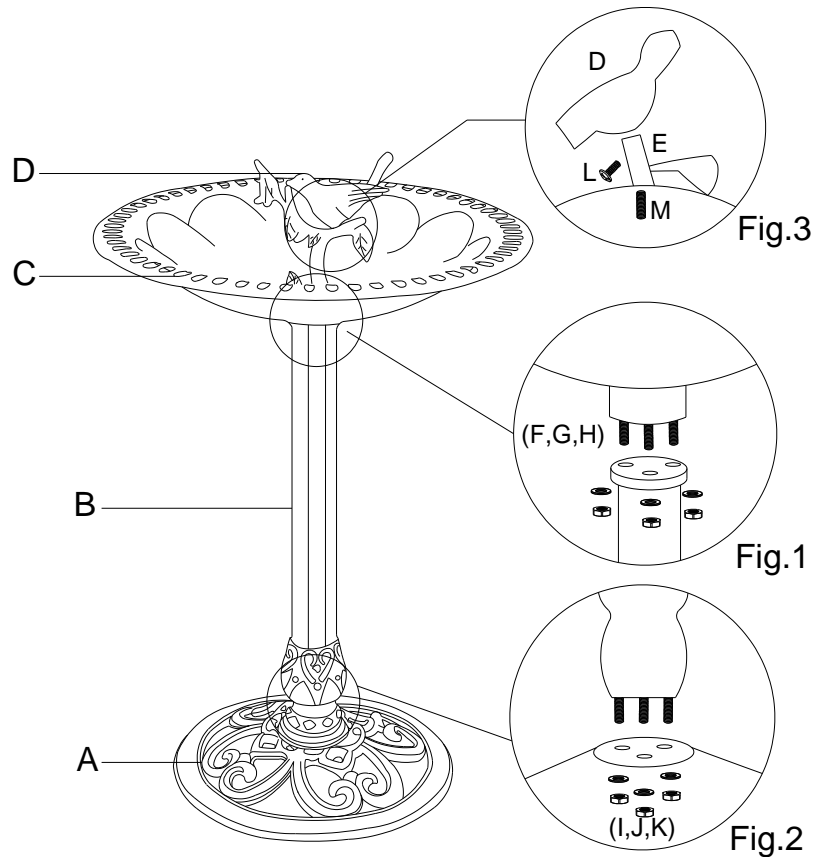

ASSEMBLY STEPS

1. Place the bowl (C) upside down on a soft and clean surface.
2. Attach the pedestal (B) to the bowl (C) using the studs M6x30 (F), flat washers (G) and nuts (H). Tighten the studs and nuts. (Don't over tighten) (Fig.1).
3. Attach the pedestal (B) to the base (A) using the studs M 8x30 (I), flat washers (J) and nuts (K). Tighten the studs and nuts. (Don't over tighten) (Fig.2).
4. Stand the Birdbath on its base.
5. Attach the bird (D) to the branch (E) with the screw (L) (Fig.3).
6. Attach the branch to the threaded hole in the centre of the bowl (C) using the stud M6x20(M) (Fig.3).
7. Tighten all the nuts and screws.

IMPORTANT

DO NOT over tighten any of the studs or nuts as this may **DAMAGE** the threads. Tighten each stud and nut until firm. **ENSURE** that no studs are **CROSS THREADED** before tightening.