

## SETTING UP YOUR MEDIUM OVEREZ WIRE CHICKEN COOP PANELS

You will need a drill to install these panels

You will notice that each panel is about a half inch less in height than the chicken coop legs. This is to allow for easy installation should there be any obstacles or uneven ground. You may want to fill in the spaces between the panels and the ground with dirt or gravel.

### STEP 1:



Install the front and back panel first. The panel with the excess wire belongs in the front, underneath the nesting box. Place the panels against the chicken coop legs/braces on the outside. (Make sure to divide them between the 2 legs and they should be even on both sides). Then fasten the panels into the chicken coop with pre-started screws.

### STEP 2:



Install the man door gable panel.


Repeat step 1, except this panel will be even with the outside of the front and back panel, against the legs.

### STEP 3:



Install the short chicken coop door gable panel. Install this panel even with the back panel. Insert the 2 pre-started screws into the chicken coop legs. Double the excess wire into an L shape. This is to tie into the chicken run.

### STEP 4:

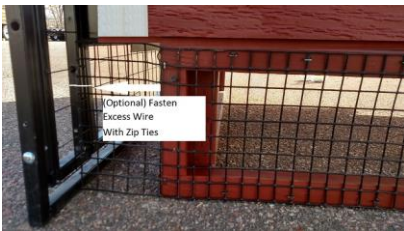

(Optional)

If you attach a chicken run to the chicken coop, remove the bottom panel of the chicken run to open it to the underside of the chicken coop. After chicken run is placed, wire tie the excess wire to the chicken run.

*for more information about  
all our products visit:*

[www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)

