


Steps for Installing the Cage-1 Guard on the Model H-4815 Deicer

1. Turn the deicer upside down and lay on a flat surface. 2. Attach the guard around the heating element as shown in the picture below. 3. Using a pair of pliers, carefully bend back the top two “L” shaped metal tabs slightly past the heating element so it stays in place. 4. Route the supply cord through the opening between the top and bottom edges of the guard. 5. Place deicer in stock tank with domed lid of the deicer facing up.

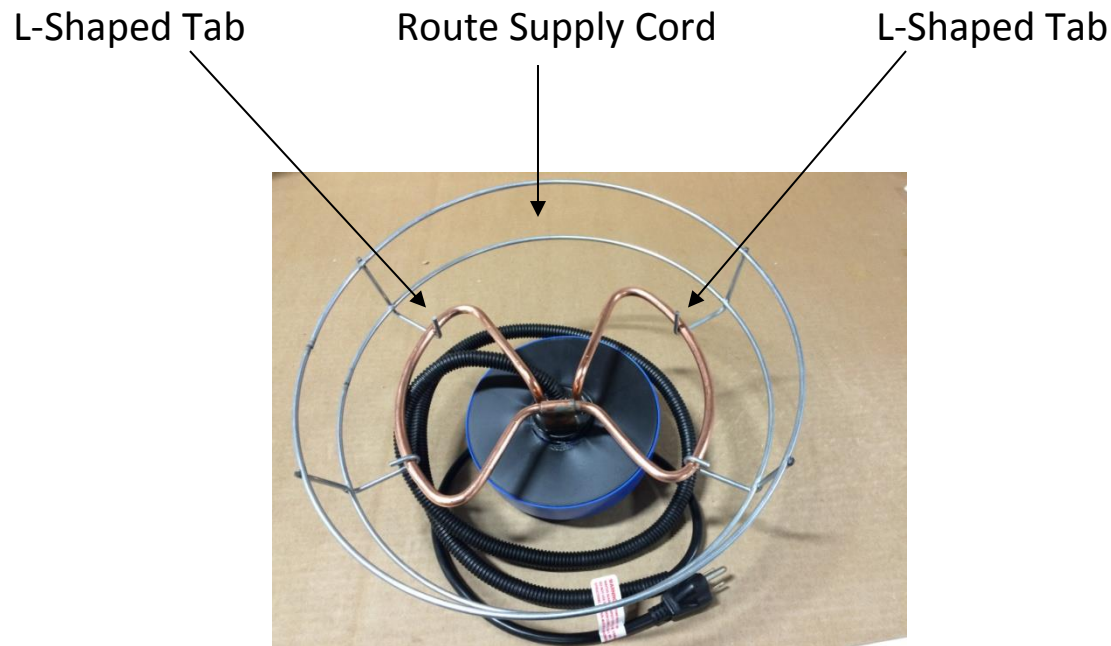

NOTE: This guard is only to be used on Farm Innovators Model H-4815 Deicer