



UBSAFE MANUAL GHT-

(record your personal 3-8 digit security code)

(Serial number)

COMPLETE & SUBMIT REGISTRATION CARD TO VERIFY OWNERSHIP

KEEP THIS MANUAL AND SALES RECEIPT FOR FUTURE REFERENCE

If you experience a problem or have questions, visit <http://www.buffalotools.com> or call Customer Service at **1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time**. A copy of the sales receipt is required.

Install (4) 1.5V battery, located in the front protective Styrofoam (See BATTERY INSTALLATION)

To open an electronic lock the first time, press the following numbers/symbols on the electronic keypad
User code: Factory set **1. 2. 3. 4. B** Secondary User code: Factory set **1. 2. 3. 4. 5. 6. B**
(These numbers are preset. You should change the entry code as soon as possible after opening the safe to insure proper security.)

After you have entered the factory code, you will need to **turn the handle counter clockwise to open the door**. You will have 5 seconds to turn the handle before the locking mechanism is reactivated. When the valid code entered, the lock will beep twice and the green LED turns on. When an invalid code entered three times, the lock will have long beep-beep, the yellow LED turns on and the safe is locked for 20 seconds. Wrong entry for 3 more times will lock the safe for 5 minutes.

ENTERING YOUR SECURITY CODE

CHANGING USER CODE #1 ALWAYS PERFORM THE OPERATION WITH THE DOOR OPEN

- 1) Keep door open. Press the RED "reset" button, the yellow LED turns on.
- 2) Enter 3-8 digit code, then press "A". Two Beeps and yellow light turns off confirm success.
- 3) Test the lock operation several times BEFORE closing the door.

CHANGING USER CODE #2 ALWAYS PERFORM THE OPERATION WITH THE DOOR OPEN

- 1) Keep door open. Press "0 0" and yellow light flashes twice.
- 2) Press the RED "reset" button, the yellow LED turns on.
- 3) Enter 3-8 digit code, then press "B". Two Beeps and yellow light turns off confirm success.

DO NOT SHUT THE DOOR UNTIL YOU HAVE CONFIRMED THAT THE NEW SECURITY CODE HAS BEEN ENTERED CORRECTLY.

***WRONG TRY PENALTY** --- Entry of three (3) consecutive invalid codes starts a 20 second lock out. (During lock out, the key pad will not respond to any operation.) If entry of three more consecutive invalid codes again, the key pad will not respond to any operation 5 minute.

If the code fails, follow steps 1 and 2 again. If the code works successfully, record your combination number on the front of this form or somewhere in your records, then you should lock the safe.

SPECIFICATIONS

Size: 7"(H) x 48"(W) x 28"(D) / 3 Cubic Feet Of Storage / 2.0mm thick
No Fire Rating
2 x 1/2" Steel Bolts
100 Pound Max Weight Capacity
Includes (4) 1.5V AA batteries



(Batteries are installed here)

BATTERY INSTALLATION


This lock requires (4) 1.5V AA batteries. Under normal use, batteries will last about 1 year. When the battery is low and you press a button on the keypad, a red light will come on warning you that the battery is low.

To test the battery, enter your security code. If the batteries are low the red light will come on momentarily. To replace the battery, remove the cover by pressing the tab and turning the cover as shown in the illustration above. Replace the old battery and attach the cover back in place.

TROUBLE KEY/OVERRIDE KEY

A "Trouble Key or Override Key" has been included in the event that you have forgotten or lost your security code. Please record the number of your key in a safe location in the event the key needs to be replaced in the future. To open the safe using the trouble key, follow the steps:

1. Remove the cover by taking off the cover as shown in the illustration.
2. Insert the key in the key hole and turn clockwise 15-20 degrees (until stopped) in order to unlock the safe, then rotate the knob.
3. Keep the door open until you have entered a new security code. Before entering your new security code, turn the key back and remove the key and put the cover back in place.
4. Enter your new security code. (DO NOT STORE KEY IN SAFE)

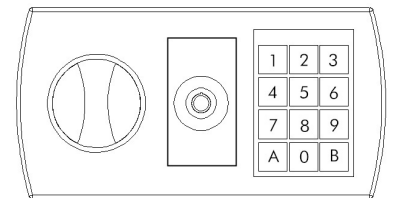

REPLACEMENT TROUBLE KEY/OVERRIDE KEY

Verification of ownership is required in order to receive replacement key. Contact Customer Service at **1-888-287-6981** to verify registration, then complete the Replacement Form, along with required Service Fees. The Replacement Form must include the Serial Number and Lock number, and be notarized by a non-family member.